


Prodigy[®]/CME PC/104 User's Guide



P M D

Performance Motion Devices, Inc.
80 Central Street
Boxborough, MA 01719



NOTICE

This document contains proprietary and confidential information of Performance Motion Devices, Inc., and is protected by federal copyright law. The contents of this document may not be disclosed to third parties, translated, copied, or duplicated in any form, in whole or in part, without the express written permission of PMD.

The information contained in this document is subject to change without notice. No part of this document may be reproduced or transmitted in any form, by any means, electronic or mechanical, for any purpose, without the express written permission of PMD.

Copyright 1998–2009 by Performance Motion Devices, Inc.

Prodigy, Magellan, ION, Magellan/ION, Pro-Motion, C-Motion, and VB-Motion are registered trademarks of Performance Motion Devices, Inc.



Warranty

PMD warrants performance of its products to the specifications applicable at the time of sale in accordance with PMD's standard warranty. Testing and other quality control techniques are utilized to the extent PMD deems necessary to support this warranty. Specific testing of all parameters of each device is not necessarily performed, except those mandated by government requirements.

Performance Motion Devices, Inc. (PMD) reserves the right to make changes to its products or to discontinue any product or service without notice, and advises customers to obtain the latest version of relevant information to verify, before placing orders, that information being relied on is current and complete. All products are sold subject to the terms and conditions of sale supplied at the time of order acknowledgement, including those pertaining to warranty, patent infringement, and limitation of liability.

Safety Notice

Certain applications using semiconductor products may involve potential risks of death, personal injury, or severe property or environmental damage. Products are not designed, authorized, or warranted to be suitable for use in life support devices or systems or other critical applications. Inclusion of PMD products in such applications is understood to be fully at the customer's risk.

In order to minimize risks associated with the customer's applications, adequate design and operating safeguards must be provided by the customer to minimize inherent procedural hazards.

Disclaimer

PMD assumes no liability for applications assistance or customer product design. PMD does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right of PMD covering or relating to any combination, machine, or process in which such products or services might be or are used. PMD's publication of information regarding any third party's products or services does not constitute PMD's approval, warranty or endorsement thereof.

Related Documents

Magellan[®] Motion Processor User's Guide

Complete description of the Magellan Motion Processor features and functions with detailed theory of its operation.

Magellan[®] Motion Processor Programmer's Command Reference

Descriptions of all Magellan Motion Processor commands, with coding syntax and examples, listed alphabetically for quick reference.

Prodigy[®]/CME Programmer's Reference

Descriptions of all Prodigy/CME product commands, with software architecture overview, command syntax, and examples.

C-Motion[®] Engine Development Tools Manual

Description of the C-Motion Engine, development environment, and software tools.

Pro-Motion[®] User's Guide

User's guide to Pro-Motion, the easy-to-use motion system development tool and performance optimizer. Pro-Motion is a sophisticated, easy-to-use program which allows all motion parameters to be set and/or viewed, and allows all features to be exercised.

Table of Contents

Chapter 1. Installation	9
1.1 Prodigy Family Overview	9
1.2 Prodigy/CME PC/104 Card Types	10
1.3 Software	10
1.4 Accessory Products	12
1.5 Installation Overview	13
1.6 Recommended Hardware	13
1.7 Software Installation	14
1.8 Preparing the Card for Installation	14
1.9 Connection Summary	17
1.10 Applying Power	20
1.11 First-Time System Verification	21
1.12 Developing User Application Code	28
Chapter 2. Operation	31
2.1 Card Function Summary	32
2.2 Magellan Motion Processor Functions	34
2.3 Magellan-Controlled Functions	36
2.4 C-Motion Engine Functions	41
2.5 Communications Functions	45
2.6 General Card Functions	50
2.7 Signal Processing and Hardware Functions	52
2.8 Software Libraries	54
Chapter 3. Accessing Card Resources	57
3.1 Resource Addressing	57
3.2 Accessing the Communications Ports	59
3.3 Accessing On-Card Resources	63
3.4 Accessing Magellan-Attached Devices	64
3.5 PRP Communication Formats	66
Chapter 4. Electrical Reference	69
4.1 User-Settable Components	69
4.2 Connectors	72
4.3 Connections Summary—Motor Amplifiers	80
4.4 Cables	82
4.5 Environmental and Electrical Ratings	85
4.6 Mechanical Dimensions	86
4.7 User I/O Memory Map	86
Chapter 5. Interconnect Module	89
5.1 IM-1000 Interconnect Module	89
5.2 IM-600 Interconnect Module	91
5.3 DC-1000 SSI Option Card	92
Index	99

This page intentionally left blank.

List of Figures

1-1	Prodigy/CME PC/104 Card Component Location, front view	15
1-2	Prodigy/CME PC/104 Card Component Location, back view	15
1-3	Switch settings	17
1-4	Serial Port Connection	19
1-5	Serial and Ethernet Connection	20
1-6	Two Ways to Locate the Code on the Prodigy/CME PC/104 Card	29
2-1	Prodigy/CME PC/104 Card Internal Block Diagram	32
2-2	On-card Dual-ported Memory	41
2-3	Overview of C-Motion Engine Architecture	42
3-1	Outgoing and Returning PRP header formats	58
3-2	Example Network Configuration	61
3-3	Example Prodigy/CME PC/104 Architecture with Ethernet Device Testers	62
3-4	Host Controller & On-card Resources	63
3-5	Host Controller & Magellan-attached Devices	65
3-6	PRP Message over Serial Format	66
4-1	Components and layout, front of card	69
4-2	Prodigy/CME PC/104 Card Component Location, back view	70
4-3	Switch Settings by Output Type	71
4-4	Sync I/O connector to three cards	77
4-5	Prodigy/CME mechanical dimensions	86
5-1	IM-1000 location of components	89
5-2	IM-600 location of components	91
5-3	DC-1000 location of components	94
5-4	DC-1000 mounted on Prodigy/CME	96

This page intentionally left blank.

1. Installation

In This Chapter

- ▶ Prodigy Family Overview
- ▶ Prodigy/CME PC/104 Card Types
- ▶ Software
- ▶ Accessory Products
- ▶ Installation Sequence
- ▶ Recommended Hardware
- ▶ Software Installation
- ▶ Preparing the Card for Installation
- ▶ Connection Summary
- ▶ Applying Power
- ▶ First-Time System Verification
- ▶ Developing User Application Code

1.1 Prodigy Family Overview

The Prodigy® Family of Motion Control Cards provide high-performance control of DC brush, brushless DC, microstepping, and step (pulse & direction) motors. They are available in three form factors; PCI bus, PC/104 bus, and Stand-Alone, and allow multiple forms of communication including PCI bus, PC/104 bus, serial, CANbus, and Ethernet. All Prodigy cards are based on PMD's Magellan® Motion Processors, which perform high speed motion control functions such as profile generation, servo loop closure, pulse & direction signal generation, and many other real-time functions. Certain versions of Prodigy cards include a C-Motion® Engine (CME), which allows the user to offload application code from the host onto the motion card.

The following product selector table summarizes the various members of the Prodigy motion card family and associated Users Guide documentation.

Prodigy P/N	Bus/Format	C-Motion Engine	User Guide
PR8258x20	PC/104	No	Prodigy-PC/104 User's Guide
PR8358x20	PC/104	Yes	Prodigy/CME PC/104 User's Guide
PR9258x20	PCI	No	Prodigy-PCI User's Guide
PR9358x20	PCI	Yes	Prodigy/CME PCI User's Guide
PR13x58x20	Stand-Alone	Yes	Prodigy/CME Stand-Alone User's Guide

1.2 Prodigy/CME PC/104 Card Types

This manual provides a complete User's Guide for the Prodigy/CME PC/104 cards. For documentation on other members of the Prodigy Family please consult the appropriate documentation.

Prodigy/CME PC/104 cards come in four different configurations depending on the number of axes supported on the card (from 1 to 4). The following table provides information on the specific card versions that are available. It shows the relationship between card part numbers, Magellan Motion Processor part numbers contained on the card, the number of axes supported, and the type of motors supported. In the motor type column, "all motor types" means DC brush, brushless DC, microstepping, and step (pulse & direction) motors.

Prodigy/CME PC/104		Number of	
Card P/N	Magellan P/N	Axes	Motor Type
PR8358120	MC58120	1	All motor types
PR8358220	MC58220	2	All motor types
PR8358320	MC58320	3	All motor types
PR8358420	MC58420	4	All motor types

1.2.1 Supported Motor Types

The Prodigy/CME PC/104 cards support four different motor types; DC Brush, Brushless DC, step motors with a microstepping output, and step motors with a pulse and direction output. Below is a summary of each of these four motor types

DC Brush: output is a single-phase motor command, either in PWM (pulse width modulated), or analog ($\pm 10V$) output format. The output is intended to control DC Brush motors, or brushless DC motors with an amplifier that performs commutation.

Brushless DC: output is multi-phase motor command signals, either in PWM (pulse width modulated), or analog ($\pm 10V$) output format, using Hall-based or sinusoidal commutation. The output is intended to interface with brushless DC amplifiers and motors.

Microstepping: output is multi-phase analog ($\pm 10V$) or PWM (pulse width modulation) waveforms. The output is intended to control 2- or 3-phase step motors using amplifiers which accept this command format.

Pulse & direction: output is standard pulse & direction signals intended to interface with amplifiers which accept this command format.

For information on motor output formats and other information, see the *Magellan Motion Processor User's Guide*.

1.3 Software

Four major software packages are provided with the Prodigy/CME PC/104 cards:

Pro-Motion[®], an interactive Windows-based exerciser & software development tool

C-Motion[®], a C-language library that allows you to create motion applications using the C programming language

C-Motion[®] Engine Development Tools, a set of development resources that allow you to create, download, and monitor programs loaded in the Prodigy/CME PC/104 card's C-Motion Engine

VB-Motion[®], a set of Active-X objects that lets you create motion applications using the BASIC Programming language

Here is more information on each of these software packages:

1.3.1 Pro-Motion

Pro-Motion is a sophisticated, easy-to-use exerciser program which allows all card parameters to be set and/or viewed, and allows all card features to be exercised. Pro-Motion features include:

- Motion oscilloscope graphically displays processor parameters in real-time
- Axis Wizard to automate axis setup and configuration
- Interactive DC brush and brushless DC tuning
- Project window for accessing motion resources and connections
- Ability to save and load current settings
- Distance and time units conversion
- Motor-specific parameter setup
- Axis shuttle performs continuous back and forth motion between two positions
- C-Motion Engine monitor/debug window
- C-Motion Engine user application code download
- Device window for configuring PMD-based card and digital drive products

Pro-Motion is described in the *Pro-Motion User's Guide*.

1.3.2 C-Motion

C-Motion provides a convenient set of callable routines comprising the code required for controlling the Magellan Motion Processor, whether running on a separate host computer such as a PC, or running on the Prodigy/CME card in the C-Motion Engine. C-Motion includes the following features:

- Magellan axis virtualization
- Ability to communicate to multiple PMD motion cards or modules
- Ability to communicate via PCI bus, PC/104 bus, serial, CANbus, or Ethernet
- Provided as source code, allowing easy compilation & porting onto various run-time environments including PC, microprocessor, embedded card, or C-Motion Engine
- Can be easily linked to any C/C++ application

C-Motion is described in the *Magellan Motion Processor Programmer's Command Reference*.

1.3.3 C-Motion Engine Development Tools

The C-Motion Engine Development Tools includes a source code editor, compiler, linker, and Pro-Motion-based code management & monitoring tools that allow the user to quickly and easily develop applications that will run on a device equipped with a C-Motion Engine. The C-Motion Engine Development Tools includes the following features:

- Complete toolset for creation of user-specific applications running on the motion card
- Open source compiler and C libraries
- Interactive Development Environment
- Supports PCI bus, PC/104 bus, RS232/RS485, CANbus, and Ethernet communications

The C-Motion Engine development tools are described in the *C-Motion Development Tools Manual*.

1.3.4 VB Motion

VB-Motion provides a complete set of methods and properties for developing applications in Visual Basic using a dynamically loaded library (DLL) containing PMD library software. The DLL may also be used from any language capable of calling C language DLL procedures, but no special software support is provided.

VB-Motion includes the following features:

- Magellan axis virtualization
- Ability to communicate to multiple PMD motion cards or Modules
- Ability to communicate via PCI bus, PC/104 bus, serial, CANbus, or Ethernet
- Provided as a single DLL and Visual Basic .NET source code for easy porting onto various PC environments

VB Motion is documented in the *Prodigy/CME Programmer's Reference*.

1.4 Accessory Products

The Prodigy/CME PC/104 cards can be enhanced with the addition of any or all of the hardware accessory products described in the following table.

Component Part Number	Description
PW-2001-KIT-01.R	Power supply & cable set. This is a US Domestic & International wall adapter power supply and associated cable that plugs in the Prodigy/CME PC/104 card and provides power through its Power Connector. If the card receives power through the PC/104 bus then this accessory is not necessary.
Cable-2003-01.R	50-pin ribbon cable. This 3 foot long cable connects the right and left motion connectors (GP Connector) to identical connectors on a receiving card such as the IM-1000 breakout interconnect card, and it connects the Option Connector to an identical connector on a receiving card such as the IM-600 breakout interconnect card.
Cable-4301-01.R	10-pin serial header cable. This 1 foot cable plugs into the card's 10-pin serial header connector and provides a single female DB-9 output with dual serial signals. It can be connected to Cable-4355-01.R to provide dual DB-9 serial outputs.
Cable-4355-01.R	Dual serial cable. This 5 foot long "Y" cable connects to the DB-9 output of Cable-4301-01.R and provides two female DB-9 connectors suitable for connection to a PC serial port or USB-to-serial converter.
Cable-4701-01.R	CANbus header to RJ45 connector. This 1 foot cable plugs into the card's 8-pin CANbus header connector and provides an RJ45 output.
Cable-RJ45-02-R	CANbus and Ethernet cable. This 2 meter cable connects to the card's CANbus or Ethernet outputs. It has RJ45 connectors on both ends.
TRM-RJ45-02.R	CANbus terminator. This is an RJ45 terminator that may be used to electrically terminate a CANbus network string.
Adapt-RJ45T-01.R	CANbus splitter. This Y configuration splitter duplicates the CANbus RJ45 connections into two identical RJ45 connectors, making it easy to connect the card in a daisy chain configuration.
Cable-4505-01.R	Ethernet header to RJ45 cable. This 5 foot cable plugs into the card's 10-pin Ethernet header connector and provides an RJ45 output.
Cable-4371-01.R	20-pin ribbon cable. This 3 foot long cable connects the Pulse & Direction connector to an identical connector on a receiving card such as on the IM-600 breakout interconnect card.
DC-1000	Parallel encoder input adaptor. This daughter card module allows parallel-word and other encoders which use the SSI interface format to be directly connected.

Component Part Number	Description
IM-1000	Breakout interconnect module provides convenient jack-screw type terminators for the left and right 50-pin GP Connectors. Used with Cable-2003-01.R.
IM-600	Breakout interconnect module provides convenient jack-screw type terminators for the 50-pin Option Connector. Used with Cable-2003-01.R.
Adapt-USB232-01.R	This adapter provides USB to serial conversion. It is useful for connecting to the Prodigy/CME's DB-9 serial port from a USB port.

For information on ordering these accessory products, please contact your PMD representative.

1.5 Installation Overview

- 1 Before using the card, the software must be installed. See Section 1.7, “Software Installation,” on page 14 for instructions on installing the software.
- 2 For a normal installation of a Prodigy/CME PC/104 card, you will need to configure the card for the specific motor hardware to which it will be connected. See Section 1.8, “Preparing the Card for Installation,” on page 14 for a description of configuring the cards.
- 3 Next, connect the system's motors, encoders, amplifiers, and sensors to operate the motion hardware. See Section 1.9, “Connection Summary,” on page 17 for a description of the available connections and options for the Prodigy/CME PC/104 card.
- 4 See Section 5.3, “DC-1000 SSI Option Card,” on page 92 if installing the DC-1000.
- 5 Connect the Prodigy/CME PC/104 card to the host PC via an Ethernet cable and a Serial cable. During first time setup Ethernet communications will be used, but during development or standard operation of the card you can use any of the available communication options; serial, CANbus, or Ethernet. See Section 1.9, “Connection Summary,” on page 17 for a description of the communications connections and options.
- 6 Once this hardware configuration is complete, the final step to finish the installation is to perform a functional test of the finished system. See Section 1.11, “First-Time System Verification,” on page 21 for a description of this procedure.

Once these steps have been accomplished, the installation is complete, and the card is ready for operation.

1.6 Recommended Hardware

To install a Prodigy/CME PC/104 card, the following hardware is recommended.

- Intel (or compatible) processor, Pentium or better, 300 MB of available disk space, 256MB of available RAM, and a CD-ROM drive. The supported PC operating systems are Windows XP/Vista.
- One to four pulse and direction, PWM, or analog-input amplifiers. The type of amplifier depends on the type of motor being used.
- One to four step, DC brush, or brushless DC motors.

These motors may or may not provide encoder position feedback signals, depending on the type of motor being used. Encoder feedback is a requirement for DC brush and brushless DC motors. For step motors, it's an option.

- Motion Connectors as required to connect the card to the amplifiers and the motors you have selected.

Two GP Connector cable (PMD p/n Cable-2003-01.R, 50-pin ribbon cable) will be required, and for brushless DC motors as well as step motors driven in microstepping mode, a third Cable-2003-01.R will be required connected to the card's Option Connector. See Section 4.3, "Connections Summary—Motor Amplifiers," on page 80 for more information on setting up these connections.

1.7 Software Installation

Two CD-ROMs comprise the software distribution for Prodigy/CME cards. All software applications are designed to work with Windows XP/Vista.

- Pro-Motion: The Pro-Motion disk is located in its own Pro-Motion box, and contains the software associated with the Pro-Motion Optimized Motion System Development software.
- PMD Prodigy/CME SDK: The PMD Prodigy/CME SDK disk is located separately, and contains the C-Motion Engine development tools, the C-Motion source libraries, and VB-Motion Libraries.

To install the software:

- 1 Insert the Pro-Motion disk into the CD-ROM drive of your computer.
 - If autorun is enabled, the installation process will begin when the CD-ROM is inserted.
 - If autorun is not enabled, go to the next step.
- 2 On the Start menu, click Run.
- 3 In the Open text box, type D:\setup.exe.
where D: is the drive letter of your computer's CD-ROM drive.
- 4 Follow the on-screen prompts to complete the installation process.

Once installation of Pro-Motion is complete, insert the PMD Prodigy/CME SDK disk, and follow the same procedure above as for Pro-Motion installation.

Upon completion of the installation process for Pro-Motion and PMD Prodigy/CME SDK, the following components will be installed:

- Pro-Motion – an application for communicating to, and exercising the installed card. Refer to the *Pro-Motion User's Guide* for operating instructions.
- C-Motion – source code which may be used for developing motion applications in C/C++ based on the Magellan Motion Processor.
- VB-Motion – Active-X DLLs and example source code which may be used for developing motion applications in Visual Basic based on the Magellan Motion Processor.
- PDF versions of the *Prodigy/CME PC/104 User's Guide*, *Prodigy/CME Programmer's Reference*, *C-Motion Development Tools Manual*, *Magellan Motion Processor Programmer's Command Reference*, and *Magellan Motion Processor User's Guide*. The Adobe Acrobat Reader is required for viewing these files. If the Adobe Acrobat Reader is not installed on your computer, it may be freely downloaded from <http://www.adobe.com>.

1.8 Preparing the Card for Installation

Figure 1-1 on page 15 shows the location of the resistor packs RS1, RS2, RS3, along with other components such as connectors. The front or top side of the card is shown, with the main- Prodigy/CME PC/104 connectors at the

bottom. These items are listed in the table below. Connectors and user-adjustable components are located both on the front and the back side of the card, so be sure to double check the orientation of the diagram to locate components.

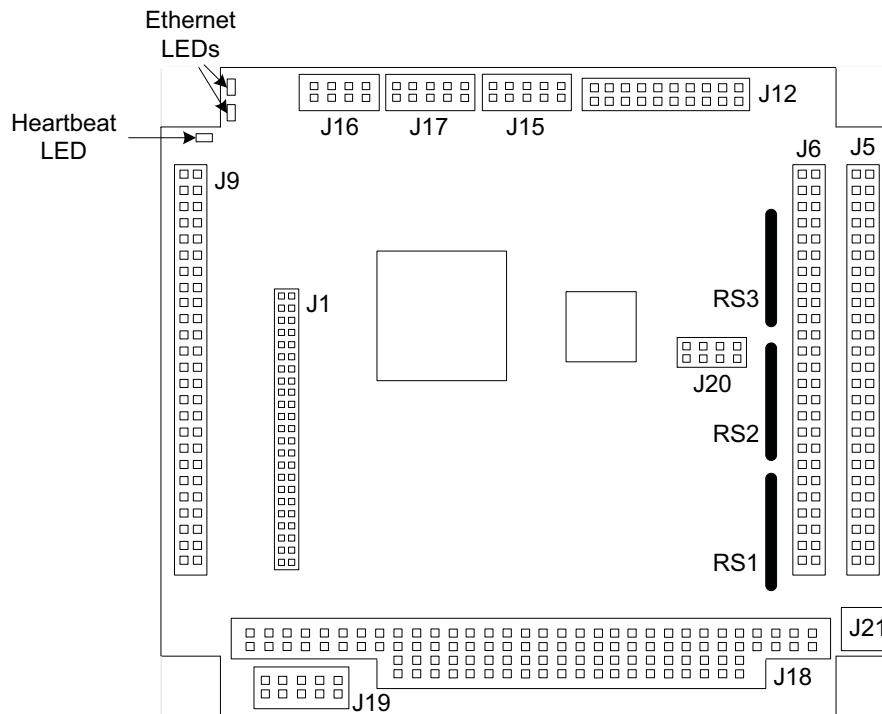


Figure 1-1:
Prodigy/CME
PC/104 Card
Component
Location, front
view

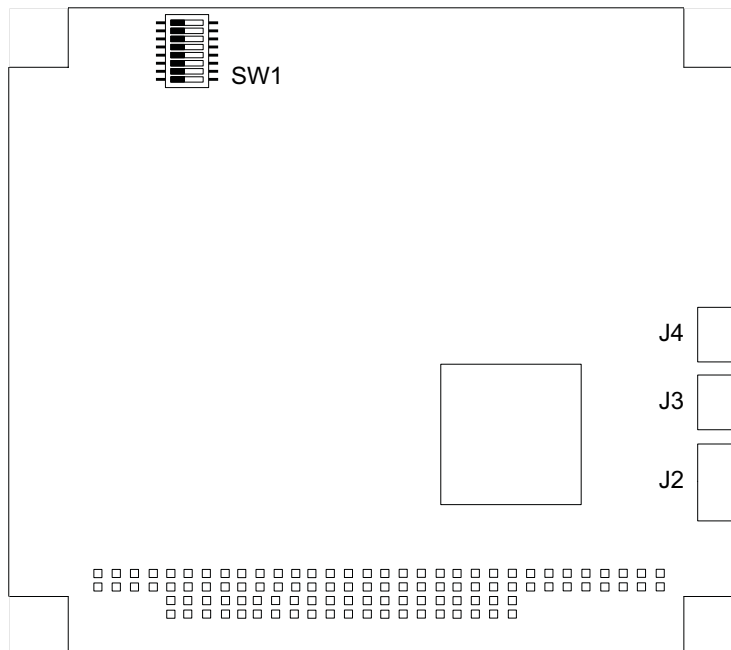


Figure 1-2:
Prodigy/CME
PC/104 Card
Component
Location, back
view

Card Components

The following table describes the components on the card (as shown in Figure 1-1) and their functionality.

Label	Located	Description
RS1 - RS3	front side	Resistor packs

Label	Located	Description
SW1	back side	Motor output configuration
J1	front side	Extension Connector
J2	back side	Reserved
J3, J4	back side	Synch Connectors
J5, J6	front side	Right and Left Connectors
J9	front side	Option Connector
J12	front side	Pulse & Direction Connector
J15	front side	Ethernet Connector
J16	front side	CANbus Connector
J17	front side	Serial Connector
J19	front side	Reserved
J20	front side	Reserved
J21	front side	Power Connector

1.8.1 Resistor Pack Settings

The Prodigy/CME PC/104 card has minimal user-adjustable settings. Most settings are software configurable. To prepare the card for installation, the user-specified resistor pack options should be checked, as described in the following table.

Item	Setting	Description
Resistor packs RS1, RS2, RS3	Installed; this is the default setting of resistor packs RS1 - RS3.	If differential connections are being used, leave these resistor packs installed.
	Removed	If single-ended encoder connections are being used, remove the resistor packs.

1.8.2 Motor Output Configuration

There are two configurations for setting up the motor output pins on the Prodigy/CME PC/104 GP Connector: These motor output pins can be set up for use with DC Brush, Brushless DC, and microstepping motors, or the motor output pins can be set for pulse & direction motors. The default setting is for all motors to be set for DC Brush, Brushless DC, and microstepping.

The switch bank SW1 controls these settings, which apply on a per-axis basis. The following table describes the correct switch setting for each output type. Figure 1-3 on page 17 provides a diagram of SW1, and Figure 1-1 on page 15 shows the location of SW-1 on the Prodigy/CME PC/104 card.

Axis	Set for DC Brush, Brushless DC, or Microstepping		Set for Pulse & Direction
	1	1 on, 5 off	
2	2 on, 6 off	2 off, 6 on	
3	3 on, 7 off	3 off, 7 on	
4	4 on, 8 off	4 off, 8 on	



Power to the card should be turned off when changing the state of the SW1 switches, and care should be taken not to set both switch pairs on (for example both 1 and 5 on, or both 2 and 6 on etc.) or damage may occur to the board.

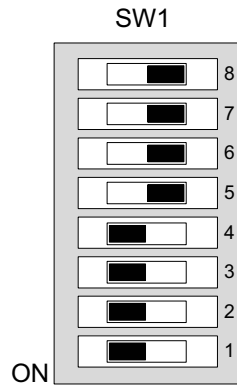


Figure 1-3:
Switch settings

1.9 Connection Summary

1.9.1 Motor Connections

The following sections summarize the recommended connections for various motor types. DC brush, brushless DC, microstepping, and step (pulse & direction) motors may be connected to the same card, so motor type is allowed to be different on a per-axis basis.

DC Brush Motors

The following table summarizes connections to the Prodigy/CME PC/104 cards when DC brush motors are used. Between one and four axes may be connected, depending on the specific Prodigy card and application requirements. All connections are made through GP Connector, J6 locatable on the card using Figure 1-1 on page 15.

See Chapter 4, *Electrical Reference*, on page 69 for a detailed list of connections.

Signal Category	Signal Description
Encoder input signals: (per axis)	A quadrature Channel input B quadrature channel input Index pulse channel input
Amplifier output signals: (per axis, if PWM sign, magnitude used)	PWM direction PWM magnitude
Amplifier output signals: (per axis, if PWM 50/50 used)	PWM magnitude
Amplifier output signals: (per axis, if DAC output used)	DAC out
Other control signals: (optional per axis)	Home signal input Positive limit switch input Negative limit switch input AxisIn input AxisOut output
Miscellaneous signals:	Digital GND, AmpEnable,+5V (for encoder power)

Brushless DC Motors

The following table summarizes connections to the Prodigy/CME PC/104 cards when brushless DC motors are used. Between one and four axes may be connected, depending on the specific Prodigy card and application requirements. Connections are made through GP Connector, J6 and Option Connector, J5. Both of these connectors are locatable on the card using Figure 1-1 on page 15.

See Chapter 4, *Electrical Reference*, on page 69 for a detailed list of connections. See Section 4.2.5, “Option Connector,” on page 76 for detailed information regarding the Option Connector.

Signal Category	Signal Description
Encoder input signals: (per axis)	A quadrature channel input B quadrature channel input Index pulse channel input
Amplifier output signals: (per axis, if PWM 50/50 used)	PWM magnitude (phase A) PWM magnitude (phase B) PWM magnitude (phase C)
Amplifier output signals: (per axis, if DAC output used)	DAC out (phase A) DAC out (phase B)
Hall inputs: (Option Con)	Hall (phase A) Hall (phase B) Hall (phase C)
Other control signals: (optional per axis)	Home signal channel input Positive limit switch input Negative limit switch input AxisIn input AxisOut output
Miscellaneous signals:	Digital GND, AmpEnable, +5V (for encoder power)

Step Motors

The following table summarizes connections to the Prodigy/CME PC/104 cards when pulse & direction interface step motors are used. Between one and four axes may be connected, depending on the specific Prodigy card and application requirements. Unless differential pulse & direction output is desired, all connections are made through connector GP Connector, J6. This connector is locatable on the card using Figure 1-1 on page 15.

See Chapter 4, *Electrical Reference*, on page 69 for a detailed list of connections.

Signal Category	Signal Description
Encoder input signals: (optional per axis)	A quadrature channel input B quadrature channel input Index pulse channel input
Amplifier output signals:	Pulse Direction
Other control signals: (optional per axis)	AtRest signal output Home signal channel input Positive limit switch input Negative limit switch input AxisIn input AxisOut output
Miscellaneous signals:	Digital GND, AmpEnable, +5V (for encoder power)

Microstepping Motors

The following table summarizes connections to the Prodigy/CME PC/104 cards when microstepping-interface step motors are used. Between one and four axes may be connected, depending on the specific Prodigy card and application requirements. All connections are made through the GP Connector, J6, and Option Connector, J5. Both of these connectors are locatable on the card using Figure 1-1 on page 15.

See Chapter 4, *Electrical Reference*, on page 69 for a detailed list of connections.

Signal Category	Signal Description
Encoder input signals: (optional per axis)	A quadrature channel input B quadrature channel input Index pulse channel input
Amplifier output signals: (per axis, if PWM sign, magnitude used)	PWM magnitude (phase A) PWM magnitude (phase B) PWM direction (phase A) PWM direction (phase B)
Amplifier output signals: (per axis, if PWM 50/50 used)	PWM magnitude (phase A) PWM magnitude (phase B)
Amplifier output signals: (per axis, if DAC output used)	DAC out (phase A) DAC out (phase B)
Other control signals: (optional per axis)	Home signal channel input Positive limit switch input Negative limit switch input AxisIn input AxisOut output
Miscellaneous signals:	Digital GND, AmpEnable, +5V (for encoder power)

1.9.2 Communication Connections

While the Prodigy/CME PC/104 card can communicate to a host controller using Ethernet, CANbus, and one of two serial modes (RS-232 and RS-485), in this first-time installation we will set up the card for Ethernet communications. To set up the card for operation in other communication modes, see Chapter 2, *Operation*, on page 31 and the *Pro-Motion User's Guide*.

Because the Ethernet address for the card will need to be configured, we will first connect the RS-232 serial port, and then the Ethernet port on the card. During initialization, we will then use Pro-Motion to change the IP address that the card expects Ethernet communications on.

If the standard PMD accessory cables are used, Cable-4301-01.R should be plugged into the Prodigy/CME PC/104 card 10-pin J17 serial connector, and the base of the “Y” of the dual serial cable (PMD p/n Cable-4355-01.R) should be connected to Cable-4301-01.R. The opposite end of the serial cable marked “Port1” should be connected to your computer's 9 pin serial port. If your computer does not have a dedicated serial port, a standard USB to serial converter should be used. Figure 1-4 shows a typical serial port connection.


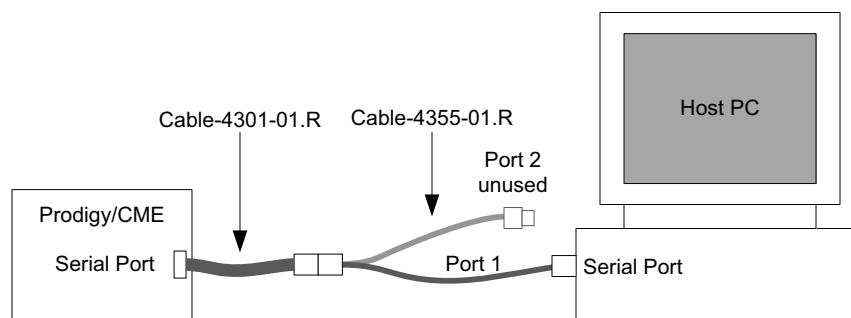


Figure 1-4:
Serial Port
Connection

The Ethernet connection will not be made until serial communications are established. See Section 1.11.2, “Changing the Ethernet Parameters of the Prodigy/CME PC/104 Card,” on page 24 for detailed instructions on when to physically make the Ethernet connection. When Ethernet is ready to connect, use PMD’s Cable-4505-01.R, and plug one end of the connector into J15, and the other end into Cable-RJ45-02.R. Then, plug the other end of this cable into your computer’s Ethernet port. Figure 1-5 on page 20 shows the complete serial and Ethernet connection setup.

**Figure 1-5:
Serial and
Ethernet
Connection**

The communication connections are locatable on the card using Figure 1-1 on page 15.

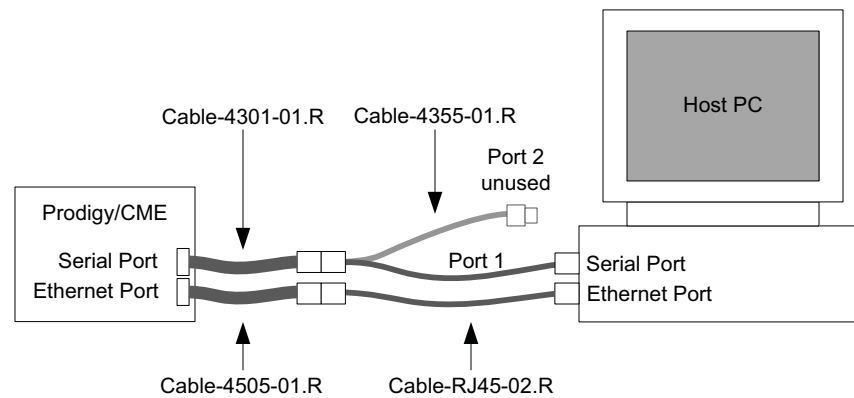

1.9.3 Power Connections

There are a few options for providing power to the Prodigy/CME PC/104 card. For first time system verification, however, the convenient AC wall adapter power supply and cable set contained in PMD accessory p/n PW-2001-KIT-01.R will be used. Plug the AC wall adapter into any AC outlet, and connect the power plug to J21 on the card. This connector is locatable on the card using Figure 1-1 on page 15. Outside of the US & Canada, one of the AC adapter plugs included with the power supply will be needed depending on the plug type used with your AC service.

In addition to the power supply and connections for the Prodigy/CME PC/104 card, the motor amplifiers also need to have power provided to them. Consult the technical manual for the amplifiers you are using for more information. While it is possible for the motor power to be the same as the card power (which is 5V), it is much more likely that the power provided to the amplifiers will be at a higher voltage, and therefore be provided by a different power supply.

1.10 Applying Power

Once you have made your motion hardware, communication, and power connections, hardware installation is complete and the card is ready for operation. When power is applied, the card will be in a reset condition. In this condition, no motor output will be applied. Therefore, the motors should remain stationary. If the motors move or jump, power down the card and check the amplifier and encoder connections. If anomalous behavior is still observed, call PMD for assistance. Complete PMD contact information is listed on the last page of this manual.



When using a Prodigy/CME PC/104 card there are some combinations of motor output signal and amplifier type where undesired motion may occur when the card is powered up. In particular, if the connected amplifier is a PWM 50/50 amplifier, the motor will receive 100% power because the Prodigy/CME PC/104 card defaults to a different PWM signal encoding, PWM sign/magnitude, on reset. To avoid this situation, use AmpEnable as an enable/disable signal for the amplifier, and set the motor type for each axis before enabling the amplifier. See Chapter 2, *Operation*, on page 31 for more information on this function.

To minimize the risk of unintended machine motion during powerup, care should be taken to control the overall powerup sequence of the Prodigy/CME card and connected system motion amplifiers. The recommended sequence is to first powerup the Prodigy/CME card, followed by powerup of the motion amplifiers. The time delay to ensure stable operation of the control electronics before powering up the amplifiers varies depending on the system's power supplies and configuration, but a typical safe figure is 500 mSec - 1,000 mSec.



1.11 First-Time System Verification

The first time system verification procedure summarized below has two overall goals. The first is to connect the Prodigy card with the PC that is being used so that they are communicating properly, and the second is to initialize each axis of the system and bring it under stable control capable of making trajectory moves. While there are many additional capabilities that Pro-Motion and the Prodigy motion cards provide, these steps will create a foundation for further, successful exploration and development.

Here is a summary of the steps that will be used during first time system verification. Each of these steps will be described below in a separate manual section.

- 1 Initiate Pro-Motion and establish communication between the PC and the card using the serial communications link.
- 2 Use the serial communications link to change the Ethernet communications parameters of the Prodigy/CME PC/104 card.
- 3 Establish communication between the PC and the card using the Ethernet communications link.
- 4 Disconnect serial communications.
- 5 Run Pro-Motion's Axis wizard for each axis of your system to initialize parameters such as encoder direction and safe servo parameters (if using a servo motor).
- 6 Execute a simple trajectory profile on each axis demonstrating that it is operating correctly and under stable control.


During this first time system setup you may find it useful to refer to other PMD manuals including the *Pro-Motion User's Guide* for complete information on the Pro-Motion application. You may also want to refer to the *Magellan Motion Processor User's Guide* to familiarize yourself with operation of the Magellan Motion Processor, which lies at the heart of all Prodigy Motion cards.

1.11.1 Establishing Serial Communications

To establish serial communications:

- 1 Make sure the Prodigy card is powered and connected to the PC via its serial port.
- 2 On the Start menu, click the Pro-Motion application.

When Pro-Motion is launched you will be prompted with an Interface selection window. A typical screen view when first launching Pro-Motion appears below.

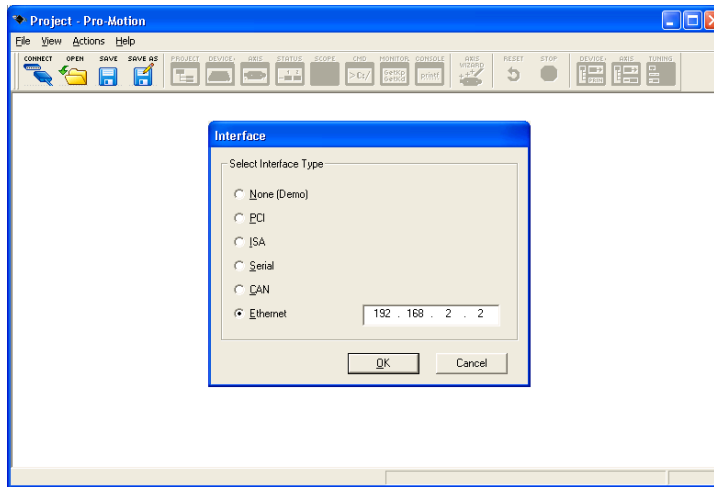

- 3 Click the Connect icon on the toolbar.

Alternatively, on the File menu, click Connect.


The purpose of the Interface dialog box is to indicate to Pro-Motion how your Prodigy/CME PC/104 card is connected to the PC. It provides various selectable communication options such as PCI, serial, CANbus, Ethernet.

- 4 Click Serial, and then click OK.

The Serial Port dialog box displays with default communication values of 57,600 baud, no parity, 1 stop bit, and point to point protocol.

- 5 Click OK without changing any of these settings.

If serial communication is correctly established, a set of object graphics loads into the Project window to the left, as shown in the following figure.

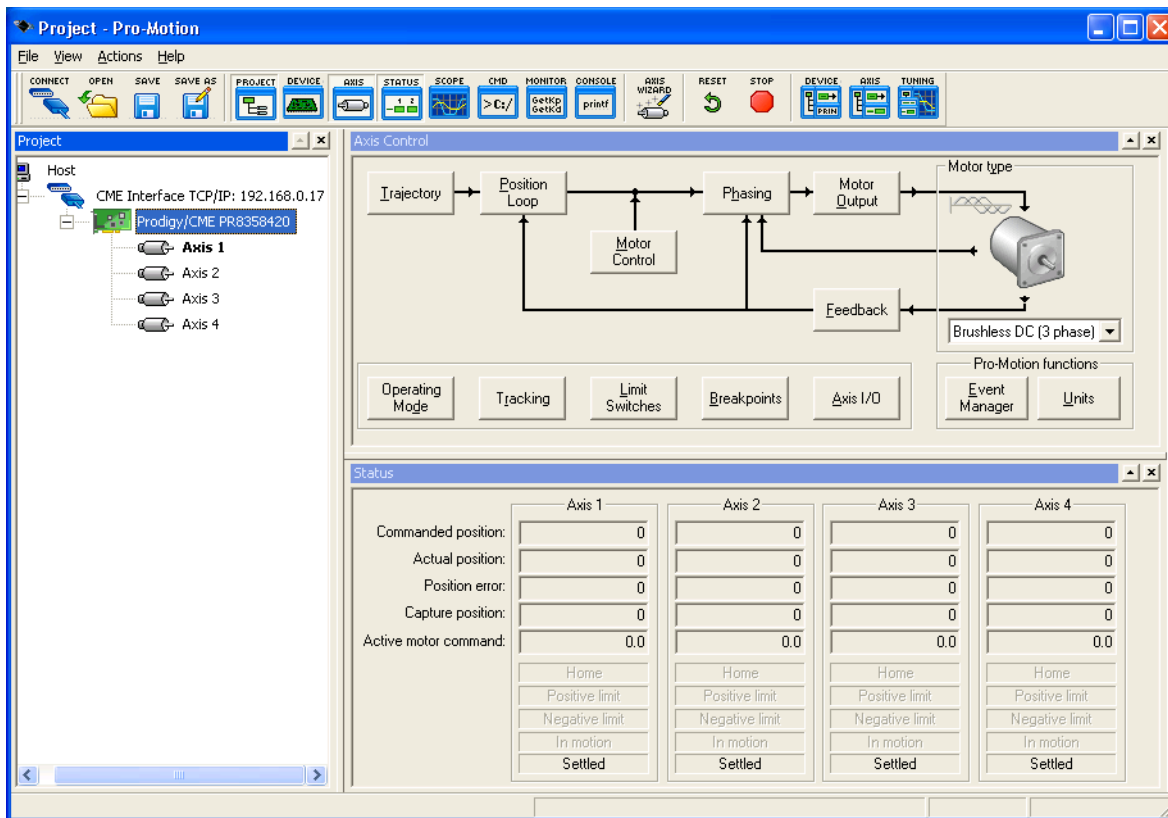

For example for a four axis Prodigy card, you see the card name next to an icon of a card, and below that you see four axis icons, one for each available axis of the motion card. Highlighting (single clicking) either the card icon or one of the axis icons with the mouse is used to select specific cards or axes, and is useful later on in the first time system verification.

If serial communications are not correctly established, after approximately 10 seconds a dialog box appears indicating that a Communications Timeout Error has occurred. If this is the case, recheck your connections and repeat from step 1 above. If after repeated attempts a connection can still not be established, call PMD for assistance.

1.11.2 Changing the Ethernet Parameters of the Prodigy/CME PC/104 Card

To change the Ethernet parameters:

- 1 With serial communications functioning properly, click the Device toolbar button.


The Device window appears.

- 2 Click Network I/O.

The Network I/O Defaults dialog box appears.

- 3 Click the Ethernet tab.

The Ethernet tab appears with data entry fields for the IP Address, the Net Mask, and the Gateway.

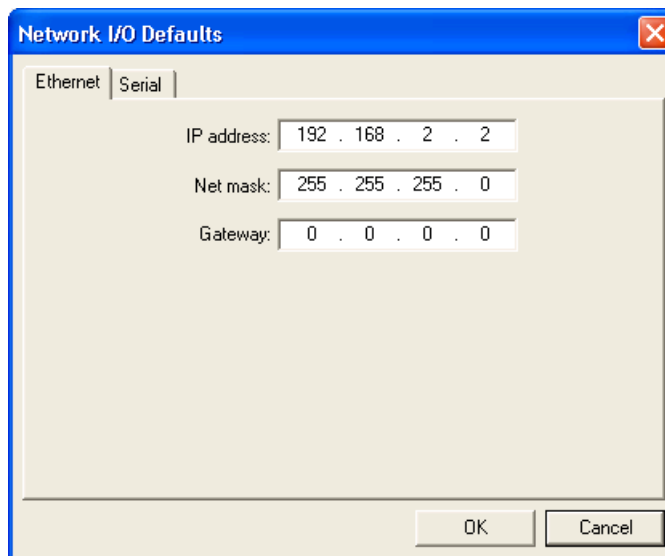

For a typical installation, you will not change the Net mask and Gateway default values, but you must specify a valid, and unique, IP Address for the card to be located on your Ethernet network. If you are not sure what IP addresses are free and available for your Ethernet network, contact your system administrator.

- 4 Enter the IP Address in the corresponding data field as well as the net mask and gateway, if this is required for your network.
- 5 Click OK to store as the power on default.
- 6 Click the Reset toolbar button.

After the card is reset, it uses the default parameters that you specified.

- 7 Connect the Ethernet cable.

See Section 1.10, "Applying Power," on page 20 for details.

The card is now ready for Ethernet communications.

1.11.3 Establishing Ethernet Communications

The card's IP Address has now been set, but Pro-Motion does not as yet know what IP address it should use for Ethernet communications to the card.

To establish Ethernet communications:

- 1 Click the Connect toolbar button.
- 2 Select Ethernet, and then click OK.
- 3 Enter the same IP Address as was specified for the Prodigy/CME PC/104 card.
- 4 When complete, click OK.

If Ethernet communications are successful, an additional set of graphical icons representing your card and axes will be loaded into the Project window to the left below the first set created while establishing communications by serial link.

If communication is not successful, after about 30 seconds, a Communications Timeout Error dialog box appears. If this is the case recheck your connections, and retry to establish Ethernet communications. See step 1 in Section 1.11.2, "Changing the Ethernet Parameters of the Prodigy/CME PC/104 Card," on page 24 for details.

With Ethernet communications functioning properly, the final step is to disable serial communications.

1.11.4 Disconnecting Serial Communications

To disconnect serial communications:

- 1 Select the serial link version of the Prodigy/CME PC/104 card in the Project window to the left.
- 2 Click the Disconnect toolbar button.

A dialog box appears asking if you are sure you want to disconnect.

- 3 Click OK.

You will notice that the serial Prodigy/CME PC/104 card icon and axes graphical icons in the Project box disappear, leaving only the Ethernet link icons for the card and axes.

Congratulations, Ethernet communication is now up and running, and you are ready execute any of the functions on Pro-Motion via Ethernet.

Multiple Pro-Motion users can connect to the same Prodigy/CME PC/104 card. Up to four simultaneous connections can be made. There are various situations where this may be useful. For example one PC can function as a 'monitoring station' for a particular Prodigy/CME card while another PC provides commands to that same card. Be aware however that two or more users sending motion commands to the same card can cause unexpected motion, and should be avoided.

When connecting your Prodigy card for use on an Ethernet network, be sure that the IP address provided for the Prodigy card does not conflict with the addresses of other users on the network. See Section 1.11.2, "Changing the Ethernet Parameters of the Prodigy/CME PC/104 Card," on page 24 for a description of changing the IP address.




1.11.5 Initializing Motion Axes

The next step to verify the correct operation of the system is to initialize each axis of the motion system sequentially, thereby verifying correct amplifier connection, encoder feedback connections (if an encoder is used), and other motion functions. All of this can be conveniently accomplished using Pro-Motion's Axis Wizard function. This versatile and easy to use tool initializes all supported motor types including step, DC Brush, and Brushless DC.

To operate the axis wizard:

- 1 Click to select the axis icon that you would like to initialize (normally this would be Axis #1) in the Project window to the left of the screen.
- 2 With this icon highlighted, click the Axis Wizard toolbar button.

The Axis Wizard initialization window appears.

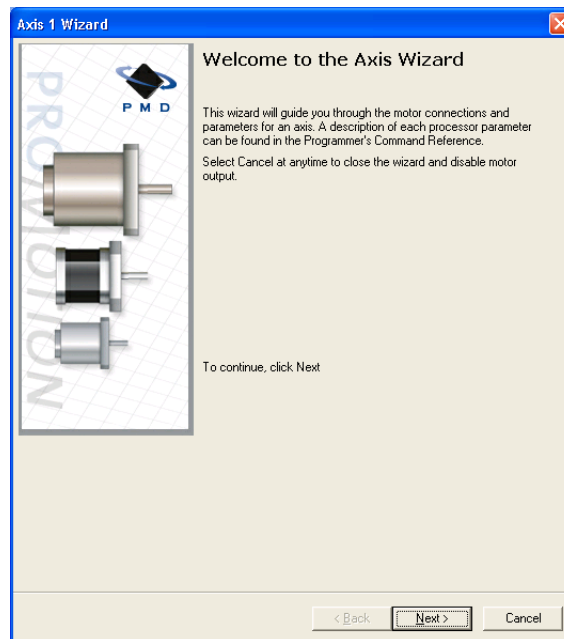

- 3 Click Next and follow the Axis Wizard instructions for each page of the axis initialization process.

A typical axis wizard sequence takes 3-5 minutes. If you have specific questions about the Axis Wizard, refer to *Pro-Motion User's Guide* for detailed information on the axis wizard.

Upon a normal completion of the Axis Wizard, the axis will be ready to make a controlled move. For step motors this means the pulse & direction connections are working properly, and for servo motors this means the encoder and amplifiers connections have been validated, and stable (but not necessarily optimal, see caution below for more information) servo tuning parameters have been loaded into the Prodigy/CME card's Magellan Motion Processor. Depending on the signals connected, this may also mean that limit switches, and other hardware connections are functioning properly.

The most common reasons for the Axis Wizard to not complete normally are an inability to auto-tune the servo motor, or problems determining the correct commutation sequence for Brushless DC motors when commutated by the Magellan Motion Processor. Should this happen, it is possible to perform a manual tuning or commutation setup if desired. Refer to the *Pro-Motion User's Guide* for more information, or call PMD for technical assistance.

The Axis Wizard auto tuning routine, which is used with servo motors, is designed to provide stable, but not optimal, parameters for motion. Pro-Motion provides a wealth of functions including a high speed hardware trace oscilloscope that can assist you in determining optimal servo parameters. Values provided by the axis wizard during auto tuning may or may not be safe for your system, and it is up to the user to determine if and when they should be used.



1.11.6 Performing a Simple Trajectory Move

The last step in first time system verification is to perform a simple move for each axis.

To perform a simple move:

- 1 In the Project Window, select the motion axis that you would like to move by clicking the corresponding icon.
- 2 Click the Axis view button on the far right of the toolbar.

Alternatively, click Axis View on the Axis menu.

Your screen organization changes to give easy access to windows that are used while exercising the motion axes.

- 3 Click the Trajectory button in the Axis Control window.

The Trajectory dialog box appears.

Trajectory - Prodigy/CME PR8358420 : Axis 1

Profile mode: Trapezoidal

Trajectory parameters

Deceleration: 10000 counts/sec²

Acceleration: 10000 counts/sec²

Velocity: 1000.00 counts/sec

Motion

Shuttle mode

Single move

Manual

Automatic

Position 1: 0 counts

Go

Position 2: 1000 counts

Dwell: 0.2 seconds

Close

- 4 In the Profile mode list, select Trapezoidal.



- 5 Enter motion profiles for deceleration, acceleration, velocity, and destination position (Position 1) that are safe for your system and will demonstrate proper motion.

Pro-Motion provides various selectable units for distance and time, but defaults to units of encoder counts (or pulses for step motors) for distance and seconds for time. This means the default units for velocity are counts/sec, and the default units for acceleration and deceleration are counts/sec². So for a motor that has 2,000 counts per rotation, to perform a symmetric trapezoidal move of 25 rotations with a top speed of 5 rotations per second and with an acceleration time of two seconds, the parameters in the Trajectory dialog box would be set as follows:

Deceleration: 5,000 counts/sec²

Acceleration: 5,000 counts/sec²

Velocity: 10,000 counts/sec

Position 1: 0 counts

Position 2: 50,000 counts

- 6 Click Go and confirm that the motion occurred in a stable and controlled fashion.

Congratulations! First time system verification for this axis is now complete. You should now initialize all of the axes in your system. Go to Section 1.11.5, “Initializing Motion Axes,” on page 26 and repeat the steps.

1.12 Developing User Application Code

Pro-Motion provides an intuitive, convenient, graphical interface to setup and exercise motion controllers such as Prodigy/CME cards or ION[®] Digital Drives. Eventually though, you will begin to design application-specific software code that will serve as your system controller. PMD supports two standard languages to accomplish this; Visual Basic, through the set of Active-X libraries known as VB-Motion, and C/C++, through the source code-based system known as C-Motion.

For more information on VB-Motion and C-Motion, please consult the *Magellan Motion Processor Programmer's Command Reference*.

1.12.1 Architecture

Figure 1-6 on page 29 shows two ways to locate your application code with the Prodigy/CME PC/104 cards.

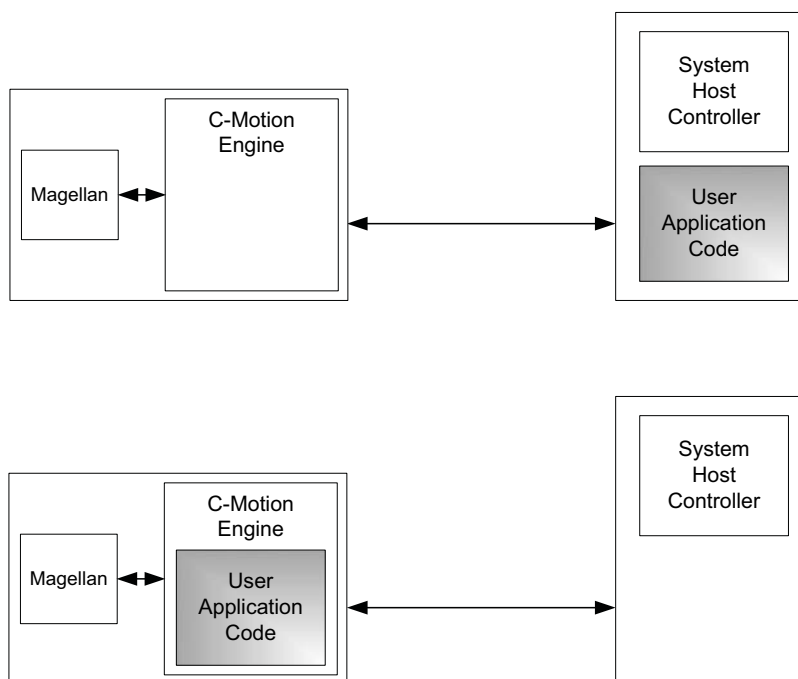


Figure 1-6:
Two Ways to
Locate the
Code on the
Prodigy/CME
PC/104 Card

When located on a host controller, the user's code communicates via the Serial, CANbus, or Ethernet link to the Prodigy/CME card. Either VB-Motion or C-Motion can be used to communicate to the card, and the choice of software tools to compile and debug C code is typically determined by the developer. The advantages of a 'host-centered' machine controller approach are that software sequences can be centralized, and the user's code has convenient access to the PC's keyboard, mouse, or touch screen user interface facilities.

When located in the Prodigy/CME PC/104 card, the user's code communicates directly to the resources available on the card such as the Magellan Motion Processor. This has speed advantages both in communicating with those resources, and in real time code execution predictability.

Another feature of locating code on the card is that the C-Motion Engine can be programmed to receive or send commands to the Prodigy/CME's PC/104 bus, serial, CANbus, or Ethernet ports. In this way the user's application code, downloaded onto the card, forms a local machine controller that can be used to control devices attached to the Prodigy/CME card, thereby unburdening PC-based software, and the PC's network connection hardware, from this task.

By supporting application code on the host controller as well as downloaded directly on the card, the user is provided with multiple options for optimizing the control architecture of his machine, and locating his software on the hardware platform that will best match his machine's operational and performance requirements.

1.12.2 C-Motion Engine

The *C-Motion Development Tools Manual* provides a complete description of how to create C-Motion code that can be downloaded onto the Prodigy/CME PC/104's C-Motion Engine.

The C-Motion Engine development environment operates on the PC. Code is edited, compiled, linked, downloaded, and monitored via programs that reside on the PC. Systems which have high level PC-based code concurrently sending commands to the Prodigy card can locate that code on the same PC as the one used for C-Motion code development, or on a separate PC.

All of these considerations and much more are discussed in the *C-Motion Development Tools Manual*, which includes a convenient Getting Started section that introduces the C-Motion Engine IDE (Integrated Development

Environment) and walks you through an example session resulting in code being downloaded and executed on the Prodigy/CME PC/104 card.

2. Operation


In This Chapter

- ▶ Card Function Summary
- ▶ Magellan Motion Processor Functions
- ▶ Magellan-Controlled Functions
- ▶ C-Motion Engine Functions
- ▶ Communications Functions
- ▶ General Card Functions
- ▶ Signal Processing and Hardware Functions
- ▶ Software Libraries

The Prodigy/CME PC/104 products are high-performance card-based motion controllers for DC brush, brushless DC, pulse & direction, and microstepping motors. These cards are based on Magellan Motion Processors, which perform motion command interpretation and numerous other real-time functions. The ‘/CME’ series Prodigy cards include a powerful C-Motion Engine module which allows C-Motion application code to be downloaded and executed directly on the motion card, improving run time performance, enabling distributed control architectures, and allowing a complete machine controller to be hosted on a single card.

The following diagram provides a functional block diagram of the Prodigy/CME PC/104 card:

**Figure 2-1:
Prodigy/CME
PC/104 Card
Internal Block
Diagram**

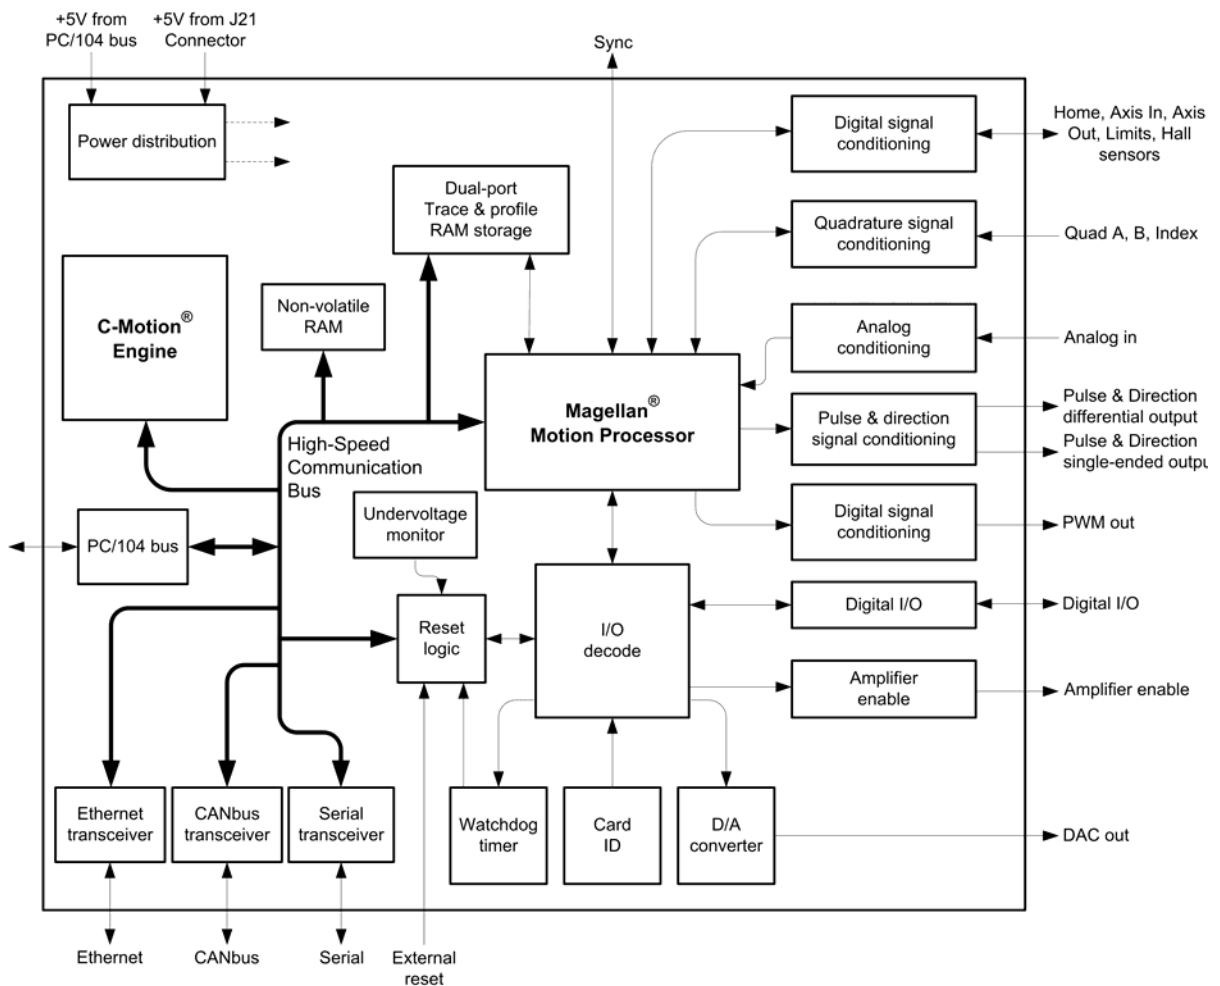

2.1 Card Function Summary

The Prodigy/CME PC/104 card functions can be broken down into six overall categories:

Magellan Motion Processor functions - These are user-accessible functions which reside in the Magellan Motion Processor. Included are profile generation, DC brush and brushless DC loop closure, microstep generation and much more. These functions are accessed through the Magellan Motion Processor's command set, which allows for sophisticated control of the motion axes and related hardware.

Magellan-controlled functions - These are user-accessible functions which are controlled by the Magellan Motion Processor, but which reside outside the Magellan chip on various portions of the card circuitry. These functions include general purpose digital I/O, a watch-dog timer, and many other capabilities.

C-Motion Engine functions - The C-Motion Engine is a self-contained, high performance code execution unit that allows C-Motion code to be downloaded and executed on the Prodigy/CME PC/104 card. It can communicate with various resources on the card including the Magellan Motion Processor, the card's PC/104 bus, serial, CANbus, and Ethernet ports, and other on-card peripherals such as the dual-ported RAM.

General card functions - These are user-accessible general purpose card resources not specifically controlled by the Magellan Motion Processor. Examples include card reset, card default parameter restore, and dual-ported and non-volatile RAM access.

Signal processing & hardware functions - A substantial portion of the card performs signal conditioning and other functions associated with safety-related signal processing. These functions are a fixed feature of the card and are not user-accessible.

Communications functions - The Prodigy/CME PC/104 card provides sophisticated resource addressing capabilities which allow an external host controller, or the onboard C-Motion Engine, to address various on-card and card-connected resources. In addition, various direct management features are provided for the Prodigy/CME PC/104 card's communication ports (the PC/104 bus, two serial ports, a CANbus port, and an Ethernet port).

Section 2.1.1, "Card Access Basics," on page 33 provides an introduction to general card access issues that will be useful while reading the remainder of this chapter.

Section 2.2, "Magellan Motion Processor Functions," on page 34 through Section 2.7, "Signal Processing and Hardware Functions," on page 52 describe each of these specific functional areas.

Section 2.8, "Software Libraries," on page 54 provides an overview of accessing Prodigy/CME PC/104 card functions via software libraries.

2.1.1 Card Access Basics

The Prodigy/CME PC/104 card functions as a bus master for the PC/104 bus. It can communicate to PMD-based slave cards such as non-CME Prodigy cards, as well as general purpose PC/104 cards. See Section 2.5.1, "PC/104 Bus Communications," on page 46 for more information on communicating via the PC/104 bus.

Host access to the Prodigy/CME PC/104 card from the serial, CANbus, or Ethernet ports is provided by a protocol called the *PMD Resource Access Protocol* (PRP). This easy-to-use yet powerful system utilizes actions, resources, and addresses to access the Prodigy/CME PC/104 card's functions. Various card functions are organized into resources, and resources process actions sent to them. Actions can send information, request information, or command specific events to occur. Addresses allow access to a specific resource on the card, or connected to the card, via the PC/104 bus, serial, CANbus, or Ethernet connections.

A basic communication to the Prodigy/CME PC/104 card consists of a 16-bit PRP header, and an optional message body. The message body contains data associated with the specified PRP action, but some actions do not require a message body. After a PRP communication is sent to the card, a return communication is sent by the Prodigy/CME PC/104 card which consists of a PRP header and an optional return message body. The return message body may contain information associated with the requested PRP action, or it may contain error information if there was a problem processing the requested action.

There are five different resource types supported by the Prodigy/CME PC/104 card. The **Device** resource indicates functionality that is addressed to the entire card, the **MotionProcessor** resource indicates a Magellan Motion Processor, the **CMotionEngine** resource indicates the C-Motion Engine, the **Memory** resource indicates the dual-ported RAM and the non-volatile RAM (Random Access Memory), and the **Peripheral** resource indicates a communications connection.

There are ten different PRP actions including **Command**, which is used to send commands to resources such as the Magellan Motion Processor, **Send** and **Receive**, which are used to communicate using the serial, CANbus, and Ethernet ports, **Read** and **Write**, which are used to access memory-type devices such as the on-card dual-ported RAM, and the non-volatile RAM, and **Set** and **Get**, which are used to load or read parameters.

Chapter 3, *Accessing Card Resources*, on page 57 describes all of these constructs in more detail. In the subsequent sections of this chapter a summary of the PRP actions that are required to access each card function are included with the descriptions of the card functions themselves.



Prodigy/CME card users who write their own software drivers from scratch will need to become familiar with the details of the PRP system and other aspects of card access. The majority of users however will prefer to use C-Motion or VB-Motion, which already encapsulate the details of the card access protocol, and provide convenient and easy to use C and BASIC-callable routines to access the card. For more information see the *Prodigy/CME Programmer's Reference*.

2.2 Magellan Motion Processor Functions

The Magellan Motion Processor block pictured in Figure 2-1 on page 32 forms the core of Prodigy cards. Here is an overview of the functions provided, or managed, by the Magellan Motion Processor on the Prodigy/CME PC/104 cards:

- Profile generation
- Motor output signal generation (PWM, analog, and pulse & direction)
- Quadrature encoder processing and index capture
- DC brush and brushless DC servo loop closure
- Breakpoint processing
- AxisIn and AxisOut signal processing
- Trace
- Motion error detection, tracking windows, and at-settled indicator
- Limit switches
- Access to various on-card resources such as parallel I/O and dual-port trace & profile RAM

The Magellan Motion Processor interfaces with motion hardware components such as feedback encoders, motor out signal generation hardware, and others, directly through its own pin connections, and through various signal conditioning circuitry. See Section 2.7, “Signal Processing and Hardware Functions,” on page 52 for a complete description of on-card hardware interconnections and signal management.

The Magellan instruction set is very flexible and powerful. The following example, which would be used to set up and execute a simple trapezoidal profile, illustrates just a small part of the overall command set:

```

SetProfileMode AxisI, trapezoidal           // set profile mode to trapezoidal for axis I
SetPosition AxisI, 12345                    // load a destination position for axis I
SetVelocity AxisI, 223344                   // load a velocity for axis I
SetAcceleration AxisI, 1000                 // load an acceleration for axis I
SetDeceleration AxisI, 2000                // load a deceleration for axis I
SetUpdateMask AxisI, Profile                // specify that an update of profile parameters only
                                           // is to occur
Update AxisI                                // Double buffered registers are copied into
                                           // the active registers, thereby initiating the move

```

Magellan instructions are encoded in packets, which are sent to and from the Magellan Motion Processor. The Magellan processes these packets, performs requested functions, and returns requested data. Within the Prodigy/CME PC/104 card, the Magellan uses its high-speed parallel-word communications mode to connect to the card's communications bus, which allows the Magellan to be controlled via the C-Motion Engine, or via an external host controller connected to the Prodigy/CME PC/104 card by serial, CANbus, or Ethernet port.

Two manuals describe how the Magellan Motion Processor operates and how it is programmed: the *Magellan Motion Processor User's Guide*, and the *Magellan Motion Processor Programmer's Command Reference*. These documents also describe VB-Motion, and C-Motion, which are the software libraries that are used to send commands to the Magellan chip and exercise its many functions.

2.2.1 Accessing the Magellan Motion Processor

To send and receive command packets to the Magellan Motion Processor the PRP action **Command** is used. The Magellan command packet is loaded into the PRP message body, and the return PRP message body contains the return packet provided by the Magellan. A return without error indicates that the command was processed successfully. If an error occurred while the Magellan was processing the command, the message body is loaded with the specific error that occurred. For more information on Magellan command packet formats and return packet formats see the *Magellan Motion Processor Programmer's Command Reference*.

In addition to accessing the on-card Magellan, it is also possible to access Magellan Motion Processors that are connected via the Prodigy/CME PC/104 card's attached ports such as the PC/104 bus, CANbus, Serial, or Ethernet networks. An additional PRP action, **Open**, sent to either the **Device** or the **Peripheral** resource, is used to establish a connection to such a motion processor. See Section 3.4, "Accessing Magellan-Attached Devices," on page 64 for more information on connecting to motion processors on attached networks.

For complete information on the format and function of these, and other PRP actions, refer to the *Prodigy/CME Programmer's Reference*.

2.2.1.1 Magellan Reset

Although a reset occurs automatically during power-up, it is sometimes desirable to reset the Magellan Motion Processor explicitly through a user-initiated action. The PRP action **Reset**, when sent to the **MotionProcessor** resource, causes a reset of the Magellan Motion Processor. This reset affects the Magellan Motion Processor, and a number of Magellan-controlled signals. Note however that this type of reset is different than a full card reset initiated via the PRP action **Reset**. See Section 2.6.2, "Reset," on page 50 for a description.

After a Magellan reset occurs, some of the Prodigy/CME PC/104 card's output signals will be driven to known states. These are summarized in the following table:

Signal Name	State
AxisOutI-4	High
PWMMagIA-4C	Low
PWMSignIA-4B	Low
DACIA-DAC4B	No change
DigitalOut0-7	No change
AmpEnableI-4	No change
DAC On/Off	No change
Watchdog Timer	No change

2.2.2 Connections & Associated Signals

The Prodigy/CME PC/104 card's Magellan Motion Processor has extensive signal connections associated with it to allow interfacing to various motion peripherals. See the *Magellan Motion Processor User's Guide* as well as Section 2.7, "Signal Processing and Hardware Functions," on page 52 for a complete description of the signals managed by the Magellan Motion Processor.

2.3 Magellan-Controlled Functions

There are a number of motion control hardware features on the Prodigy/CME PC/104 card that are controlled through the Magellan Motion Processor, but are not located within the Magellan Motion Processor itself. Because of this they are not specifically described in the *Magellan Motion Processor User's Guide*, or the *Magellan Programmer's Command Reference*, instead being described here, in subsequent sections.

These Magellan-controlled card functions are:

- General Purpose Digital I/O
- Amplifier Enable
- DAC Output Enable
- Watchdog Timer
- Undervoltage Monitor
- Reset Monitor
- Card ID
- Dual-Port Trace & Profile RAM

These motion hardware control functions are accessed via the Magellan's **ReadIO** and **WriteIO** commands, which provide control of hardware peripherals external to the Magellan Motion Processor. In addition, many of the Prodigy card motion hardware control functions can be accessed using VB-Motion and C-Motion 'named' commands specific to that function. See the subsequent feature-specific sections for a description of both access methods.

The **ReadIO** and **WriteIO** commands are similar to any other Magellan packet commands in that they are accessed via the PRP action **Command**. See Section 2.2.1, "Accessing the Magellan Motion Processor," on page 35 for detailed information.

2.3.1 General-Purpose Digital I/O

In addition to numerous special-purpose digital signals which are input or output to the card, and which are directly processed by the Magellan Motion Processor such as *AxisIn*, *AxisOut*, *Home*, and *QuadA*, the Prodigy/CME PC/104 cards also support eight general-purpose inputs, and eight general-purpose outputs. These signals provide a convenient way of accessing additional application-specific general-purpose digital I/O.



The general purpose digital inputs are TTL-compatible with typical input range of 0~5.5V. The absolute maximum input range is -0.5~7V.

The general purpose digital outputs are 5V TTL-compatible with an output sink/source current of 24mA.

The eight inputs and eight outputs are read using the Magellan Motion Processor's **ReadIO** command and written using the **WriteIO** command, with an I/O address of 0. This is illustrated in the following table, along with the bit locations of the input and output signals.

I/O Address	Bit Location	Signals
0	0 - 7	DigitalOut0-7
	8 - 15	DigitalIn0-7

To read all eight general-purpose digital I/O signals, a **ReadIO** command is performed at address offset 0. The 16-bit read word returns the current output values (set using the **WriteIO** command) in bits 0 - 7, while bits 8 - 15 hold the digital values corresponding to the signal levels at the connector for those inputs. To write new signal values to the eight digital outputs, a **WriteIO** command to address offset 0 is sent, and the values on bits 0-7 will be output to the signal connections. The values of bits 8 - 15 are ignored.

Example

To write the value 0xAA to bits 0 - 7, the command **WriteIO** is used. If the signal pattern 0x55 is present on the eight input connections, then the command **ReadIO 0** will return the value 0x55AA. The upper eight bits reflect the present value of the input signals, while the lower eight bits reflect the 8-bit value being output.

In addition to the low-level **ReadIO** and **WriteIO** commands, the following commands are also supported in C-Motion and VB-Motion: **WriteDigitalOutput**, **ReadDigitalInput**, and **ReadDigitalOutput**. These commands provide a clearer and simpler interface to the Prodigy/CME PC/104 card's general purpose I/O signals by handling the byte shifting.

2.3.1.1 Connections & associated signals

The general-purpose I/O are direct digital inputs and outputs. There are no associated connections required for these signals to function properly, however, one or more of the digital grounds must be connected. Digital inputs are pulled up through 4.7 kOhm resistors to 5V. The power-up default value for all general-purpose digital outputs is low.

See Chapter 4, *Electrical Reference*, on page 69 for a complete description of the pinout connections to and from the card.

2.3.2 Amplifier Enable

The signals **AmpEnable 1-4** provide four digital outputs which may be used as amplifier enable signals. They can also be used as general-purpose digital outputs. They can be read or written using the Prodigy/CME PC/104 card Magellan's **ReadIO** and **WriteIO** commands.

These outputs are read using the **ReadIO** command, and written to using the **WriteIO** command, using an address of 1, as shown in the following table:

I/O Address	Bit Location	Signals
1	0-3	Amplifier enable outputs (0-3)
	4-6	Unused
	7	DAC enable status (1 = enabled; 0 = disabled)
	8-11	Change mask for bits 0-3; amplifier enable outputs (1 = change; 0 = don't change)
	12-14	Unused
	15	Change mask for DAC enable (1 = change; 0 = don't change)

To read the status of the amplifier enable outputs, the command **ReadIO** is used at address 1. The values currently being output will appear in bits 0 - 3. To write values to the amplifier enable output signals, the **WriteIO** command

is used with an address of 1. An amplifier enable signal will be changed only if the corresponding change mask bit is set. The change mask bits are bits 8 – 11, the values to be loaded are bits 0 – 3.

Examples

```
WritelO AddressI, 0x0505 // write 0x0505 to I/O Address I to enable Amplifiers 1 & 3, don't change 2 & 4
WritelO AddressI, 0x0400 // write 0x0400 to I/O Address I to disable Amplifier 3, don't change 1, 2, & 4
WritelO AddressI, 0x0100 // write 0x0100 to I/O Address I to disable Amplifier 1, don't change 2, 3, & 4
```

In addition to the low-level **ReadIO** and **WritelO** commands, the following commands are also supported in C-Motion and VB-Motion: **SetAmplifierEnable** and **GetAmplifierEnable**. These commands provide a clearer and simpler interface by handling the bit shifting.

2.3.2.1 Connections & associated signals

AmpEnable1-4 are direct digital outputs. There are no associated connections required for these signals to function properly, however, one or more of the digital grounds must be connected. The power-up default value for all amplifier enable signals is low (disabled). See Chapter 4, *Electrical Reference*, on page 69 for a complete description of the pinout connections to and from the card.

2.3.3 DAC Output Enable

In addition to the amplifier enable outputs, there is a dedicated card function which allows the DAC output signals to be shunted to 0 volts for safety purposes (DAC disabled), or to be controlled by the Magellan Motion Processor (DAC enabled). This shunting occurs at a hardware level outside the motion processor itself, and provides an additional safety layer to control the motor command.

The status of the DAC output enable function can be read using the **ReadIO** command, and the DAC output enable status can be set using the **WritelO** command, with an address of 1. The table in Section 2.3.2, “Amplifier Enable,” on page 37 shows this. To read the status of the DAC output enable function, **ReadIO** is used. The value currently in use will appear in bit 7. A value of 1 indicates DAC output is enabled, meaning that the voltage being output by the DACs is controlled by the motion processor. A value of 0 indicates that it is disabled, meaning that the voltage being output by the DAC is forced to 0.0 volts.

To enable or disable the DAC enable function, the **WritelO** command is used. The change mask bit located at bit 15 must be loaded with a 1. Bit 8 must be loaded with a value of 0 to disable, or a value of 1 to enable output.

The powerup default value for DAC Output Enable is disabled. In addition, the DAC Output Enable is disabled upon a card reset, or via the external **Reset** signal. See Section 2.6.2, “Reset,” on page 50 for more information.

Examples

```
WritelO AddressI, 0x8080 // write 0x8080 to I/O Address I to enable all DACs,
                        // don't change amplifier enables
WritelO AddressI, 0x8000 // write 0x8000 to I/O Address I to disable all DACs,
                        // don't change amplifier enables
```

In addition to the low-level **ReadIO** and **WritelO** commands, the following commands are also supported in C-Motion and VB-Motion: **SetDACOutputEnable** and **GetDACOutputEnable**. These commands provide a clearer and simpler interface by handling the bit shifting.

2.3.4 Card Watchdog Timer

To enhance the overall safety of the card, a watchdog function has been included. When enabled, the watchdog will automatically trigger a card reset if communication to it should be lost. See Section 2.6.2, “Reset,” on page 50 for a description of the actions and signal changes that occur after a card reset.

To enable the card watchdog timer, the **WriteIO** command is used to send a value of 0x5562 to address 4. Once enabled, the watchdog timer will time out, causing a hard reset, if another write to address 4 with a value of 0x5562 is not received within 104 mSec. As long as a watchdog value is written to address 4 within the 104-mSec interval, no reset will occur and motion operations will proceed normally. Once enabled, the watchdog mechanism cannot be stopped until a reset or power cycle occurs.

After powerup or card reset, if no command is sent to the watchdog address, then the watchdog will remain disabled. The watchdog is disabled by default at power-up. When the watchdog timer times out and triggers a reset, it also disables itself.

In addition to the low-level **ReadIO** and **WriteIO** commands, the following command is also supported by C-Motion and VB-Motion: **SetWatchDog**. This command provides a clearer and simpler interface by automatically sending the value 0x5562.

2.3.5 Undervoltage Monitor

To enhance reliability under a variety of electrical conditions, an undervoltage detection circuit has been included. This circuit triggers a hard reset when the voltage has dropped to an unsafe level. Resetting the Prodigy/CME PC/104 card will have the result of setting all motor command outputs to zero, thus allowing the motors to come to a safe stop. An undervoltage condition is detected when the 3.3V internal supply on the card drops below 2.7V. See Section 2.3.6, “Reset Monitor,” on page 39 to determine if a reset was caused by an undervoltage condition.

2.3.6 Reset Monitor

During normal operations, the Prodigy/CME PC/104 card is only reset during power-up. There are, however, several other ways that the Prodigy/CME PC/104 card can be reset. See Section 2.6.2, “Reset,” on page 50 for a complete description of how the card can be reset. A reset serves the purpose of initializing values and bringing the Prodigy/CME PC/104 card to a known and consistent state.

To determine the cause of a card reset, special instructions to read the reset source have been provided. The command **ReadIO** with an address of 2 should be used. The following table details the encoding of this I/O address word.

I/O Address	Bit Location	Signals
2	0-10	<i>Reserved</i>
	11	C-Motion Engine user application code fault. A 1 value in this bit indicates an instruction or address access fault.
	12	Commanded reset. A 1 value in this bit indicates a card-level reset commanded via the PRP action Reset.
	13	Undervoltage detection: a 1 value in this bit indicates a reset caused by undervoltage detection.
	14	External signal: a 1 value in this bit indicates a reset caused by the external Reset signal, pin 91 of the GP Connector (J6)
	15	Card Watchdog timeout: a 1 value in this bit indicates a reset caused by the card watchdog timeout. See Section 2.3.4, “Card Watchdog Timer,” on page 39 for a description.

Once a reset condition has occurred, the reset status stored at address 2 (described in the preceding table) can be cleared by a **WriteIO** command to address 2 with a value of zero (0).

Example

To determine that a reset has occurred, and to determine the cause of the reset, the command **ReadIO** is used. Assuming that a watchdog timer event has occurred, the value returned would be 0x8000. To clear the reset monitor word, the command **WriteIO** is sent to address 2 with a value of zero (0).

In addition to the low-level **ReadIO** and **WriteIO** commands, a **GetResetCause** command is also supported by C-Motion and VB-Motion. This command returns the cause and also clears the reset condition.

2.3.7 Card ID

This feature allows the user to query the card for a Card ID. This may be helpful for verifying the type of Prodigy Motion Card in situations where multiple cards of varying types are installed.

2.3.7.1 ReadIO and WriteIO commands

To read the Card ID, the **ReadIO** command is used with an address of 0xFF. The encoding of the bits returned is detailed in the following table:

Address	Bit Location	Signals
0xFF	0-3	Major card revision: This nibble encodes the major card revision. This value can range from 0 to 15.
	4-7	Minor card revision: This nibble encodes the minor card revision. This value can range from 0 to 15.
	8-11	Card generation: This nibble encodes the card generation. This value can range from 8 to 15. (0 to 7 are reserved for older motion card families.)
	12-14	Card type: This nibble encodes the card type and has one of the following values: 0 = ISA Bus 1 = PCI Bus 2 = CompactPCI 3 = PC/104 4 = MIPS 5 = RS232 6 = CAN 7 = Standalone
	15	0 = Standard (non-CME) Prodigy card 1 = Prodigy/CME card

Example

To read the Card ID, the command **ReadIO** is used. For example, the value 0xf805 would be interpreted as: Prodigy/CME PC/104 card, card generation 8, card revision 5.0.

In addition to the low-level **ReadIO** command, a **ReadCardID** command is also supported by C-Motion and VB-Motion. This command returns the Card ID in the format described above.

2.3.8 Dual-Ported RAM (Trace Buffer)

The Prodigy/CME PC/104 card has 64 KBytes of on-card dual-ported memory (DPRAM) which has one 'port' interfaced to the Motion Processor, and the other 'port' interfaced to the card's high speed internal communications bus, allowing two paths of communication. Figure 2-2 shows this configuration.

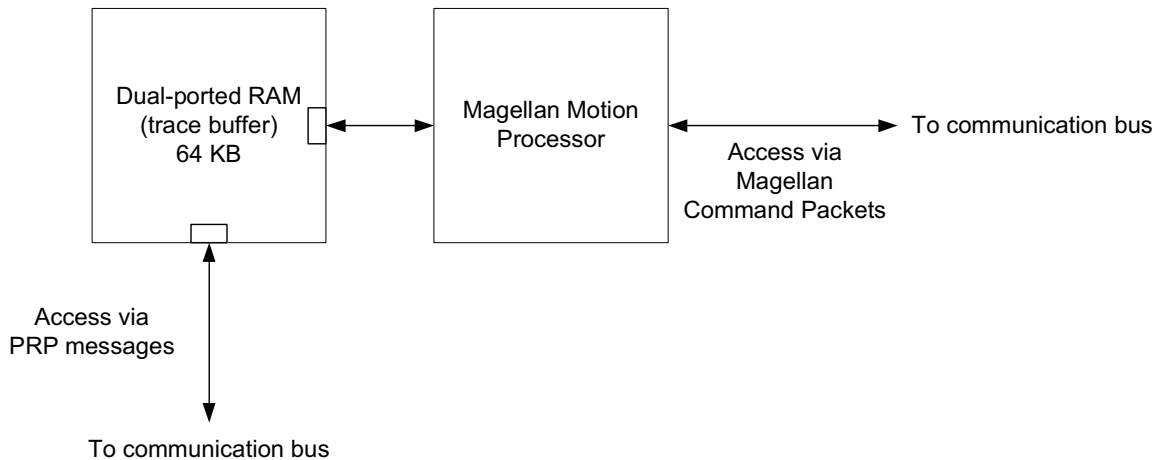


Figure 2-2:
On-card Dual-ported Memory

The dual-ported RAM trace buffer is a powerful feature that allows various Magellan Motion Processor parameters and registers to be continuously captured and stored to a memory buffer. The captured data may be downloaded to the C-Motion Engine or to an off-card host using the Prodigy/CME PC/104 card’s serial, CANbus, or Ethernet communication channels. Magellan data traces are useful for optimizing DC brush and brushless DC servo performance, verifying trajectory behavior, capturing sensor data, or to assist with any type of monitoring where a precise time-based record of the system’s behavior is required. For more information on how to set up a trace within the Magellan Motion Processor, see the “Trace Capture” section of the *Magellan Motion Processor User’s Guide*.

2.3.8.1 Accessing the dual-ported RAM

To access the contents of the trace buffer via the Magellan port the Magellan’s built in memory buffer commands are used. The Magellan provides a sophisticated command set that lets you set up, monitor, and read from the trace buffer. See the *Magellan Motion Processor User’s Guide* for more information on these commands. In this read configuration, the Magellan Motion Processor stores data to the DPRAM autonomously, and the host controller reads the data using the Magellan Motion Processor as well.

An alternate path for reading the trace buffer after it has been written to by the Magellan Motion Processor is via the Prodigy/CME PC/104 card’s high speed communication bus. In this mode the dual-ported RAM is referred to as a resource, and is accessed via the PMD Resource Access Protocol. See Section 2.6.4, “Dual-Ported RAM (Trace Buffer),” on page 51 for more information on this access method.

The contents of the dual-ported RAM are volatile. They are not saved during power-down of the card.



2.4 C-Motion Engine Functions

The C-Motion Engine on the Prodigy/CME PC/104 card allows C-Motion code to be downloaded and executed on the card. The C-Motion Engine is a powerful and flexible engine that can be used to:

- Operate Prodigy motion cards in a standalone mode
- Offload time-critical code from the host to the motion card
- Create a complete machine controller that communicates via PC/104 bus, serial, CANbus, or Ethernet to a cell controller or other high level controller


- Extend the functionality of the Magellan Motion Processor with higher level functions such as contouring, macros, or other complex behaviors
- Lower system cost by combining a motherboard function with a dedicated motion card function in a single-card format.

2.4.1 C-Motion Engine Hardware Configuration

The C-Motion Engine is a self-contained module that provides non-volatile RAM space to store downloaded user application code, RAM space for ‘scratch’ data variable storage, and connections to the communication bus allowing the C-Motion Engine to send and receive messages through the network ports, communicate with the Magellan Motion Processor, and access other on-card resources such as the dual-ported RAM.

Creating, compiling, downloading, and verifying a specific user C-Motion application on a Prodigy/CME PC/104 card is accomplished with the C-Motion Engine development system, described in *C-Motion Development Tools Manual*. The outcome of such a development sequence is a downloadable code image, run on the C-Motion Engine, that contains the user application code and that is executed by the C-Motion Engine on the Prodigy/CME PC/104 card. Figure 2-3 provides an overview of the architecture of the C-Motion Engine.

**Figure 2-3:
Overview of
C-Motion
Engine
Architecture**

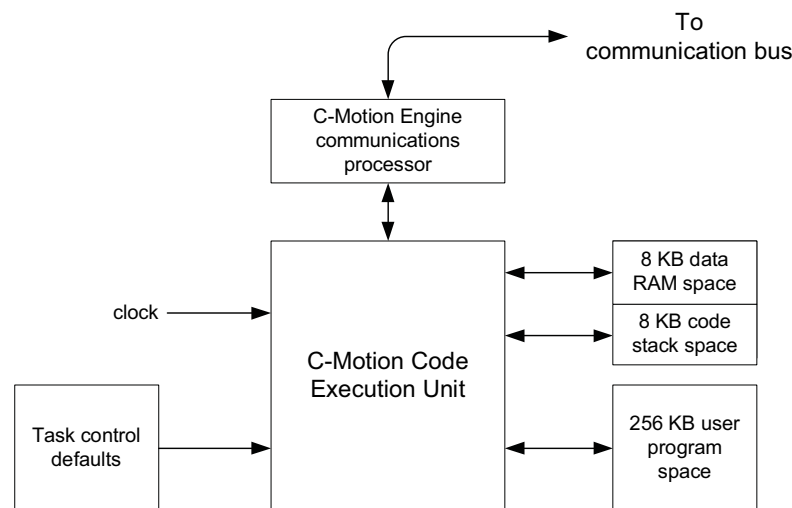

The following table provides an operational overview of the capabilities and resources provided by the C-Motion Engine:

Resource	Specification
MIPS (millions of instructions per second)	96
User program space (stored in flash)	256KB
User data RAM space	8 KB
User code stack space	8 KB

2.4.2 Powerup & Operation

Upon reset or power up the C-Motion Engine initializes itself and checks to see whether execution of user application code, if downloaded, should automatically begin. If the factory default settings have not been changed, user application code automatically begins executing and continues until the card is powered down or until a specific ‘stop executing’ command is given. If this default value is changed, then the C-Motion Engine will hold in a wait state, and code execution will not occur automatically.

While there are numerous safety checks and features built into the C-Motion Engine system, application code developed for the C-Motion Engine is C-based, and thus there are limits to code size, RAM usage, and stack usage

that should be observed during run time operation of downloaded C-Motion code. The table above provides these numerical limits.

For user downloaded code that does not correctly observe these limits, or for files that have become corrupted, there are a number of fault conditions that can occur while the C-Motion Engine is executing downloaded user application code. These very serious run-time faults include instruction errors - indicating that an unknown instruction was encountered during execution of the user's code, and address faults - indicating that either a program space or RAM space access limit was violated. If either of these conditions occur, the C-Motion Engine will immediately halt user code execution, and reset the Prodigy/CME PC/104 card. This C-Motion Engine-initiated reset is identical to the reset that occurs after sending a PRP **Reset** action, except that the cause of the reset is recorded as 'C-Motion Engine user code Fault' rather than 'commanded' reset. See Section 2.6.2, "Reset," on page 50 for more information on the **Reset** command. See Section 2.3.6, "Reset Monitor," on page 39 for information on retrieving the reset cause.

Whether or not user application code is running, after reset or power up, the C-Motion Engine begins processing PRP actions sent to it. These commands are typically sent from a host controller. The supported commands include functions such as checking the downloaded user application code version stored in the C-Motion Engine, and sending and receiving messages to the user code loaded onto the C-Motion Engine.

For additional guidelines on managing run-time usage of the C-Motion Engine see the *C-Motion Development Tools Manual*.

2.4.3 Task Control

The primary purpose of the C-Motion Engine is to execute user application code that has been downloaded to it using the C-Motion Engine development system.

In a production environment, this code will typically automatically start upon power up, and run continuously while the system is in operation. For debugging however, there are a number of additional controls.

At any point in time it is possible to stop or restart execution of the C-Motion Engine user application code. To access this function the PRP action **Command** is sent to the **CMotionEngine** resource.

Extreme caution should be applied when stopping or starting user application code running on the C-Motion Engine, as depending on the specific application code, this may cause unexpected or unsafe motion. It is the responsibility of the user to determine whether stopping or restarting of user application code is safe and appropriate.



Whether or not the user application code automatically executes upon powerup or reset can also be controlled. The two options are operation under manual mode, in which case the user's code will not begin execution until an explicit start command is given, and auto-start, where the code automatically begins execution from power up or reset. The PRP action **Set** sent to the **CMotionEngine** resource allows setting of the user code start mode.

In addition to these functions, it is also possible to determine whether the user application code is presently running or not. This status information may be useful during code debugging, or to help diagnose problems. This capability is accessed via a **Get** action sent to the **CMotionEngine** resource.

For a detailed description of the supported Prodigy/CME commands see the *Prodigy/CME Programmer's Reference*.

2.4.4 Sending Messages to/from User Application Code

A common function of user application code running on the C-Motion Engine is to parse command messages sent to it by a host controller. For example a user might write code for the C-Motion Engine that responds to an "Extend

Robot Arm” command sent by the host controller, and then send a series of commands to the Magellan Motion Processor to execute this motion sequence. At the end of the motion sequence the user application code might send an “Arm Extended” message confirming the movement sequence has completed.

One method of achieving this is to use the Prodigy/CME PC/104 card’s peripheral mechanism described in Section 3.2.1, “Peripheral Connections,” on page 60 to open, and operate, a low-level communications link via the serial, CANbus, or Ethernet link. This method has the advantage of giving relatively direct control over the communication traffic. The disadvantage is that the user has to implement specific send and receive communications in the host controller, and the C-Motion Engine needs to have similar code implemented that can process these messages.

Another method that may be more convenient, particularly during early debugging of the user’s application code, is to use a capability of the PRP system to connect directly to the user application code on the C-Motion Engine. Messages sent and received by the C-Motion Engine from a host controller are stored in a special buffer, and can be easily read or written to by the user application code. In addition, PMD’s Pro-Motion application supports a simple way of entering, sending, and/or receiving such messages. This makes it easy to manually enter commands from Pro-Motion and exercise the user application code which is programmed to parse these messages.

To utilize this approach, a PRP **Send** or **Receive** action is sent to the **CMotionEngine** resource. To receive these messages within the C-Motion Engine a special ‘user packet’ peripheral is opened. For more information see the *Prodigy/CME Programmer’s Reference*.

In addition to these communications commands, when sent to the **CMotionEngine** resource, the PRP action **NOP** performs a basic connection check. The message body is empty. A return without a PRP error code indicates that the C-Motion Engine is accessible and processing commands.

2.4.5 Connecting to the C-Motion Engine Code During Development

To develop code that is downloaded to the C-Motion Engine, a communications link is required between the C-Motion Engine and the PC-based C-Motion Engine Development Environment. This link contains the information required for code downloads, as well as other information utilized during application debugging.

While serial, CANbus, or Ethernet can all be used as the communications link during development, for the Prodigy/CME PC/104 cards, typically this link is the Ethernet bus, because it is more convenient and faster than serial and CANbus.

Selecting which Prodigy/CME PC/104 communication channel will be used for code download is specified via the C-Motion development system. For more information see the *C-Motion Development Tools Manual*.

2.4.6 Debug Console Window

During development, the user can use procedure calls similar to **printf()** from the downloaded application on the C-Motion Engine to send messages to the PC Development Environment for display in a special console window. These console messages may be useful for checking code progress, displaying internal variables, or for other code development-related purposes.

The default console channel is Serial 2, however this can be changed using the PRP action **Set** with the **Device** resource specified as Serial, CANbus or Ethernet/UDP.

2.4.7 Downloading and Verifying User Application Code

The C-Motion Engine development system is used to create, compile, and download user application code. The development system can download the file image for the current code project being worked on, or a specific named file can be downloaded. Downloaded files images end with a “.bin” extension. Only one code image file may be downloaded into the C-Motion Engine at a time. Downloading a new image automatically erases the previous code image.

There are times when it may be useful to read specific characteristics of a code file that has been downloaded into the C-Motion Engine. For example a host controller in a production environment may want to confirm that the host application code version actually loaded on the C-Motion Engine matches the expected production code version. To accomplish this, the PRP action **Get** is used, specifying a resource ID of **CMotionEngine**. Using this command the file name of the downloaded user application code, the checksum of the downloaded file, the date & time of file creation, and the version number of the C-Motion Engine itself (loaded by PMD at the Prodigy/CME factory) can be retrieved.

For complete information on the format and function of these, and other PRP actions, refer to the *Prodigy/CME Programmer's Reference*.

2.4.8 C-Motion Engine Heartbeat LED

The Prodigy/CME PC/104 card utilizes an LED, locatable using Figure 1-1 on page 15, to provide visual confirmation of C-Motion Engine activity. Two different states can be distinguished, user application code running, and user application code not running.

User application code running means that a file has been downloaded and is actively being executed by the C-Motion Engine. This is indicated by a steady on/off blinking of the LED, once per second.

If no user application code has been downloaded, or if code execution has been halted by the user or for some other reason, the LED changes to a ‘chirp’ indication, with a blinking pattern consisting of very brief on, followed by one second off.

2.5 Communications Functions

The Prodigy/CME PC/104 card provides four different port connection types, PC/104 bus, Serial, CANbus, and Ethernet. Access to these communications resources is provided via a peripheral connection. A peripheral is a resource, and is utilized by various PRP actions to send and receive messages to port connections.

Basic access to either the PC/104 bus, Serial, CANbus, or Ethernet ports is accomplished by opening a peripheral with the detailed connection parameters that will be used during communications associated with that peripheral connection, and then sending and receiving messages via the peripheral resource address.

For example to create an Ethernet TCP peripheral connection, the IP Address and port number is provided. If the connection is successfully established, that peripheral is used as the reference for any future communications through that connection.

In the subsequent sections the operational characteristics of the PC/104 bus, Serial (Serial 1 & Serial 2), CANbus, and Ethernet network communication ports will be detailed. See Section 3.2.1, “Peripheral Connections,” on page 60 for more information on the **Peripheral** resource and how it is used.

2.5.1 PC/104 Bus Communications

Prodigy/CME PC/104 cards support the PC/104 bus interface, which uses the ISA (Industry Standard Architecture) electrical interface. In the ISA bus scheme, card addressing is specified manually, via jumpers or switches on each slave card. The Prodigy/CME PC/104 card serves as the ISA bus master, and thus does not have any settable address switch settings.

Each slave card must reside at an ISA address in the range 0x000 - 0x3ff, however peripheral (slave) cards frequently reside only in the range 0x300 to 0x3ff. Typical cards utilize a block of 1 to 16 address locations specified as offsets from a 'base' address, although some use more. When installing peripheral cards on the ISA bus, care should be taken to ensure that the entire peripheral bus range supported by the slave card does not conflict with the address range utilized by other slave cards.

There are two word sizes available with the ISA bus, 8-bit and 16-bit. In addition, dedicated interrupt (IRQ) lines may be used by slave cards to signal the host of asynchronous events. The following table shows the range of base addresses, word size, and IRQs supported by the Prodigy/CME PC/104 cards:

Parameter	Supported Range
Base address	0x000 - 0x3ff
Word size	8-bit, 16-bit
IRQ	IRQ3, IRQ5, IRQ7, IRQ10, IRQ11, IRQ12, IRQ14, IRQ15

Access to the PC/104 port controller is managed using peripheral connections. See Section 3.2.1, "Peripheral Connections," on page 60 for more information on creating and using peripheral connections.

To create a PC/104 port peripheral connection, the base address, optional IRQ#, and word size is specified in the PRP action **Open** with the resource set to **Device**. Messages to and from the PC/104 bus are transmitted via the **Send** and **Receive** actions sent to the **Peripheral** resource.

For detailed information on PRP action formats and function, refer to the *Prodigy/CME Programmer's Reference*.

2.5.2 Serial 1 & Serial 2 Communications

Prodigy/CME-PC/104 cards provide asynchronous serial communications in either RS232 or RS485 mode. Access to the serial port controller is managed using peripheral connections. See Section 3.2.1, "Peripheral Connections," on page 60 for more information on creating and using peripheral connections.

In RS232 mode two serial ports are supported, referred to as Serial 1, and Serial 2. While some applications will not need to use two serial ports, the second port may be useful during C-Motion application code debugging, or to communicate with various serial devices connected to the machine. In RS485 mode, a single serial port is supported, referred to as Serial 1. Also in RS485 mode, the serial port may be operated in either half duplex or full duplex mode. Pin #1 of the J21 Serial Connector selects whether RS232 or RS485 communications mode is used. If left open (the default condition), the card operates the serial port in RS232 mode. If closed (tied to ground) the serial port is operated in RS485 mode. Note that a change in the status of this pin takes effect only after a power on or reset of the card.

Both Serial Port 1 and Serial Port 2 can be operated at various communication settings as shown in the following table. All settable serial port parameters can be programmed separately for Serial 1 and Serial 2. For RS232 communications each serial controller only allows one peripheral to be established at a time. For example if a peripheral is opened to establish RS232 communications via Serial 1, another peripheral may be opened to establish RS232 communication via Serial 2. However if a third peripheral is then opened to establish a new connection with Serial 1, the original Serial 1 peripheral will automatically be closed.

Settings & default values for Serial 1 and Serial 2:

Parameter	Range	Serial 1 Default	Serial 2 Default
Baud rate	1200 to 460,800	57,600	115,200
Parity	none, even, odd	none	none
# Data bits	5, 6, 7, 8	8	8
# stop bits	1, 2	1	1

To create a serial port peripheral connection, the above parameters are specified in the PRP action **Open** with the resource set to **Device**. Messages to and from the Serial port are transmitted via the **Send** and **Receive** actions sent to the **Peripheral** resource. Whenever a new serial port peripheral is opened its previous function is canceled. By default Serial 1 listens for PRP communications and Serial 2 is the console port.

After a reset or at power-up, the card retrieves default information for the serial ports. To change these default values, the PRP action **Set** is send with a resource of **Device**. Section 2.6.3, “Setting Card Defaults,” on page 50 describes this further.

For detailed information on PRP action formats and function, refer to the *Prodigy/CME Programmer’s Reference*.

2.5.2.1 Connections & associated signals

J17 comprises a special 10-pin dual header connector used to connect one or both serial ports. See Section 1.4, “Accessory Products,” on page 12 and Section 4.2.6, “Serial Connector,” on page 76 for a detailed signal description of the Serial connector.

2.5.3 CANbus Communications

The Prodigy/CME PC/104 card provides a general purpose CANbus port compatible with the CAN 2.0B standard which may be operated at various communication rates from 10,000 to 1,000,000 bps (bits per second). In addition, each CANbus devices is assigned two CAN identifiers (also called a addresses); one for transmission of messages, and one for reception of messages.

The following table summarizes this information along with the factory defaults for these values:

Parameter	Range	Default
Baud rate	10,000 to 1,000,000 bps	1,000,000
Host send address	0 - 0x800	0x580
Host receive address	0 - 0x800	0x600

To create a CANbus peripheral conversation, the baud rate, send address and receive address are specified in the PRP message body of an **Open** action sent to the **Device** resource. Messages to and from the CANbus port are transmitted via the **Send** and **Receive** actions sent to the **Peripheral** resource.

After a reset or at power-up, the card retrieves default information for the CANbus port. To change these default values, the PRP **Set** action is used with a resource of **Device**. See Section 2.6.3, “Setting Card Defaults,” on page 50 for more information.

For detailed information on PRP action formats and function, refer to the *Prodigy/CME Programmer’s Reference*.

2.5.3.1 Connections & associated signals

J16 is an 8-pin dual header that comprises the CANbus network connection. See Section 4.2.8, “CAN Connectors,” on page 77 for a detailed signal description of the CAN connectors.

2.5.4 Ethernet Communications

The Prodigy/CME PC/104 cards support two different Ethernet protocols, TCP (Transmission Control Protocol) and UDP (User Datagram Protocol). TCP is typically used for secure communications to the card, while UDP is typically used for non-critical applications such as data logging, or for the Pro-Motion console window. See Section 2.4.6, “Debug Console Window,” on page 44 for more information on the C-Motion Engine console window.



By convention, the 32 bit values for IP Address, Net mask, and Gateway are shown in Dotted Quad Notation. In this notation each of the four numbers are separated by dots, and denote a decimal value for each byte of the four byte word

The table below shows the range and default settings for the Ethernet controller of the Prodigy/CME PC/104 card:

Parameter	Range	Default
IP address	0.0.0.0 – 255.255.255.255	192.168.2.2
Net mask	0.0.0.0 – 255.255.255.255	255.255.255.0
Gateway	0.0.0.0 – 255.255.255.255	0.0.0.0
PRP Listen TCP Port	0 - 65,535	40100

Each physical hardware device on an Ethernet network is assigned one IP address, however, a given IP address can have multiple ports. This is useful because it allows user application code running on the C-Motion Engine to open up multiple peripheral connections by using different port numbers.

To create an Ethernet/TCP or Ethernet/UDP peripheral conversation, the IP Address and port are specified in the PRP message body of an **Open** command sent to the **Device** resource. To transfer messages via this peripheral connection the PRP actions **Send** and **Receive** sent to the **Peripheral** resource are used.

After a reset or at power-up, the card retrieves default information for the Prodigy/CME PC/104 Ethernet port. To change these default values, the PRP **Set** command is sent to the **Device** resource. See Section 2.6.3, “Setting Card Defaults,” on page 50 for a description.

For detailed information on PRP action formats and function, refer to the *Prodigy/CME Programmer’s Reference*.

2.5.4.1 TCP Connection Keep-Alive

All prodigy/CME card TCP connections, including the PRP communications port, use a ‘keep-alive’ mechanism to detect whether a connection is still valid.

The keep-alive mechanism is a standard part of the TCP protocol specification, and is useful for preventing the prodigy/CME card from leaving connections open if the host has not properly closed a connection. This may occur, for example, if the host has been physically disconnected, or otherwise stops functioning.

The default keep-alive parameters for the Prodigy/CME cards are:

Parameter	Range	Default
idle time	0 - 65,535 seconds	60 seconds
interval time	not settable	30 seconds
retry count	not settable	2

The *idle time* is the amount of time after the last message on the port that must occur for a ‘keep-alive’ message to be sent. When sent, the keep-alive message requests the host connection to acknowledge that it is still functioning properly. If it provides this acknowledgment, the *idle time* counter is reset to 0. If it does not, a second ‘keep-alive’ message will be set after the *interval time*, and this will be repeated a total of *retry count* number of times. If the host ultimately does not correctly respond, the Prodigy/CME connection will automatically be closed.

Note that all of these functions are handled automatically by the Prodigy/CME card's TCP processing system, and should in turn also automatically be handled by the host's TCP system. No user action is required to initiate or monitor these automatic TCP 'keep-alive' messages.

To change the default value of the keep-alive idle time a **Set** command is sent to the **Device** resource. A value of 0 indicates that the keep-alive mechanism should be disabled.

For detailed information on PRP action formats and function, refer to the *Prodigy/CME Programmer's Reference*.

2.5.4.2 Ethernet status LED

Using Figure 1-1 on page 15 two Ethernet status LEDs are locatable, one amber in color, and one grey in color. These LEDs provide information on the status of the Ethernet link. A solid green LED indicates that a link exists (there is a transceiver connected on the 'other side' of the connection, and a blinking green LED means that data is being transmitted. The Amber LED indicates that a 100 Mbps (mega bits per second) network is in use. No Amber LED indicates that the network is at 10 Mbps.

2.5.4.3 Connections & associated signals

The Ethernet connector is a 10-pin dual header and is located at J24.

2.5.5 Cable Connections

The serial, CANbus, and Ethernet connectors of the Prodigy/CME PC/104 card are dual header style, which are suitable for connection to converters for use in a typical PC/104 chassis frame, however they are not suitable for directly connecting to typical serial, CANbus, and Ethernet networks. PMD provides a number of cable options to accomplish this conversion either during prototyping, or for your production products. The subsequent sections detail typical cable connections for these networks.

2.5.5.1 RSR232 serial cable connections

Serial 1 and Serial 2 may be accessed using PMD's off-the-shelf cable accessories. Cable-4301-01.R has a 10-pin header that plugs into the Prodigy/CME PC/104 Serial Connector (J17) and converts to a single female DB-9 output with dual serial signals. Cable-4355-01.R is a "Y" cable that plugs into this cable, and converts to two DB-9 connectors suitable for connection to a PC serial port or USB-to-serial converter.

2.5.5.2 CANbus cable connections

The Prodigy/CME's CANbus port may be accessed using PMD's off-the-shelf cable accessories. Cable-4701-01.R has an 8-pin header that plugs into the Prodigy/CME PC/104 CANbus Connector (J16) and converts to an RJ45 output. This RJ45 then plugs into Adapt-RJ45T-01.R, which is a small splitter that duplicates the CANBus RJ45 connections into two identical RJ45 connectors.

Cable-RJ45-02-R is a standard straight-thru RJ45 cable that plugs into a network socket. If additional nodes will be added then no terminator is used. If this node will be the last node on the CANbus network, TRM-RJ45-02.R should be inserted into one of the two RJ45 sockets.

2.5.5.3 Ethernet cable connections

The Ethernet port may be accessed using PMD's off-the-shelf cable accessories. Cable-4505-01.R has a 10-pin header that plugs into the Prodigy/CME PC/104 Ethernet Connector (J15) and converts to an RJ45 output. This cable can then be directly plugged into the Ethernet network socket.

2.6 General Card Functions

2.6.1 Connection Check

When sent to the **Device** resource, this PRP action **NOP** performs a basic connection check to the Prodigy/CME PC/104 card. A return without a PRP error code indicates that the Prodigy/CME PC/104 card is accessible and processing commands.

2.6.2 Reset

Although a reset occurs automatically during power-up, it is sometimes desirable to reset the Prodigy/CME PC/104 card explicitly through a user-initiated command or action. This can be done in one of two ways. The first is via the PRP action **Reset** sent to the **Device** resource. The second method is via the external signal **Reset**, located at pin 91 of the GP Connector.

After a card reset occurs the Magellan Motion Processor and the C-Motion Engine modules will be reset, and many of the Prodigy/CME PC/104 card's output signals will be driven to known states. These are summarized in the following table:

Signal Name	State
AxisOutI-4	High
PWMMagIA-4C	Low
PWMSignIA-4B	Low
DACIA-DAC4B	0.0 volts
DigitalOut0-7	Low
AmpEnableI-4	Low
DAC On/Off	Off
Watchdog Timer	Disabled

In addition, upon a card reset all card default parameters are reloaded. See Section 2.6.3, "Setting Card Defaults," on page 50 for more information on default values.

2.6.2.1 Connections & associated signals

The reset feature has an external signal input, **Reset**, associated with it. This active low signal is located on pin 91 of the GP Connector. It is pulled up through a 4.7 kOhm resistor to 5 V. In addition, all of the signals in the table above are affected by a card reset.

2.6.3 Setting Card Defaults

There are a number of user-settable parameters that are saved by the card in non-volatile RAM, and that are utilized after a power up, or after a card reset. The following table shows these parameters, and provides the initial factory default values:

Parameter	Factory default value
Ethernet Communications	
IP Address	192.168.2.2
Net Mask	255.255.255.0
Gateway	0.0.0.0
PRP Port	40100
Serial Communications	
Serial 1 settings	57600, no parity, 8 data bits, 1 stop bit
Serial 2 settings	115200, no parity, 8 data bits, 1 stop bit

Parameter	Factory default value
RS485 duplex	Full
CANbus Communications	
Baud Rate	1,000,000
Send Address	0x580
Receive Address	0x600
Task Control & User Application Code	
Auto start (y/n)	Yes
Console channel	Serial 2

To change the default values used by the card the PRP action **Set** sent to the **Device** resource is used. To read back the current default parameters stored in the card the action **Get** is used. For detailed information on the format of these PRP messages consult the *Prodigy/CME Programmer's Reference*.

2.6.4 Dual-Ported RAM (Trace Buffer)

The Prodigy/CME PC/104 cards have 64 KBytes of on-card dual-ported memory (DPRAM) which is interfaced to the Magellan Motion Processor as well as directly to the Prodigy/CME PC/104 card's communications bus. Typically, the dual-ported RAM is used to capture trace data from the Magellan Motion Processor. In this mode, its dual-port configuration allows for high bandwidth access via the communications bus using PRP actions without affecting Magellan command traffic. For more information on using the Magellan's trace capability, see the *Magellan Motion Processor User's Guide*.

The Magellan Motion Processor can be programmed to store information into the trace buffer using virtual buffers of various sizes. Thus to correctly read the contents of the dual-ported RAM when used in this mode, you must know the memory organization of the Magellan's trace function. See the *Magellan Motion Processor User's Guide* for details.

Another potential use of this RAM buffer is as a general purpose memory or register-based communications portal. Since the dual-ported RAM is a resource addressable through the PRP system, the originator of the data, as well as the retriever of the data, can be any device on, or external to, the card. While there are several possible ways to utilize the dual-ported RAM in this way, the most common configuration is for the user application code of the C-Motion Engine to collect and store data to the dual-ported RAM buffer, and to have an external host controller read it.

To read or write to the dual-ported RAM using the PRP system, a resource address must first be obtained by sending the **Open** action to the **Memory** resource. This resource address is used for all further access to the RAM. To write data to the dual-ported RAM, the action **Write** is sent to the memory resource. To read the contents of the dual-ported RAM, the action **Read** is used. Note that byte-sized memory operations are not supported to the dual-ported RAM.

The contents of the dual-ported RAM are volatile. They are not saved during power-down of the card.



For complete information on the format and function of these, and other PRP actions, refer to the *Prodigy/CME Programmer's Reference*.

2.6.5 Non-volatile Memory

The Prodigy/CME PC/104 cards have a general purpose 4,094 byte memory that retains its contents after a card power down or reset. This memory is useful for storing parameters that are set only occasionally, and stay with the card, such as machine calibration information.

Accessing the non-volatile memory is accomplished in the same manner as accessing the dual-ported RAM, except that the NVRAM memory type is specified, instead of the DPRAM memory type. Addresses are specified from 0 to 4,093. When writing to this memory, a typical write takes 30 μ Secs, however under certain circumstances it can take

much longer, up to several 100 mSec. Read speed is the same as for other Memory resources, and takes just a few nanoseconds. As for the dual-ported RAM, byte-size memory operations are not supported by the non-volatile memory. The smallest memory unit that can be accessed is 16 bits.

The non-volatile memory can be rewritten a limited number of times. The worst case write limit cycle is 100,000 times for a given memory address, but in typical operation, the limit is much higher. As a general guideline, to avoid erase/write cycle limit problems, the non-volatile RAM should not be used for general purpose scratch RAM, and should only be used to store permanent or semi-permanent parameters.

For complete information on the format and function of these, and other PRP actions, refer to the *Prodigy/CME Programmer's Reference*.



The typical write time to the non-volatile RAM is 30 μ Sec, however it may take as long as several 100 mSec. If other portions of the user application code, or any other PRP-connected device, depends on these values having been written, it is recommended that you ensure that the write operation has completed by adding code that explicitly checks the value, or by waiting a fixed period of time after the NVRAM write operation

2.7 Signal Processing and Hardware Functions

These functions are implemented in hardware and are not directly user-programmable. The following sections are organized into related groups of signals, and provide information which may be helpful when connecting the motion system.

2.7.1 Home, AxisIn, AxisOut, Limits, Hall Sensors

These signals are conditioned by the card, and then input or output directly to the Magellan Motion Processor. The *Magellan Motion Processor User's Guide* explains the functions provided in connection with these various signals. Most of the signals are optional, and are connected depending on the nature of the application.

These signals are named *HomeI-4*, *AxisInI-4*, *AxisOutI-4*, *PosLimI-4* (positive direction limit input), *NegLimI-4* (negative direction limit input), and *HallIA-4C* (12 signals in all).

2.7.1.1 Connections & associated signals

These signals are single-ended digital inputs to the card, with the exception of *AxisOut*, which is a single-ended output. There are no associated connections required for these signals to function properly, however, one or more of the digital grounds must be connected. The input signals are pulled up through 4.7 kOhm resistors to 5V. The default power-up value for all *AxisOut* signals is high.

See Chapter 4, *Electrical Reference*, on page 69 for a complete description of the pinout connections to and from the card.

2.7.2 QuadA, QuadB, Index

These signals provide position feedback to the motion controller which is used to track motor position. For DC brush and brushless DC motors, they are required for proper operation. For microstepping or step (pulse & direction) motors, they are optional.

The encoder-processing circuitry provides a multi-stage digital filter of the *QuadA*, *QuadB*, and *Index* signals for each axis. This provides additional protection against erroneous noise spikes, thus improving reliability and motion integrity. These signals are named *QuadA1+* through *QuadB4-* (16 signals), and *Index1+* through *Index4-* (8 signals).

2.7.2.1 Connections & associated signals

These signals can be connected in one of two ways. Single-ended means that only one wire per signal is used, while differential means two wires encode each signal (labeled + and -). Differential transmission is generally recommended for the highest level of reliability, because it provides greater noise immunity than a single-ended connection scheme.

If single-ended connections are used, only the + signal is connected, and the - signal should be left floating. For example, in connecting to the A quadrature input, *QuadA1+* connects to the signal, and *QuadA1-* remains floating. If differential connections are used, both the + and - signals are used. Differential or single-ended termination must be selected through resistor pack installation. See the table in Section 1.8, “Preparing the Card for Installation,” on page 14 for details.

When using the system with differential connections, the polarity of the differential signal can be reversed by swapping the + and - connections. This may be useful for altering the motor and/or encoder direction; however, this same function can also be accomplished through commands to the Prodigy/CME PC/104 card. See the *Magellan Motion Processor User's Guide* for more information. Associated connections supported by the card are the +5V output signals. These are provided as a convenience, as they are generally connected to a corresponding input on the encoder to power its internal circuitry. As was the case for the digital input signals, one or more of the digital grounds must also be connected.

See Chapter 4, *Electrical Reference*, on page 69 for a complete description of the pinout connections to and from the card.

2.7.3 Analog Input

The *AnalogI-8* signals provide general purpose input of up to eight analog signals. The voltages present at these various connections do not directly affect the Prodigy/CME PC/104 card's behavior. However, they can be read through the Prodigy/CME PC/104 card, thus providing a convenient way of importing analog signal levels which may be acted upon by the user's application code located on the host PC. These signals are read using the Magellan command **ReadAnalog**. For more information on reading the value of these analog inputs, see the *Magellan Motion Processor User's Guide*. The minimum allowed input voltage is 0.0V, and the maximum allowed input voltage is 3.3V. To determine the numerical value that will be read by the Prodigy/CME PC/104 card given a specific voltage, the following formula is used:

$$\text{ReadValue} = \text{AnalogVoltage} * 65,536 / 3.3\text{V}$$

Conversely, given a read value, the voltage at the connection is calculated as:

$$\text{AnalogVoltage} = \text{ReadValue} * 3.3\text{V} / 65,536$$

2.7.3.1 Connections & associated signals

For analog voltages to be read correctly, in addition to the analog signal itself, *AnalogGND* (analog ground) must be connected.

2.7.4 Pulse and Direction

For pulse & direction applications, these signals provide a stream of pulse and direction data, and are compatible with a wide variety of off-the-shelf step motor amplifiers. These signals are generated by the Magellan Motion Processor and are named *Pulse1-4* and *Direction1-4*. The default value at power-up and reset for all pulse and direction output signals is: pulse signal is high; direction signal is low.

2.7.4.1 Connections & associated signals

Both single-ended and differential line driver versions of these signals are output from the Prodigy/CME PC/104 card. There are no associated connections required for these signals to function properly, however, one or more of the digital grounds must be connected. See Chapter 4, *Electrical Reference*, on page 69 for a complete description of the pinout connections to and from the card.

2.7.5 PWM Out

For DC brush, brushless DC or microstepping motors, these signals provide PWM (pulse width modulated) motor command signals when the motor output mode is set to **PWMSignMagnitude** or **PWM5050Magnitude**. The number of signals per axis varies, depending on factors such as the motor type, the number of phases of the motor, and the motor drive method (sign/magnitude or 50/50). See Chapter 4, *Electrical Reference*, on page 69 for complete connection tables for various motor configurations.

These signals are named *PWMMagIA-4C* (12 signals) and *PWMSignIA-4B* (8 signals).

2.7.5.1 Connections & associated signals

These signals are generated by the Magellan Motion Processor. There are no associated connections required for these signals to function properly, however, one or more of the digital grounds must be connected. See Chapter 4, *Electrical Reference*, on page 69 for a complete description of the pinout connections to and from the card.

2.7.6 DAC Out

For DC brush, brushless DC or microstepping motors, this is the analog motor command when the motor output mode is set to DAC Offset Binary (digital-to-analog converter). These signals are named *DACIA - DAC4B* (8 signals), and vary between -10V and +10V. The number of signals per axis depends upon the motor type. See Section 4.5, “Environmental and Electrical Ratings,” on page 85 and the *Magellan Motion Processor User's Guide* for more information.

2.7.6.1 Connections & associated signals

For analog voltages to be output correctly, **AGND** (motor command ground) must be connected. See Chapter 4, *Electrical Reference*, on page 69 for a complete description of the pinout connections to and from the card.

2.8 Software Libraries

PMD provides software libraries in C/C++ as well as Visual Basic to access all of the functions provided by the Prodigy/CME PC/104 cards. In addition, a special library of commands is used to access Magellan Motion Processor functions called VB-Motion, and C-Motion.

The *Prodigy/CME Programmer's Reference*, in addition to providing detailed format and function descriptions of the PRP messages associated with the Prodigy/CME PC/104 cards, also provides the equivalent C and Visual Basic library calls. There is often, but not always, a direct correspondence between PRP messages and C language software commands as they will be used for user application code to be executed in the host controller, or in the C-Motion Engine.

2.8.1 C Language Code Running on the C-Motion Engine

One of the most powerful features of the software libraries provided for the Prodigy/CME PC/104 card is that the code sequence used to accomplish a specific function such as accessing the dual-ported RAM, or sending commands to the Magellan Motion Processor, does not change whether the code is compiled for execution on the host controller, or for execution on the C-Motion Engine.

This allows motion control applications developed using C-Motion on a host computer to be easily ported to the Prodigy/CME PC/104 card. The C-Motion Engine provides a C programming environment for motor control without requiring the time-consuming development of the entire embedded framework. Only the part unique to a specific motor control application must be provided.

For a complete description of the C-language commands supported by the Prodigy/CME PC/104 card see the *Prodigy/CME Programmer's Reference*. For a complete description of Magellan C-Motion commands, see the *Magellan Motion Processor Programmer's Command Reference*. For a detailed description of how to develop, download, and monitor user application code for the C-Motion Engine see the *C-Motion Development Tools Manual*.

This page intentionally left blank.

3. Accessing Card Resources

In This Chapter

- ▶ Resource Addressing
- ▶ Accessing the Communications Ports
- ▶ Accessing On-Card Resources
- ▶ Accessing Magellan-Attached Devices
- ▶ PRP Communication Formats

3.1 Resource Addressing

The Prodigy/CME PC/104 card's various features and capabilities are organized into groups called 'resources.' For example, to communicate with the Prodigy/CME PC/104 card's Magellan Motion Processor, the host controller sends a command to the **MotionProcessor** resource.

To address different types of resources, the Prodigy/CME PC/104 cards provides a general purpose resource addressing scheme called the *PMD Resource access Protocol* (PRP). PRP is a sophisticated general purpose addressing scheme that allows:

- one or more host controllers to communicate with Prodigy/CME PC/104 cards
- Prodigy/CME cards to communicate with each other
- Prodigy/CME cards to communicate with other PMD products such as IONs and non-/CME Prodigy cards
- Prodigy/CME cards to communicate with user-designed hardware, or other off-the-shelf hardware.

3.1.1 PMD Resource Access Protocol (PRP)


The core of the PMD Resource access Protocol is a header that accompanies all PRP communications. Figure 3-1 on page 58 shows the format of the resource access protocol header. The PRP header is a single 16-bit word divided into five fields. Normally, the PRP header is immediately followed by a message body, but there are certain communications that do not require a message body. PRP headers are used in both the outgoing, and the response packet. The returned PRP header is 1 byte in length, consisting of the version field, the status code field, and 4 reserved bits.

**Figure 3-1:
Outgoing and
Returning PRP
header formats**

Outgoing PRP Header



Return PRP Header

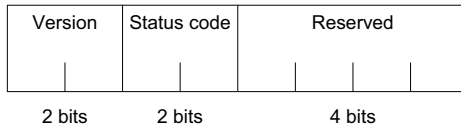

The majority of communications to/from the host controller and the Prodigy/CME PC/104 card use the PRP header. Exceptions are 'low-level' communications sent or received directly from the Serial, CANbus, or Ethernet ports. See Section 3.2, "Accessing the Communications Ports," on page 59 for more information.

PRP header field descriptions:

Version - This two bit field encodes the version of PRP being used. The value of this field for the Prodigy/CME PC/104 card should always be 1 (binary 01) unless documentation included with your Prodigy/CME PC/104 card indicates otherwise.

Status code - For PRP commands being sent out, this 2-bit field should contain the value 2. When received, a return value of 0 indicates that this message is a normal response to an outgoing PRP command, a return value of 1 indicates that an error occurred during PRP command processing, and a value of 3 indicates that this is an asynchronous event message originated by the Prodigy/CME card or by a device attached to the card. Each of these different response status codes may have information loaded in the PRP message body. See the *Prodigy/CME Programmer's Reference* for more information.

Action - This 4-bit field contains an action identifier that is used to process PRP messages. See Section 3.1.3, "PRP Actions," on page 59 for a summary of the PRP actions supported by the Prodigy/CME PC/104 card. This field is not used in the return PRP header.

Resource - This 3-bit field encodes the specific resource being addressed. See the table in Section 3.1.2, "PRP Resources," on page 59 for the complete resource map of the Prodigy/CME PC/104 card. This field is not used in the return PRP header.

Address - This 5-bit field encodes the address of the particular resource being communicated to. Fixed addresses allow on-card resources to be addressed. See the table in Section 3.1.2, "PRP Resources," on page 59 for a resource map of these addresses. Automatically assigned addresses are used to access attached devices, and are also used to create peripheral connections, which are communication 'conversations' between the Prodigy/CME PC/104 card and another device. This field is not used in the return PRP header.

The following sections provide general information on the PRP system. For a detailed description of the PRP header, resources, and supported actions, see the *Prodigy/CME Programmer's Reference*.

3.1.2 PRP Resources

The Prodigy/CME PC/104 card supports five different resource types, each of which is identified by a specific Resource ID. In addition each available resource has an Address. The following table summarizes these Resource IDs and Addresses for the on-card Prodigy/CME PC/104 resources:

Resource Name	Resource ID	Address	Comments
Device	0	0	The Device resource indicates a Prodigy/CME card.
CMotionEngine	1	0	The CMotionEngine resource indicates a C-Motion Engine.
MotionProcessor	2	0	The MotionProcessor resource indicates a Magellan Motion Processor.
Memory	3	0	The Memory resource indicates a dual-ported RAM (random access memory).
Peripheral	4	0	The Peripheral resource indicates a communications connection. A peripheral address of 0 indicates a 'null' peripheral. See Section 3.2.1, "Peripheral Connections," on page 60 for more information.

3.1.3 PRP Actions

The Prodigy/CME PC/104 card supports ten different actions, each of which is identified by a specific Action ID. In addition, many actions have sub-actions associated with them that are loaded into the PRP message body. For more information on actions, sub-actions, and the exact format by which the message body should be loaded, see the *Prodigy/CME Programmer's Reference*. The following table summarizes the Action IDs for the Prodigy/CME PC/104 cards:

Name	Action ID	Used by Resource	Comments
NOP	0	All	The No Operation (NOP) command is used to verify connection to a given resource.
Reset	1	Device, MotionProcessor	Resets the specified resource.
Command	2	MotionProcessor, CMotionEngine	Sends a command to the specified resource.
Open	3	Peripheral, Device	Creates a new addressable resource. Resource addresses created using the Open action are not fixed, they are assigned automatically at the time a connection is requested.
Close	4	Peripheral, Device, MotionProcessor	Closes a resource created by Open, freeing the automatically-assigned address. Used when a resource is no longer needed.
Send	5	Peripheral, C-Motion Engine	Sends a message to the specified resource.
Receive	6	Peripheral, C-Motion Engine	Receives a message from the specified resource
Write	7	Memory	Writes a data word to a memory resource
Read	8	Memory	Reads a data word from a memory resource
Set	9	Device, CMotionEngine	Sets parameters for a specified resource
Get	10	Device, CMotionEngine	Get parameters for a specified resource

3.2 Accessing the Communications Ports

Figure 2-1 on page 32 shows an internal block diagram of the Prodigy/CME PC/104 card. Routing of communications within the card is accomplished via a high-speed communications bus. This bus interconnects resources within the card including the Magellan Motion Processor, the C-Motion Engine, and the Dual-ported RAM.

External communications use this same bus to access the serial, CANbus, or Ethernet communication ports. This means that commands to card resources may originate from outside the card via the serial, CANbus, or Ethernet ports, or internally, via the C-Motion Engine.

A powerful feature of the Prodigy/CME PC/104 card's communication bus is that it can process multiple communication requests simultaneously. For example the C-Motion Engine can be used to send motion commands to the on-card Magellan Motion Processor, while an external host controller can communicate to the same Magellan via the Ethernet port to monitor progress of the moves, and display results on a remote capture/analysis program such as PMD's Pro-Motion software.



While it is allowed to have more than one communications channel send motion commands to the Prodigy/CME PC/104 card's Magellan Motion Processor and another channel send monitoring-related requests, it is not advisable to have multiple communication channels send motion commands to the Magellan at the same time. This may result in unexpected or unsafe motion.

3.2.1 Peripheral Connections

The Prodigy/CME PC/104 card provides four different programmable network connection types, PC/104 bus, Serial, CANbus, and Ethernet. These communication resources are represented in PRP by a construct called a peripheral connection. A peripheral is a resource (resource ID: 4), and is provided, or utilized, by various PRP actions to send and receive messages to network connections.

Obtaining access to either the PC/104 bus, Serial, CANbus, or Ethernet port is accomplished via the PRP **Open** action. This action opens a peripheral by specifying a sub-action of **OpenISA**, **OpenSerial**, **OpenCAN**, or **OpenTCP** or **OpenUDP**, as well as the detailed connection parameters that will be used during communications with that specific peripheral connection. Each new open peripheral connection receives an automatically assigned address. The application code that requests the new peripheral connection must record that provided address for future use, and it is this address that is used within the PRP message to reference the newly created peripheral connection.



Automatically assigned addresses generally increment by one each time they are assigned, however this should not be assumed. The exact return address value should be stored and only that value should be used to reference that specific peripheral. Each **Peripheral** Open action is specific to the type of connection being requested. For example there is an 'open peripheral' command for CANbus communications, one for Serial communications, and so on.

To send a message to the new peripheral connection, a timeout parameter and the desired message is loaded into the PRP message body and the **Send** action is specified. To retrieve messages from that peripheral connection the **Receive** action is used. The **Receive** action requires that an amount of time (the communication timeout) be loaded into the message body. If a message is not received in the specified amount of time an error is returned.

Example

Figure 3-2 on page 61 shows a network configuration. The host controller needs to initiate, send and receive a message to/from a specific device connected on the CANbus port.

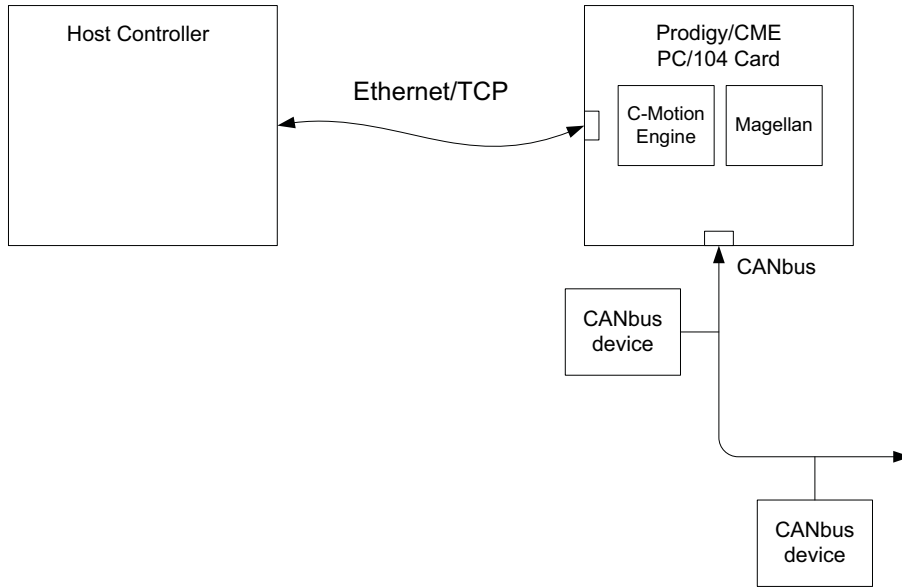


Figure 3-2:
Example
Network
Configuration

This sequence will be accomplished in three steps. PRP messages will be assembled that comprise the **Open** action, and then in turn the **Send** and **Receive** actions. As for all PRP messages, the resource ID, the address, and the Action ID must be specified. In this example, to start the sequence the Resource is a 4 specifying a **Peripheral**, the Action ID for **Open** is 2, and the PRP address will be loaded with a 0. The message body is loaded with a code for the sub-action **OpenCAN** as well as the detailed CANbus communications parameters to establish the connection such as baud rate, send address, and receive address. For the exact message body of this and all PRP actions refer to the *Prodigy/CME Programmer's Reference*.

To simplify the nomenclature for PRP messages, a shorthand will be used which contains the mnemonic 'PRP,' the Resource ID, the string 'Addr,' the resource address, and the PRP action. Any additional information pertaining to the error code or message body will be contained in the comment for the message.



```

NewPeriphID = PRP Device, Addr 0, Open // Send a request to open a connection to the device being
// addressed via the CANbus port.
// The Message body contains the detailed CANbus parameters
// for that connection.
// The Address of the new Peripheral connection is contained in
// the body of the return message.

PRP Peripheral, Addr NewPeriphID, Send // Send a message, contained in the message body, to the CAN
// bus connection created using the Open command. Note that
// the Peripheral address provided in the previous command is
// used to identify which Peripheral connection the message
// should be sent to.

PRP Peripheral, Addr NewPeriphID, Receive // Receive a message. The string will be contained in the message
// body of the return message, from the CANbus Peripheral
// connection.
    
```

Sending a message to the **Peripheral** resource at address 0 has special meaning as the ‘null’ peripheral. This peripheral address indicates ‘no peripheral,’ and may be useful in certain situations for disabling console messages, or disabling the Magellan’s event output mechanism.

3.2.2 Managing Automatically Assigned Addresses

Although most network configurations are created once and left in place while the machine is operating, there may be circumstances where peripheral connections are made, and are then no longer needed. If this is the case, these connections should be ‘closed,’ thereby freeing that automatically assigned **Peripheral** address. This is accomplished via the PRP action **Close**.

Figure 3-3 shows a Prodigy/CME PC/104 card being used as a production Ethernet device exerciser.

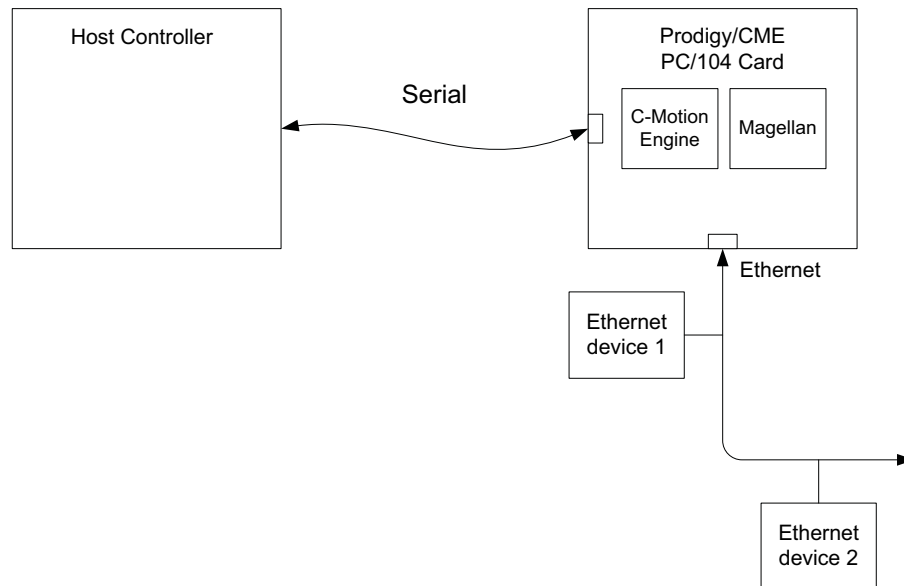


Figure 3-3:
Example
Prodigy/CME
PC/104
Architecture
with Ethernet
Device Testers

In this example the Prodigy/CME card sends messages to two different Ethernet/TCP addresses and then closes those peripheral connections to allow the process to be repeated indefinitely.

```

PeriphID1 = PRP Device, Addr 0, Open           // Open a peripheral connection to Ethernet device 1
PRP Peripheral, Addr PeriphID1, Send           // Send a test string to Ethernet device 1
PeriphID2 = PRP Device, Addr 0, Open           // Open a peripheral connection to Ethernet device 2
PRP Peripheral, Addr PeriphID2, Send           // Send a test string to Ethernet device 2
PRP Peripheral, PeriphID2, Close               // Close peripheral connection for Ethernet device 2
PRP Peripheral, PeriphID1, Close               // Close peripheral connection for Ethernet device 1
  
```

For complete information on the format and function of these, and other PRP commands, refer to the *Prodigy/CME Programmer's Reference*.

3.3 Accessing On-Card Resources

The most common use of the Prodigy/CME PC/104 card is to process commands to resources located on the card itself. Typically this means communicating with the on-card Magellan Motion Processor, but it can also mean communicating with other Prodigy/CME PC/104 on-card resources such as the dual-ported RAM. Figure 3-4 shows this configuration.

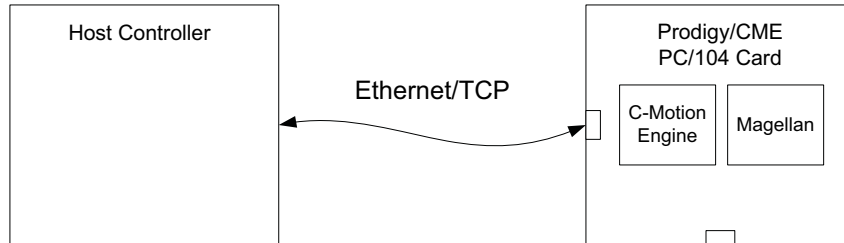


Figure 3-4:
Host Controller
& On-card
Resources

Accessing on-card resources is straightforward using the PRP system. The on-card resource and the address are looked up using the table in Section 3.1.2, “PRP Resources,” on page 59 and then a PRP message corresponding to the desired action is sent using those on-card resource and address values. The following example illustrates:

Example 1: A Host Controller wants to set the position of Axis 3 of the Prodigy/CME PC/104’s on-card Magellan Motion Processor to a value of 0x123456.

From the table in Section 3.1.2, “PRP Resources,” on page 59 to communicate with the on-card Magellan Motion Processor, a PRP message is sent to Resource ID 2 (corresponding to the **MotionProcessor** resource), to address 0 (corresponding to the Prodigy/CME PC/104’s on-card Magellan), with an action ID of 2 (corresponding to the **Command** action). The message body is loaded with the Magellan packet corresponding to “Set Position, #3 0x123456,” which is the 3-word sequence 0x210, 0x0012, 0x3456.

```
PRP MotionProcessor, Addr 0, Command // Send a command to the on-card Magellan Motion Processor. Message
// body contains Magellan Command "SetPosition #3, 0x123456"
```

Upon processing of this command, the host would receive a PRP message back. A zero in the status field would indicate that no error occurred. If this is the case the message body will be empty. If an error did occur, then the PRP status field would contain a 1, and the message body would contain the specific error code that occurred.

Example 2: The Host Controller reads the 32-bit word value of address 0x100 from the Prodigy/CME PC/104’s dual-ported RAM

Here is the command that would be sent:

```
PRP Memory, Addr 0, Read // Send a 'Read' action (ID: 7) to the PRP Memory Resource (ID: 3),
// address 0 (the address of the Prodigy/CME PC/104 on-card dual-
// ported RAM). The PRP message body contains a sub-action of 0,
// specifying a 32 bit word read, followed by 0x100 the address of the
// 32 bit word to read from the dual-ported RAM.
```

Upon successfully processing this command, the host would receive the 32-bit contents of memory location 0x100 in the message body.

Note that the PRP message to send a Magellan command packet did not use a sub-action code in the message body, while the **Read** command sent to the dual-ported RAM did. Whether or not a sub-action is required, and what the codes are for various sub-actions, is action-specific, and sometimes resource-specific. *The Prodigy/CME Programmer's Reference* provides exact message body information for each PRP action and (if applicable) sub-action.

Note also that in this discussion of sending PRP messages to the Prodigy/CME PC/104 card, the specific communications channel to the card (serial, CANbus, Ethernet) was not discussed. That is because the PRP header and message body are the same regardless of how transmission occurs. Depending on the network type used, those varying communication links will send, receive, and process errors for packet communications in different ways, but from the 'perspective' of the PRP system, those message transmission details are handled automatically. This is a very powerful characteristic of the PRP system, and we will see additional examples of similar 'access virtualization' as we discuss more advanced network topologies.



To actually send a PRP command over a serial, CANbus, or Ethernet network, specific protocols must be observed. See Section 3.5, "PRP Communication Formats," on page 66 for this network-specific (serial, CANbus, or Ethernet) information.

3.4 Accessing Magellan-Attached Devices

Section 3.2.1, "Peripheral Connections," on page 60 provided information on how general purpose messages can be sent to, or received from, any of the Prodigy/CME PC/104 card's network ports. This level of low-level access can be useful to communicate with a wide variety of custom-created or off-the-shelf products that are capable of communicating on that bus.

If the attached device is a PMD device however, such as an ION or non-/CME Prodigy PC/104 card (PR825xx20 family and PR925xx20 family) then it is possible to integrate these devices into the PRP access network so that they can be communicated to without using low-level peripheral send and receive commands.



IONs and non-/CME Prodigy PC/104 cards are referred to as 'Magellan-Attached' devices because the network directly connects to the Magellan Motion Processor, and utilizes the Magellan's own communication protocols for receiving commands and returning data along the communication link.

Figure 3-5 on page 65 provides an example of a setup where a Prodigy/CME PC/104 card is connected via Ethernet to a host controller, and where a second non-CME Prodigy-PC/104 card is attached to the PC/104 bus.

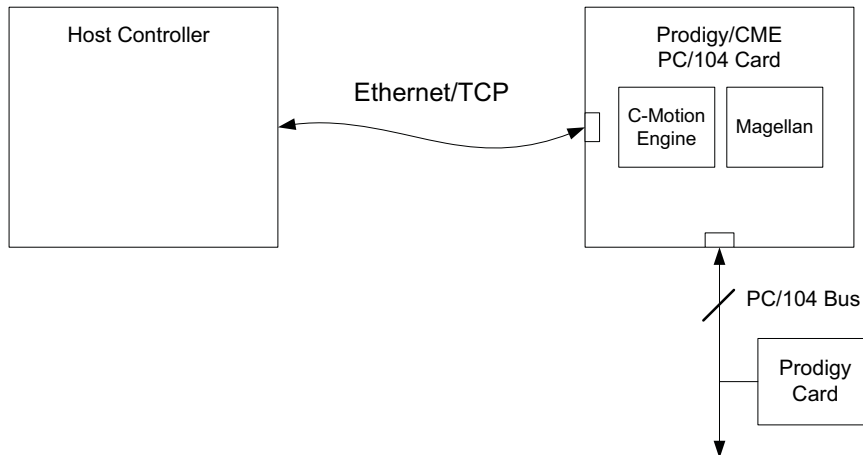


Figure 3-5:
Host Controller
& Magellan-
attached
Devices

In this ‘bridge’ configuration, the host controller (or the Prodigy/CME PC/104 card’s C-Motion Engine) can access the PC/104-connected Prodigy card very similarly to the way in which the on-card Magellan is addressed. To accomplish this however, a different method is used to create access to the Magellan compared to the method described for on-card Magellan access in (see Section 3.3, “Accessing On-Card Resources,” on page 63 for details).

Rather than sending PRP messages to the on-card **MotionProcessor** resource, first a raw peripheral connection is opened, and then the **Open** action with a sub-action of **MotionProcessor** is used to open a new **MotionProcessor** resource. The following PRP code sequence illustrates:

```

NewPeriphID = PRP Device, Addr 0, Open      // Open an ISA peripheral connection to connect to the slave
                                           // Prodigy-PC/104 card
NewMtnProcID = PRP Peripheral, Addr NewPeriphID, Open
                                           // Use the opened peripheral connection to create a new
                                           // MotionProcessor resource using the Open action with
                                           // sub-action specifying MotionProcessor. A new MotionProcessor
                                           // resource address is loaded into the message body
PRP MotionProcessor, Addr NewMtnProcID, Command
                                           // Send Magellan command packet to the slave Prodigy-PC/104's
                                           // Magellan Motion
                                           // Processor using the standard method of communicating with
                                           // MotionProcessor resources
  
```

Note that as the command sequence above shows, after the new **MotionProcessor** resource addresses are created using the **Open** action, subsequent Magellan commands to the slave Prodigy-PC/104 are identical in format to commands to the on-card Magellan. This illustrates a very powerful feature of the PRP system which is that it allows resources to be addressed transparently by the host controller (or C-Motion Engine module), making it easy to create and access networks of PMD products.

Note also that the **Open** action can be used with different resource types. In Section 3.2.1, “Peripheral Connections,” on page 60 it was used with a resource type of **Device** to open a peripheral connection. In the above example it was used with a resource type of **Peripheral** to open a connection to a Magellan Motion Processor.

3.5 PRP Communication Formats

The following sections discuss how PRP messages should be formatted on the Serial, CANbus, and Ethernet networks so that they can be properly interpreted by the Prodigy/CME PC/104 card. Note that PRP messages from a host are not sent over the PC/104 bus, because the Prodigy/CME PC/104 card acts as the bus master. Communication via PRP from a host to the Prodigy/CME PC/104 card occurs via Serial, CANbus, or Ethernet.

3.5.1 PRP Messages over Serial

The Prodigy/CME PC/104 card can receive PRP command messages from a host controller on Serial port 1 or Serial port 2. This section describes the format of these packets, which transfer PRP messages over a serial protocol.

Figure 3-6 shows the Serial packet protocol that must be used for all PRP messages. This serial header is 32 bits, and is broken into three fields as follows:

Address: the first byte is an address field, used only with RS485 communications. For RS232 communications, this byte is not included in the packet.

Checksum: The second byte is a simple 8-bit sum checksum of all bytes in the packet payload (excluding the serial header, i.e., the address, checksum, and length fields). From Figure 3-6 this means only the PRP header and message body contribute to this checksum value

Length: The third byte is an 8 bit length field. The length indicates the number of bytes in the packet payload. The packet payload is defined as everything in the serial packet after the length field. That is, the 2 byte PRP header plus however many bytes are contained in the PRP message body. For example if the PRP message body is 6 bytes in size, the value filled into the length field should be 8 (2 bytes for PRP header + 6 bytes for the PRP message body).

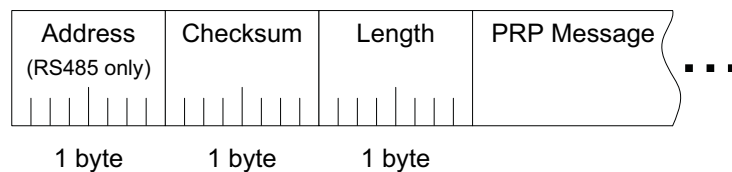


Figure 3-6:
PRP Message
over Serial
Format

Return PRP messages should be formatted in the same way.

3.5.1.1 Serial packet processing

An error-free Serial/PRP communication sequence from the host controller to the Prodigy/CME PC/104 card consists of a full outgoing packet transmission with the correct checksum and specified number of bytes received by the Prodigy/CME PC/104 card, and a full packet response with correct checksum and length received at the host controller. The return message must be received within a fixed amount of time determined by the host controller. Correctly setting this 'timeout window' may depend on factors such as baud rate, but 100 mSec is a typical safe value.

If the host controller receives a response packet with an incorrect checksum, or does not receive the complete response (communications timeout), then the original message should be resent.

If the Prodigy/CME PC/104 card receives a packet with an incorrect checksum, then a packet with an error code indicating this is returned to the host controller.

If the Prodigy/CME PC/104 card does not receive the specified number of bytes within 100 mSec (the Prodigy/CME PC/104 timeout value) of beginning of packet reception, the incoming message is ignored, and no message is sent to the host controller.

3.5.2 PRP Messages over CANbus

If the Prodigy/CME PC/104 card is set up to process PRP command messages from a host controller over CANbus, a specific format for the packets must be followed. This section describes the format of how PRP messages are carried over CANbus.

Since native CANbus communications can not be larger than 8 bytes, hosting the PRP system, which can support shorter as well as longer messages, requires additional layers to manage data segmentation and desegmentation. The protocol that is used by the Prodigy/CME PC/104 cards to accomplish this is very similar to the SDO (Service Data Object) protocol of the CANopen standard.

The details of this protocol are extensive enough that they are not described here, but are available in the *Prodigy/CME Programmer's Reference*.

3.5.2.1 CANbus packet processing

Unlike the serial protocols, the SDO based CANbus protocol has a robust error checking and retransmission mechanism built in that corrects for garbled or otherwise unusable transmissions.

Nevertheless, if a host controller does not receive the complete response packet within a specific time window (communications timeout), then the original message should be resent.

3.5.3 PRP Messages over Ethernet

The existence of ports, and the broad range of packet lengths that are supported with the Ethernet protocol, makes sending PRP messages very simple. For both sent and received messages the PRP message is simply loaded as the 'payload' of the Ethernet message. The only convention that must be observed is that the host controller's destination TCP port must be equal to the Prodigy/CME PC/104 card's TCP default value set using the **SetDefault** command. Note that the UDP protocol may not be used for PRP communications to/from the Prodigy/CME PC/104 card.

3.5.3.1 Ethernet packet processing

Unlike the serial protocols, Ethernet TCP packets have a robust error checking and retransmission mechanism built in that corrects for garbled or otherwise unusable transmissions.

This page intentionally left blank.

4. Electrical Reference

In This Chapter

- ▶ User-Settable Components
- ▶ Connectors
- ▶ Connections Summary—Motor Amplifiers
- ▶ Cables
- ▶ Environmental and Electrical Ratings
- ▶ Mechanical Dimensions
- ▶ User I/O memory Map

4.1 User-Settable Components

Figure 4-1 illustrates the locations of the principal components of the Prodigy/CME PC/104 cards. The user-settable components of the card are listed in the following table:

Component	Function
Resistor packs RS1, RS2, and RS3	Sets the encoder termination.
SW1 DIP switch	Sets the GP Connector Motor Output Configuration


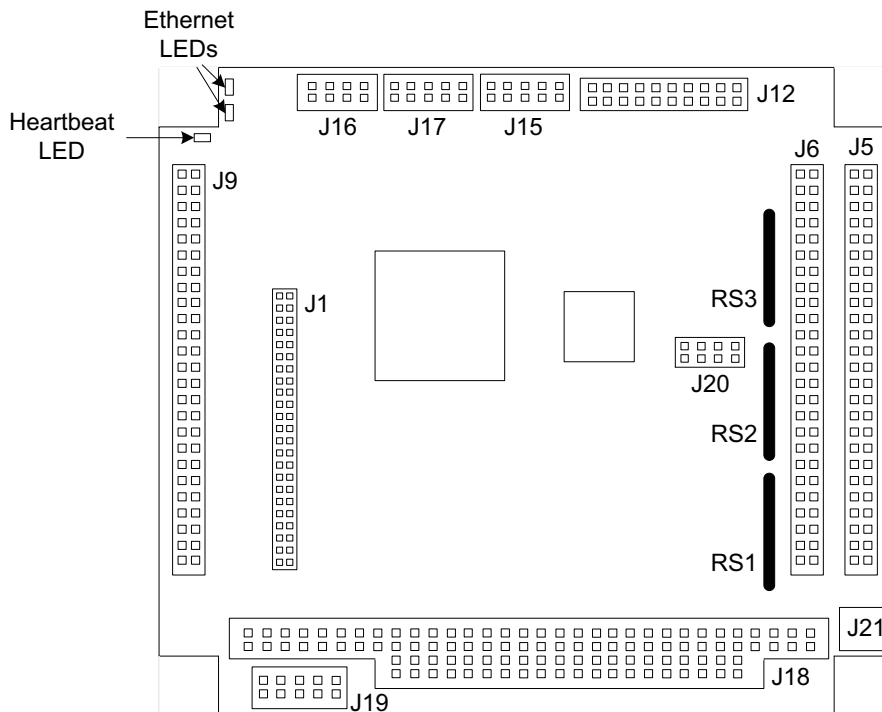


Figure 4-1: Components and layout, front of card

Figure 4-2:
Prodigy/CME
PC/104 Card
Component
Location, back
view

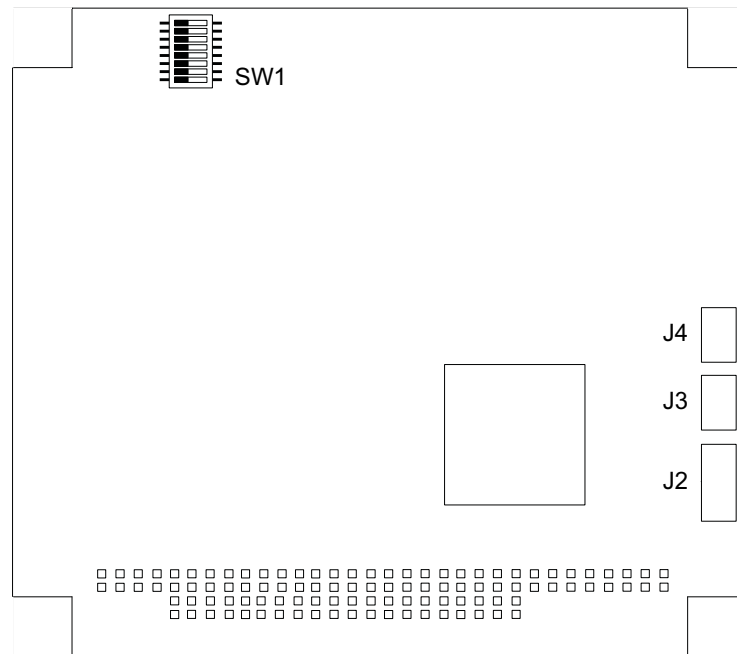

4.1.1 Encoder Connections and Resistor Packs

Encoder inputs may be connected differentially, with two wires for *QuadA*, *QuadB*, and *Index* signals, or with just one wire per signal. If differential connections are being employed, resistor packs RS1, RS2, and RS3 should remain installed. If single-ended encoders are used, remove all three resistor packs, and connect encoder signals to the positive encoder input only. The negative input may remain unconnected.

The following table shows the relationship between the encoder input mode and resistor packs:

Item	Setting	Description
Resistor packs RS1, RS2, RS3	Installed; this is the default setting of resistor packs RS1 - RS3.	If differential connections are being used, leave the resistor packs installed.
	Removed	If single-ended encoder connections are being used, remove the resistor packs.

Encoder connections are detailed in the following tables. All connections are made through the left and right GP Connector (J6 and J5, respectively).

Encoder connections when using differential encoder input:

Signal	J5 & J6 (GP Connector) Pin Connections			
	Axis 1	Axis 2	Axis 3	Axis 4
QuadAn+	J5-1	J5-19	J6-1	J6-19
QuadAn-	J5-2	J5-20	J6-2	J6-20
QuadBn+	J5-3	J5-21	J6-3	J6-21
QuadBn-	J5-4	J5-22	J6-4	J6-22
Indexn+	J5-5	J5-23	J6-5	J6-23
Indexn-	J5-6	J5-24	J6-6	J6-24
Vcc	J5-7	J5-25	J6-7	J6-25
GND	J5-8	J5-26	J6-8	J6-26

Encoder connections when using single-ended encoder input:

Signal	J5 & J6 (GP Connector) Pin Connections			
	Axis 1	Axis 2	Axis 3	Axis 4
QuadAn	J5-1	J5-19	J6-1	J6-19
QuadBn	J5-3	J5-21	J6-3	J6-21
Indexn	J5-5	J5-23	J6-5	J6-23
Vcc	J5-7	J5-25	J6-7	J6-25
GND	J5-8	J5-26	J6-8	J6-26

4.1.2 Motor Output Configuration

There are two configurations for setting up the motor output pins on the Prodigy/CME PC/104 GP Connector: These motor output pins can be set up for use with DC Brush, Brushless DC, and microstepping motors, or the motor output pins can be set for pulse & direction motors. The default setting is for all motors to be set for DC Brush, Brushless DC, and microstepping.

The switch bank SW1 controls these settings, which apply on a per-axis basis. The following table describes the switch setting for each output type. Figure 4-3 on page 71 provides a diagram of SW1. See Figure 4-1 on page 69 for SW1 location on the Prodigy/CME PC/104 card. In the following table, the individual switches are numbered from left to right.

Axis	SW1 Set for Servo Motor	SW1 Set for Pulse & Direction
1	1 on, 5 off	1 off, 5 on
2	2 on, 6 off	2 off, 6 on
3	3 on, 7 off	3 off, 7 on
4	4 on, 8 off	4 off, 8 on

Power to the card should be turned off when changing the state of the SW1 switches, and care should be taken not to set both switch pairs on (for example both 1 and 5 on, or both 2 and 6 on etc.) or damage may occur to the board.

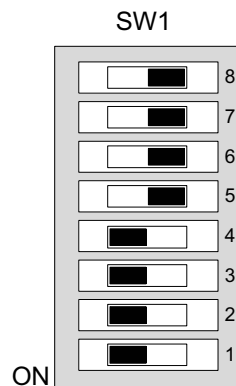


Figure 4-3:
Switch
Settings by
Output Type

4.2 Connectors

There are 11 user-accessible connectors on the Prodigy/CME PC/104 card. See Figure 4-1 on page 69 for the specific locations of the connectors on the card. The connectors and their functions are outlined in the following table:

Connector Name	Connector #	Functionality
GP	J5, J6	Provides various motion connections to external amplifiers and motor elements.
Option	J9	Used with brushless DC and microstepping motors, the Option Connector provides additional connections to external amplifier and motor components.
Serial	J17	Dual serial port for serial RS232 or RS485 connections.
Sync I/O (x2)	J3, J4	Synchronizes additional cards within the same motion system.
CAN	J16	Provides connection to a CAN 2.0B network.
Ethernet	J15	Provides connection to an Ethernet network
Extension	J1	Allows the DC-1000 card to be installed on the Prodigy/CME P/104 card.
Pulse & Direction	J12	Provides pulse & direction differential output.
Power	J21	Provides +5V power to the card. Typically used when power is not available through PC/104 bus.

4.2.1 GP Connector

The GP Connectors (J5 & J6 in Figure 4-1 on page 69) connect to various motion peripherals such as encoders, amplifiers, etc. The GP Connector is comprised of two 50-pin header connectors.

4.2.2 GP Connector Using DC Brush Motors

Pin	Connection	Description	Pin	Connection	Description
J5			J6		
1	QuadA1+	Quadrature A+ encoder input (axis 1)	1	QuadA3+	Quadrature A+ encoder input (axis 3)
2	QuadA1-	Quadrature A- encoder input (axis 1)	2	QuadA3-	Quadrature A- encoder input (axis 3)
3	QuadB1+	Quadrature B+ encoder input (axis 1)	3	QuadB3+	Quadrature B+ encoder input (axis 3)
4	QuadB1-	Quadrature B- encoder input (axis 1)	4	QuadB3-	Quadrature B- encoder input (axis 3)
5	Index1+	Index+ input (axis 1)	5	Index3+	Index+ input (axis 3)
6	Index1-	Index- input (axis 1)	6	Index3-	Index- input (axis 3)
7	Vcc	+5V	7	Vcc	+5V
8	GND	Ground	8	GND	Ground
9	PosLim1	Pos. direction limit switch input (axis 1)	9	PosLim3	Pos. direction limit switch input (axis 3)
10	NegLim1	Neg. direction limit switch input (axis 1)	10	NegLim3	Neg. direction limit switch input (axis 3)
11	Home1	Home input (axis 1)	11	Home3	Home input (axis 3)
12	GND	Ground	12	GND	Ground
13	AxisOut1	AxisOut output (axis 1)	13	AxisOut3	AxisOut output (axis 3)
14	PWMMag1A	PWM magnitude output (axis 1)	14	PWMMag3A	PWM magnitude output (axis 3)
15	PWMSign1A	PWM sign output (axis 1)	15	PWMSign3A	PWM sign output (axis 3)
16	AxisIn1	AxisIn input (axis 1)	16	AxisIn3	AxisIn input (axis 3)
17	DAC1A	Analog mtr cmd output (axis 1), $\pm 10V$	17	DAC3A	Analog mtr cmd output (axis 3), $\pm 10V$
18	AGND	Ground for analog motor command	18	AGND	Ground for analog motor command
19	QuadA2+	Quadrature A+ encoder input (axis 2)	19	QuadA4+	Quadrature A+ encoder input (axis 4)
20	QuadA2-	Quadrature A- encoder input (axis 2)	20	QuadA4-	Quadrature A- encoder input (axis 4)
21	QuadB2+	Quadrature B+ encoder input (axis 2)	21	QuadB4+	Quadrature B+ encoder input (axis 4)
22	QuadB2-	Quadrature B- encoder input (axis 2)	22	QuadB4-	Quadrature B- encoder input (axis 4)
23	Index2+	Index+ input (axis 2)	23	Index4+	Index+ input (axis 4)
24	Index2-	Index- input (axis 2)	24	Index4-	Index- input (axis 4)
25	Vcc	+5V	25	Vcc	+5V
26	GND	Ground	26	GND	Ground
27	PosLim2	Pos. direction limit switch input (axis 2)	27	PosLim4	Pos. direction limit switch input (axis 4)
28	NegLim2	Neg. direction limit switch input (axis 2)	28	NegLim4	Neg. direction limit switch input (axis 4)
29	Home2	Home input (axis 2)	29	Home4	Home input (axis 4)
30	AxisOut2	AxisOut output (axis 2)	30	AxisOut4	AxisOut output (axis 4)
31	PWMMag2A	PWM magnitude output (axis 2)	31	PWMMag4A	PWM magnitude output (axis 4)
32	PWMSign2A	PWM sign output (axis 2)	32	PWMSign4A	PWM sign output (axis 4)
33	AxisIn2	AxisIn input (axis 2)	33	AxisIn4	AxisIn input (axis 4)
34	DAC2A	Analog mtr cmd output (axis 2), $\pm 10V$	34	DAC4A	Analog mtr cmd output (axis 4), $\pm 10V$
35	AGND	Ground for analog motor command	35	AGND	Ground for analog motor command
36	DigitalIn0	General purpose digital input 0	36	DigitalIn4	General purpose digital input 4
37	DigitalIn1	General purpose digital input 1	37	DigitalIn5	General purpose digital input 5
38	DigitalIn2	General purpose digital input 2	38	DigitalIn6	General purpose digital input 6
39	DigitalIn3	General purpose digital input 3	39	DigitalIn7	General purpose digital input 7
40	AmpEnable1	Amplifier enable signal (axis 1)	40	AmpEnable3	Amplifier enable signal (axis 3)
41	DigitalOut0	General purpose digital output 0	41	DigitalOut4	General purpose digital output 4
42	DigitalOut1	General purpose digital output 1	42	DigitalOut5	General purpose digital output 5
43	DigitalOut2	General purpose digital output 2	43	DigitalOut6	General purpose digital output 6
44	DigitalOut3	General purpose digital output 3	44	DigitalOut7	General purpose digital output 7
45	AmpEnable2	Amplifier enable signal (axis 2)	45	AmpEnable4	Amplifier enable signal (axis 4)
46	Reset	Hardware reset input	46	AnalogGND	Gnd for general purpose analog inputs
47	Analog1	General purpose analog input 1	47	Analog5	General purpose analog input 5
48	Analog2	General purpose analog input 2	48	Analog6	General purpose analog input 6
49	Analog3	General purpose analog input 3	49	Analog7	General purpose analog input 7
50	Analog4	General purpose analog input 4	50	Analog8	General purpose analog input 8

4.2.3 GP Connector Using Brushless DC or Microstepping Motors

Pin	Connection	Description	Pin	Connection	Description
J5			J6		
1	QuadA1+	Quadrature A+ encoder input (axis 1)	1	QuadA3+	Quadrature A+ encoder input (axis 3)
2	QuadA1-	Quadrature A- encoder input (axis 1)	2	QuadA3-	Quadrature A- encoder input (axis 3)
3	QuadB1+	Quadrature B+ encoder input (axis 1)	3	QuadB3+	Quadrature B+ encoder input (axis 3)
4	QuadB1-	Quadrature B- encoder input (axis 1)	4	QuadB3-	Quadrature B- encoder input (axis 3)
5	Index1+	Index+ input (axis 1)	5	Index3+	Index+ input (axis 3)
6	Index1-	Index- input (axis 1)	6	Index3-	Index- input (axis 3)
7	Vcc	+5V	7	Vcc	+5V
8	GND	Ground	8	GND	Ground
9	PosLim1	Pos. direction limit switch input (axis 1)	9	PosLim3	Pos. direction limit switch input (axis 3)
10	NegLim1	Neg. direction limit switch input (axis 1)	10	NegLim3	Neg. direction limit switch input (axis 3)
11	Home1	Home input (axis 1)	11	Home3	Home input (axis 3)
12	GND	Ground	12	GND	Ground
13	AxisOut1	AxisOut output (axis 1)	13	AxisOut3	AxisOut output (axis 3)
14	n.c.	No connection	14	n.c.	No connection
15	n.c.	No connection	15	n.c.	No connection
16	AxisIn1	AxisIn input (axis 1)	16	AxisIn3	AxisIn input (axis 3)
17	DAC1A	Phase A analog mtr cmd output (axis 1), ±10V	17	DAC3A	Phase A analog mtr cmd output (axis 3), ±10V
18	AGND	Ground for analog motor command	18	AGND	Ground for analog motor command
19	QuadA2+	Quadrature A+ encoder input (axis 2)	19	QuadA4+	Quadrature A+ encoder input (axis 4)
20	QuadA2-	Quadrature A- encoder input (axis 2)	20	QuadA4-	Quadrature A- encoder input (axis 4)
21	QuadB2+	Quadrature B+ encoder input (axis 2)	21	QuadB4+	Quadrature B+ encoder input (axis 4)
22	QuadB2-	Quadrature B- encoder input (axis 2)	22	QuadB4-	Quadrature B- encoder input (axis 4)
23	Index2+	Index+ input (axis 2)	23	Index4+	Index+ input (axis 4)
24	Index2-	Index- input (axis 2)	24	Index4-	Index- input (axis 4)
25	Vcc	+5V	25	Vcc	+5V
26	GND	Ground	26	GND	Ground
27	PosLim2	Pos. direction limit switch input (axis 2)	27	PosLim4	Pos. direction limit switch input (axis 4)
28	NegLim2	Neg. direction limit switch input (axis 2)	28	NegLim4	Neg. direction limit switch input (axis 4)
29	Home2	Home input (axis 2)	29	Home4	Home input (axis 4)
30	AxisOut2	AxisOut output (axis 2)	30	AxisOut4	AxisOut output (axis 4)
31	n.c.	No connection	31	n.c.	No connection
32	n.c.	No connection	32	n.c.	No connection
33	AxisIn2	AxisIn input (axis 2)	33	AxisIn4	AxisIn input (axis 4)
34	DAC2A	Phase A analog mtr cmd output (axis 2), ±10V	34	DAC4A	Phase A analog mtr cmd output (axis 4), ±10V
35	AGND	Ground for analog motor command	35	AGND	Ground for analog motor command
36	DigitalIn0	General purpose digital input 0	36	DigitalIn4	General purpose digital input 4
37	DigitalIn1	General purpose digital input 1	37	DigitalIn5	General purpose digital input 5
38	DigitalIn2	General purpose digital input 2	38	DigitalIn6	General purpose digital input 6
39	DigitalIn3	General purpose digital input 3	39	DigitalIn7	General purpose digital input 7
40	AmpEnable1	Amplifier enable signal (axis 1)	40	AmpEnable3	Amplifier enable signal (axis 3)
41	DigitalOut0	General purpose digital output 0	41	DigitalOut4	General purpose digital output 4
42	DigitalOut1	General purpose digital output 1	42	DigitalOut5	General purpose digital output 5
43	DigitalOut2	General purpose digital output 2	43	DigitalOut6	General purpose digital output 6
44	DigitalOut3	General purpose digital output 3	44	DigitalOut7	General purpose digital output 7
45	AmpEnable2	Amplifier enable signal (axis 2)	45	AmpEnable4	Amplifier enable signal (axis 4)
46	Reset	Hardware reset input	46	AnalogGND	Ground for general purpose analog inputs
47	Analog1	General purpose analog input 1	47	Analog5	General purpose analog input 5
48	Analog2	General purpose analog input 2	48	Analog6	General purpose analog input 6
49	Analog3	General purpose analog input 3	49	Analog7	General purpose analog input 7
50	Analog4	General purpose analog input 4	50	Analog8	General purpose analog input 8

4.2.4 GP Connector Using Step (Pulse & Direction) Motors

J5			J6		
Pin	Connection	Description	Pin	Connection	Description
1	QuadA1+	Quadrature A+ encoder input (axis 1)	1	QuadA3+	Quadrature A+ encoder input (axis 3)
2	QuadA1-	Quadrature A- encoder input (axis 1)	2	QuadA3-	Quadrature A- encoder input (axis 3)
3	QuadB1+	Quadrature B+ encoder input (axis 1)	3	QuadB3+	Quadrature B+ encoder input (axis 3)
4	QuadB1-	Quadrature B- encoder input (axis 1)	4	QuadB3-	Quadrature B- encoder input (axis 3)
5	Index1+	Index+ input (axis 1)	5	Index3+	Index+ input (axis 3)
6	Index1-	Index- input (axis 1)	6	Index3-	Index- input (axis 3)
7	Vcc	+5V	7	Vcc	+5V
8	GND	Ground	8	GND	Ground
9	PosLim1	Pos. direction limit switch input (axis 1)	9	PosLim3	Pos. direction limit switch input (axis 3)
10	NegLim1	Neg. direction limit switch input (axis 1)	10	NegLim3	Neg. direction limit switch input (axis 3)
11	Home1	Home input (axis 1)	11	Home3	Home input (axis 3)
12	GND	Ground	12	GND	Ground
13	AxisOut1	AxisOut output (axis 1)	13	AxisOut3	AxisOut output (axis 3)
14	Pulse1	Pulse output (axis 1)	14	Pulse3	Pulse output (axis 3)
15	Direction1	Direction output (axis 1)	15	Direction3	Direction output (axis 3)
16	AxisIn1	AxisIn input (axis 1)	16	AxisIn3	AxisIn input (axis 3)
17	AtRest1	Atrest indicator output (axis 1)	17	AtRest3	Atrest indicator output (axis 3)
18	GND	Ground	18	GND	Ground
19	QuadA2+	Quadrature A+ encoder input (axis 2)	19	QuadA4+	Quadrature A+ encoder input (axis 4)
20	QuadA2-	Quadrature A- encoder input (axis 2)	20	QuadA4-	Quadrature A- encoder input (axis 4)
21	QuadB2+	Quadrature B+ encoder input (axis 2)	21	QuadB4+	Quadrature B+ encoder input (axis 4)
22	QuadB2-	Quadrature B- encoder input (axis 2)	22	QuadB4-	Quadrature B- encoder input (axis 4)
23	Index2+	Index+ input (axis 2)	23	Index4+	Index+ input (axis 4)
24	Index2-	Index- input (axis 2)	24	Index4-	Index- input (axis 4)
25	Vcc	+5V	25	Vcc	+5V
26	GND	Ground	26	GND	Ground
27	PosLim2	Pos. direction limit switch input (axis 2)	27	PosLim4	Pos. direction limit switch input (axis 4)
28	NegLim2	Neg. direction limit switch input (axis 2)	28	NegLim4	Neg. direction limit switch input (axis 4)
29	Home2	Home input (axis 2)	29	Home4	Home input (axis 4)
30	AxisOut2	AxisOut output (axis 2)	30	AxisOut4	AxisOut output (axis 4)
31	Pulse2	Pulse output (axis 2)	31	Pulse4	Pulse output (axis 4)
32	Direction2	Direction output (axis 2)	32	Direction4	Direction output (axis 4)
33	AxisIn2	AxisIn input (axis 2)	33	AxisIn4	AxisIn input (axis 4)
34	AtRest2	Atrest indicator output (axis 2)	34	AtRest4	Atrest indicator output (axis 4)
35	GND	Ground	35	GND	Ground
36	DigitalIn0	General purpose digital input 0	36	DigitalIn4	General purpose digital input 4
37	DigitalIn1	General purpose digital input 1	37	DigitalIn5	General purpose digital input 5
38	DigitalIn2	General purpose digital input 2	38	DigitalIn6	General purpose digital input 6
39	DigitalIn3	General purpose digital input 3	39	DigitalIn7	General purpose digital input 7
40	AmpEnable1	Amplifier enable signal (axis 1)	40	AmpEnable3	Amplifier enable signal (axis 3)
41	DigitalOut0	General purpose digital output 0	41	DigitalOut4	General purpose digital output 4
42	DigitalOut1	General purpose digital output 1	42	DigitalOut5	General purpose digital output 5
43	DigitalOut2	General purpose digital output 2	43	DigitalOut6	General purpose digital output 6
44	DigitalOut3	General purpose digital output 3	44	DigitalOut7	General purpose digital output 7
45	AmpEnable2	Amplifier enable signal (axis 2)	45	AmpEnable4	Amplifier enable signal (axis 4)
46	Reset	Hardware reset input	46	AnalogGND	Ground for general purpose analog inputs
47	Analog1	General purpose analog input 1	47	Analog5	General purpose analog input 5
48	Analog2	General purpose analog input 2	48	Analog6	General purpose analog input 6
49	Analog3	General purpose analog input 3	49	Analog7	General purpose analog input 7
50	Analog4	General purpose analog input 4	50	Analog8	General purpose analog input 8

4.2.5 Option Connector

When the Prodigy/CME PC/104 card is used with either brushless DC or microstepping motors, the Option Connector (labeled J9 in Figure 4-1 on page 69) provides additional signals for multi-phase motor output and input of signals such as Hall sensors. The Option Connector is a 50-pin header-style connector.

Pin	Connection	Description	Pin	Connection	Description
J9					
1	PWMMag1A	Phase A PWM magnitude output (axis 1)	26	Hall2 B	Phase B Hall sensor input (axis 2)
2	PWMMag1B	Phase B PWM magnitude output (axis 1)	27	Hall2 C	Phase C Hall sensor input (axis 2)
3	PWMMag1C / PWMSign1B	Phase C PWM magnitude output (axis 1) / Phase B PWM sign output (axis 1)	28	GND	Ground
4	PWMSign1A	Phase A PWM sign output (axis 1)	29	Hall3 A	Phase A Hall sensor input (axis 3)
5	GND	Ground	30	Hall3 B	Phase B Hall sensor input (axis 3)
6	PWMMag2A	Phase A PWM magnitude output (axis 2)	31	Hall3 C	Phase C Hall sensor input (axis 3)
7	PWMMag2B	Phase B PWM magnitude output (axis 2)	32	GND	Ground
8	PWMMag2C / PWMSign2B	Phase C PWM magnitude output (axis 2) / Phase B PWM sign output (axis 2)	33	Hall4 A	Phase A Hall sensor input (axis 4)
9	PWMSign2A	Phase A PWM sign output (axis 2)	34	Hall4 B	Phase B Hall sensor input (axis 4)
10	GND	Ground	35	Hall4 C	Phase C Hall sensor input (axis 4)
11	PWMMag3A	Phase A PWM magnitude output (axis 3)	36	GND	Ground
12	PWMMag3B	Phase B PWM magnitude output (axis 3)	37	AGND	Ground for analog motor command
13	PWMMag3C / PWMSign3B	Phase C PWM magnitude output (axis 3) / Phase B PWM sign output (axis 3)	38	DAC1A	Phase A analog mtr cmd output (axis 1), ±10V
14	PWMSign3A	Phase A PWM sign output (axis 3)	39	DAC2A	Phase A analog mtr cmd output (axis 2), ±10V
15	GND	Ground	40	DAC3A	Phase A analog mtr cmd output (axis 3), ±10V
16	PWMMag4A	Phase A PWM magnitude output (axis 4)	41	DAC4A	Phase A analog mtr cmd output (axis 4), ±10V
17	PWMMag4B	Phase B PWM magnitude output (axis 4)	42	DAC1B	Phase B analog mtr cmd output (axis 1), ±10V
18	PWMMag4C / PWMSign4B	Phase C PWM magnitude output (axis 4) / Phase B PWM sign output (axis 4)	43	DAC2B	Phase B analog mtr cmd output (axis 2), ±10V
19	PWMSign4A	Phase A PWM sign output (axis 4)	44	DAC3B	Phase B analog mtr cmd output (axis 3), ±10V
20	GND	Ground	45	DAC4B	Phase B analog mtr cmd output (axis 4), ±10V
21	Hall1 A	Phase A Hall sensor input (axis 1)	46	AGND	Ground for analog motor command
22	Hall1 B	Phase B Hall sensor input (axis 1)	47	GND	Ground
23	Hall1 C	Phase C Hall sensor input (axis 1)	48	GND	Ground
24	GND	Ground	49	Vcc	+5V
25	Hall2 A	Phase A Hall sensor input (axis 2)	50	Vcc	+5V

4.2.6 Serial Connector

Serial Connector (J17) is a 10-pin dual header-style connector that provides signals for two serial ports in RS232 mode, or a single serial port in RS485 mode. The following section provides information for this connector, and provides pinouts when operated in RS232 mode, RS485 full duplex mode, and RS485 half duplex mode.

Pin	Connection	RS232	RS485 Full Duplex	RS485 Half Duplex
J17				
1	RS485Select	Open (default) selects RS232 mode for both Serial1 and Serial2	Tie to ground selects RS485 mode for both Serial1 and Serial2	Tie to ground selects RS485 mode for both Serial1 and Serial2
2	RS485Rcv ⁺	no connect	Positive (non-inverting) receive input	no connect
3	Sr1Xmt	Serial 1 transmit output	no connect	no connect
4	Sr12Rcv/RS485Rcv ⁻	Serial 2 receive input	Negative (inverting) receive input	no connect
5	Sr1Rcv	Serial 1 receive input	no connect	no connect
6	Sr12Xmt/RS485Xmt ⁺	Serial 2 transmit output	Positive (non-inverting) transmit output	Positive (non-inverting) transmit/receive
7	No connect	no connect	no connect	no connect
8	RS485Xmt ⁻	no connect	Negative (inverting) transmit output	Negative (inverting) transmit/receive
9	GND	Ground	Ground	Ground

Pin	Connection	RS232	RS485 Full Duplex	RS485 Half Duplex
10	GND	Ground	Ground	Ground

4.2.7 Sync I/O Connector

The two Sync I/O connectors located on the Prodigy/CME PC/104 card (J3 and J4 in Figure 4-1 on page 69) allow for the synchronization of multiple Prodigy/CME PC/104 cards within a single system. This configuration enables operation within the same cycle period. If multiple cards are installed, yet not inter-connected, any additional cards would begin working after the first card (master) was initialized. However, none of the axes would be synchronized. With Sync I/O activated, the servo loops of all slave cards are synchronized to the servo loop of the master card. This allows for precise synchronization of all implemented axes.

To connect two or more Prodigy/CME PC/104 cards for synchronization, a Sync I/O cable (one cable for each set of two cards) is required. This cable may be connected to either of the two Sync I/O connectors on the cards. Both connectors function as either an input or output; the two sync connectors are wired in parallel. For more information on synchronizing multiple Prodigy/CME PC/104 cards, see the *Magellan Motion Processor User's Guide*.

The pinouts for the Sync I/O connectors are defined in the following table:

Pin Number	Signal
J3, J4	
1	Sync-in or sync-out pin, depending on whether the card is master or slave.
2	GND

The following diagram shows three synchronized Cards.

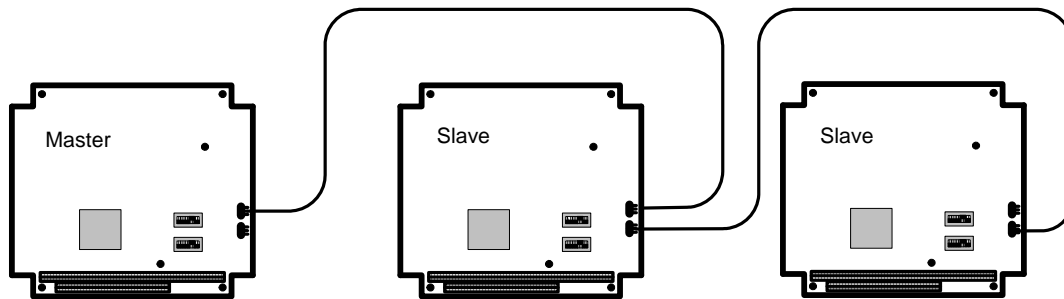


Figure 4-4:
Sync I/O
connector to
three cards

4.2.8 CAN Connectors

The Prodigy/CME PC/104 card's controller area network (CAN) transceivers are designed for use with CAN controllers, or with equivalent devices. They are intended for use in applications employing the CAN serial communication physical layer in accordance with the ISO 11898 standard. The transceiver provides differential transmit and differential receive capability to/from a CAN controller at speeds up to 1 Mbps.

The CAN connector (J16) is an 8-pin header-style connector. Termination at each end of the cable run is generally recommended unless cable lengths are very short and speed is slow. ISO-11898 requires 120 ohm termination at each end of the bus. Note that it is up to the customer to verify their network topology and operating parameters.

See Section 2.5.3, "CANbus Communications," on page 47 for more information on the functionality of the CANbus port.

Pin Number	Signal	Description
J16		
1	Vcc	+5V
2	CAN+	Positive CAN signal connection
3	no connect	reserved, do not connect
4	CAN-	Negative CAN signal connection
5	no connect	reserved, do not connect
6	CAN-	Negative CAN signal connection (either this signal or signal 4 can be used for CAN-)
7	GND	Ground
8	termination	optional termination - connecting this pin with pin 6 will provide 120 ohm termination on the CAN signals

4.2.9 Ethernet Connector

The Prodigy/CME PC/104's Ethernet transceivers are designed for use with 10/100 base-TX Ethernet and support both TCP and UDP protocols. See Section 2.5.4, "Ethernet Communications," on page 48 for more information on the functionality of the Ethernet port.

The Ethernet Connector (J15) is an 10-pin 2mm header-style connector with pinouts as follows:

Pin Number	Signal	Description
J15		
1	EthernetTx+	Ethernet differential transmit positive
2	EthernetTx-	Ethernet differential transmit negative
3	EthernetRx+	Ethernet differential receive positive
4	no connect	no connect
5	no connect	no connect
6	EthernetRx-	Ethernet differential receive negative
7	no connect	no connect
8	no connect	no connect
9	no connect	no connect
10	no connect	no connect

4.2.10 Extension Connector

This is a 46-pin connector (J1 in Figure 4-1 on page 69), which connects the DC-1000 expansion card to the Prodigy/CME. The DC-1000 is a Synchronous Serial Interface (SSI) for absolute encoders, and connects to the Prodigy/CME card's parallel input connector. See Section 4.2, "Connectors," on page 72 for detailed information about the DC-1000, its functionality, and installation instructions.

4.2.11 Pulse and Direction Differential Output

This connector, labeled J12, provides pulse and direction outputs using line drivers. Using this connector with pulse and direction step drivers will provide a higher immunity to noise, reducing the chance of mispositioning. The pins and their associated signals are described in the following table:

Pin Number	Signal	Pin Number	Signal
J12			
1	GND	11	axis 3, direction +
2	GND	12	axis 3, direction -
3	axis 4, pulse +	13	axis 1, pulse +

Pin Number	Signal	Pin Number	Signal
4	axis 4, pulse -	14	axis 1, pulse -
5	axis 1, direction +	15	axis 2, direction +
6	axis 1, direction -	16	axis 2, direction -
7	axis 4, direction +	17	axis 3, pulse +
8	axis 4, direction -	18	axis 3, pulse -
9	axis 2, pulse +	19	GND
10	axis 2, pulse -	20	GND

4.2.12 Power Connectors

J21 can be used to provide +5V power to the card. If the Prodigy/CME PC/104 card is powered through the PC/104 bus then this connection is not necessary, however it is often used during prototyping for convenience. This connector is used with the wall outlet power supply cable set PW-2001-KIT which is included with DK (Developer's Kit) version of the Prodigy/CME-PC/104 card.

J21 is a 2 pin 1.50 mm pitch header. The table below shows the pin connections:

Pin #	J21 Connector
1	Vcc (+5V)
2	GND

To minimize the risk of unintended machine motion during powerup, care should be taken to control the overall powerup sequence of the Prodigy/CME card and connected system motion amplifiers. The recommended sequence is to first powerup the Prodigy/CME card, followed by powerup of the motion amplifiers. The time delay to ensure stable operation of the control electronics before powering up the amplifiers varies depending on the system's power supplies and configuration, but a typical safe figure is 500 mSec - 1,000 mSec.



4.2.13 Connector Parts Reference

The following table is supplied as a reference only. “(V)” indicates the vertical mounting configuration of the Prodigy/CME PC/104 card, while “(H)” indicates the horizontal configuration.

Label	Description	Card Part Number	Connector Mate
J5 & J6	GP Connector	Samtec TSM-125-01-L-DV	Samtec IDSD-25-X-X
J9	Option Connector	Samtec TSM-125-01-L-DV	Samtec IDSD-25-X-X
J3,J4	Synch Connector	Molex 53261-0271	Molex 51021-0200
J17	Serial Connector	Molex 87832-1020	Molex 51110-1051(housing) and 50394-8100 (crimp pin)
J16	CAN Connector	Molex 87832-0820	Molex 51110-0851(housing) and Molex 50394-8100 (crimp pin)
J15	Ethernet Connector	Molex 87832-1020	Molex 51110-1051(housing) and 50394-8100 (crimp pin)
J1	Extension Connector	Samtec TMM-123-01-L-D-SM	
J12	Pulse & Direction	Samtec TSM-110-01-L-DV	Samtec IDSD-10-X-X
J21	Power Connector	Molex 87438-0243	Molex 87439-0200 (housing) and 87421-0000 (crimp pin)

4.3 Connections Summary—Motor Amplifiers

The Prodigy/CME PC/104 card supports four methods of output to motor amplifiers, as described in the following table:

Motor Output Method	Signal Output
DAC	Analog signals from the onboard D-A converters.
PWM sign-magnitude	Pulse width modulated signals with separate magnitude and sign signals per output phase.
PWM 50/50	Pulse width modulated square-wave signals with a single PWM signal per output phase.
Pulse & Direction	One signal representing pulse information, and a signal representing direction.

In addition, each motor axis may have one, two, or three output phases associated with it. For DC brush motors, the number of phases is one. For multi-phase motors such as brushless DC or microstepping motors, the number of phases can be two or three, depending on the output waveform programmed into the Prodigy/CME PC/104 card. For more information, see the *Magellan Motion Processor User's Guide*.

The following tables provide convenient summaries of amplifier connections for common configurations of motor output method and motor type. These outputs should be connected from the designated connector pins to the appropriate amplifier inputs. Note that the names of the pins will vary among amplifiers. Common names are shown.

4.3.1 DC Brush Motor Connections

To connect to DC Brush motors the GP Connectors (J5 & J6) are used.

Motor Output Method	Connection Name	Amplifier Input Connection	Axis 1	Axis 2	Axis 3	Axis 4
		Name*				
DAC	DAC1-4A	Ref+ or V+	J5-17	J5-34	J6-17	J6-34
	AGND	Ref- or GND	J5-18	J5-35	J6-18	J6-35
PWM sign/magnitude**	PWMMag1-4A	PWM magnitude	J5-14	J5-31	J5-14	J6-31
	PWMSign1-4A	PWM direction	J5-15	J5-32	J6-15	J6-32
	GND	Ground	J5-8	J5-26	J6-8	J6-26

* Names of amplifier connections vary. Common names are shown.

** Both the Magnitude and Sign connections are used if the Magellan's PWM Sign Magnitude mode is selected. If PWM50/50 mode is selected, then only the Magnitude connections are used.

4.3.2 Brushless DC Motor Connections

To connect to Brushless DC motors using internal commutation (provided by the Magellan Motion Processor), two sinusoidal phase signals are driven per axis via the Option Connector (J9).

Motor Output Method	Connection Name	Amplifier Input Connection	Axis 1	Axis 2	Axis 3	Axis 4
		Name*				
DAC	DAC1-4A	Ref1+ or V1+	J9-38	J9-39	J9-40	J9-41
	DAC1-4B	Ref2+ or V2+	J9-42	J9-43	J9-44	J9-45
	AGND	Ref- or GND	J9-37	J9-46	J9-37	J9-46

PWM 50/50	PWMMagI-4A	PWM phase 1	J9-1	J9-6	J9-11	J9-16
	PWMMagI-4B	PWM phase 2	J9-2	J9-7	J9-12	J9-17
	PWMMagI-4C	PWM phase 3	J9-3	J9-8	J9-13	J9-18
	GND	Ground	J9-5	J9-10	J9-15	J9-20

* Names of amplifier connections vary. Common names are shown.

4.3.3 Microstepping Motor Connections

To connect to step motors in microstepping mode, two sinusoidal phase signals are driven per axis via the Option Connector (J5).

Motor Output Method	Connection Name	Amplifier Input Connection Name*	Axis 1	Axis 2	Axis 3	Axis 4
DAC	DACI-4A	Ref1+ or V1+	J9-38	J9-39	J9-40	J9-41
	DACI-4B	Ref2+ or V2+	J9-42	J9-43	J9-44	J9-45
	AGND	Ref- or GND	J9-37	J9-46	J9-37	J9-46
PWM sign/magnitude**	PWMMagI-4A	PWM magnitude	J9-1	J9-6	J9-11	J9-16
	PWMSignI-4A	PWM direction	J9-4	J9-9	J9-14	J9-19
	PWMMagI-4B	PWM magnitude	J9-2	J9-7	J9-12	J9-17
	PWMSignI-4B	PWM direction	J9-3	J9-8	J9-13	J9-18
	GND	Ground	J9-5	J9-10	J9-15	J9-20

* Names of amplifier connections vary. Common names are shown.

**Both the Magnitude and Sign connections are used if the Magellan's PWM Sign Magnitude mode is selected. If PWM50/50 mode is selected, then only the Magnitude connections are used.

4.3.4 Step (Pulse & Direction) Motor Connections

To connect to step motors using single-ended pulse & direction input amplifiers the GP Connector (J6) is used, and for differential drive the Pulse & Direction Connector (J7) as well as the GP Connector (J6) are used.

Motor Output Method	Connection Name	Amplifier Input Connection Name*	Axis 1	Axis 2	Axis 3	Axis 4
Pulse & direction (single-ended)	PulseI-4	Pulse or step	J5-14	J5-31	J6-14	J6-31
	DirectionI-4	Direction	J5-15	J5-32	J6-15	J6-32
	GND	Ground	J5-12	J5-26	J6-12	J6-26
Pulse & direction (differential)	PulseI-4+	Pulse + or step +	J12-13	J12-9	J12-17	J12-3
	PulseI-4-	Pulse - or step -	J12-14	J12-10	J12-18	J12-4
	DirectionI-4+	Direction +	J12-5	J12-15	J1-11	J12-7
	DirectionI-4-	Direction -	J12-6	J12-16	J12-12	J12-8
	GND	Ground	J12-1	J12-2	J12-19	J12-20
Pulse & direction	AtRest I-4	At Rest	J5-17	J5-34	J6-17	J6-34

* Names of amplifier connections vary. Common names are shown.

4.4 Cables

The following table provides a summary of the standard cable accessories available with Prodigy/CME PC/104 cards.

Component Part Number	Description
PW-2001-KIT-01.R	Power Supply & cable set. This is a US Domestic & International wall adapter power supply and associated cable that plugs into the Prodigy/CME PC/104 card and provides power through its Power Connector. If the card receives power through the PC/104 bus then this accessory is not necessary.
Cable-2003-01.R	50-pin ribbon cable. This 3 foot long cable connects the right and left motion connectors (GP Connector) to identical connectors on a receiving card such as the IM-1000 breakout interconnect card, and it connects the Option Connector to identical connectors on a receiving card such as the IM-600 breakout interconnect card.
Cable-4301-01.R	10-pin serial header cable. This 1 foot cable plugs into the card's 10-pin serial header connector and provides a single female DB-9 output with dual serial signals. It can be connected to Cable-4355-01.R to provide dual DB-9 serial outputs.
Cable-4355-01.R	Dual serial cable. This 5 foot long "Y" cable connects to the DB-9 output of Cable-4301-01.R and provides two female DB-9 connectors suitable for connection to a PC serial port or USB-to-serial converter.
Cable-4701-01.R	CANbus header to RJ45 connector. This 1 foot cable plugs into the card's 8-pin CANbus header connector and provides an RJ45 output.
Cable-RJ45-02-R	CANbus and Ethernet cable. This 2 meter cable connects to the card's CANbus or Ethernet outputs. It has RJ45 connectors on both ends.
TRM-RJ45-02.R	CANbus terminator. This is an RJ45 terminator that may be used to electrically terminate a CANbus network string.
Adapt-RJ45T-01.R	CANbus splitter. This Y configuration splitter duplicates the CANbus RJ45 connections into two identical RJ45 connectors, making it easy to connect the card in a daisy chain configuration.
Cable-4505-01.R	Ethernet header to RJ45 cable. This 5 foot cable connects to the card's 10-pin Ethernet header connector and provides an RJ45 output.
Cable-4371-01.R	20-pin ribbon cable. This 3 foot long cable connects the Pulse & Direction connector to an identical connector on a receiving card such as on the IM-600 breakout interconnect card.

The following sections provide detailed information on each of these cables.

4.4.1 PW-2001-KIT-01.R

PMD Part #: PW-5001-KIT-01.R

Description: 5V, 2A Output AC Wall Adapter power supply, International converter plugs.

Length: 5.0 feet

Cable: Integrated

J21 Pin	Signal
1	Vcc (+5)
2	Ground

4.4.2 Cable-2003-01.R

PMD Part #: Cable-2003-01.R

Description: 50-pin connector to 50-pin connector ribbon cable.

Length: 3.0 feet

Cable: 50 pair, 30 AWG, shielded round

Wiring: Straight through

4.4.3 Cable-4301-01.R

PMD Part #: Cable-4301-01.R

Description: 10-pin dual header (J17) to DB-9 cable

Length: 1.0 feet

Cable: 9 conductor, 26 AWG, untwisted

Wiring: See table.

J17 Pin	Signal	Connects to
1	RS485Rcv ⁺	1
2	SrI1Xmt	6
3	SrI2Rcv/ RS485Rcv ⁻	2
4	SrI1Rcv	7
5	SrI2Xmt/ RS485Xmt ⁺	3
6	SrI2Xmt/ RS485Xmt ⁺	8
7	RS485Xmt ⁻	4
8	GND	9
9	GND	5
10	no connect	-

4.4.4 Cable-4355-01.R

PMD Part #: Cable-4355-01.R

Description: Male DB-9 Dual Serial to two single-channel female DB-9 cable

Length: 5.0 feet

Cable: (2) 3 conductor, 26 AWG, Untwisted, shielded, UL STYLE 2464

Note: Dual female DB-9 ends are labeled "Port1" and "Port2."

Wiring: See table.

Male DB-9 Pin	Signal	Connects to dual female DB-9 Pin:
1	RS485Select	-
2	SrI1Xmt	Port1-2
3	SrI1Rcv	Port1-3
4	No connect	-
5	GND	Port1-5, Port2-5
6	RS485Rcv ⁺	-
7	SrI2Rcv/ RS485Rcv ⁻	Port2-3
8	SrI2Xmt/ RS485Xmt ⁺	Port2-2
9	RS485Xmt ⁻	-

4.4.5 Cable-4701-01.R

PMD Part #: Cable-4701-01.R

Description: 8-pin dual header to RJ45 cable

Length: 1.0 feet

Cable: 4 conductor, 24 AWG, twisted

Wiring: See table.

J16 Pin	Signal	Connects to:
1	Vcc	no connect
2	CAN+	1
3	no connect	no connect
4	CAN-	2
5	no connect	no connect
6	CAN-	no connect
7	GND	3, 7
8	termination	no connect

4.4.6 Cable-RJ45-02-R

PMD Part #: Cable-RJ45-02-R

Description: Male RJ-45 to male RJ-45 cable

Length: 2.0 meters

Cable: 4P, 24 AWG, UTP, Cat 5e

Wiring: Straight through

4.4.7 TRM-RJ45-02-R

PMD Part #: TRM-RJ45-02-R

Description: RJ45 CANbus terminator
(120 ohm between pins 1 and 2)

4.4.8 Adapt-RJ45T-01.R

PMD Part #: Adapt-RJ45T-01.R

Description: Modular RJ45 splitter

Wiring: See table

Pin	Split Pin 1:	Split Pin 2:
1	1	1
2	2	2
3	3	3
4	4	4
5	5	5
6	6	6
7	7	7
8	8	8

4.4.9 Cable-4505-01-R

PMD Part #: Cable-4505-01.R

Description: 10-pin dual header to RJ45 cable

Length: 5.0 feet

Cable: 4 pair, 24 AWG, Cat 5/5e

Wiring: See table.

J16 Pin	Signal	Connects to:
1	EthernetTx+	1
2	EthernetTx-	2
3	EthernetRx+	3
4	no connect	4
5	no connect	5
6	EthernetRx-	6
7	no connect	7
8	no connect	8
9	no connect	-
10	no connect	-

4.4.10 Cable-4371-01.R

PMD Part #: Cable-4371-01.R

Description: 20-pin to 20-pin connector ribbon cable

Length: 3.0 feet

Cable: 20 wire 0.050" pitch, 28 AWG flat ribbon cable


Wiring: Straight through

4.5 Environmental and Electrical Ratings

Storage temperature:	-40 to +125 degrees C (-40° F to +257° F)
Operating temperature:	0 to +70 degrees C (32° F to +158° F)
Power requirements:	4.8V to 5.25V operating range, 0.8A (no outputs on)
Supply voltage limits:	-0.3V to +7V
Analog (DAC) output range:	-10.0V to +10.0V, ± 3 mA min/axis, short circuit protected
Analog input range:	0 to 3.3V, 1.4 kOhm input impedance
Digital I/O voltage range:	0V to 5V, TTL thresholds, inputs pulled up to 5V through 4.7 kOhm resistors
Digital outputs drive capacity:	DC output source or sink current: ± 50 mA
CAN communications:	2.0B compliant, non-isolated, 1 Mbps
Serial communications:	RS232 signaling or RS485 Full or Half Duplex (data only)
Ethernet communications:	10/100BASE-TX (10/100 Mbps)

4.6 Mechanical Dimensions

Figure 4-5:
Prodigy/CME
mechanical
dimensions

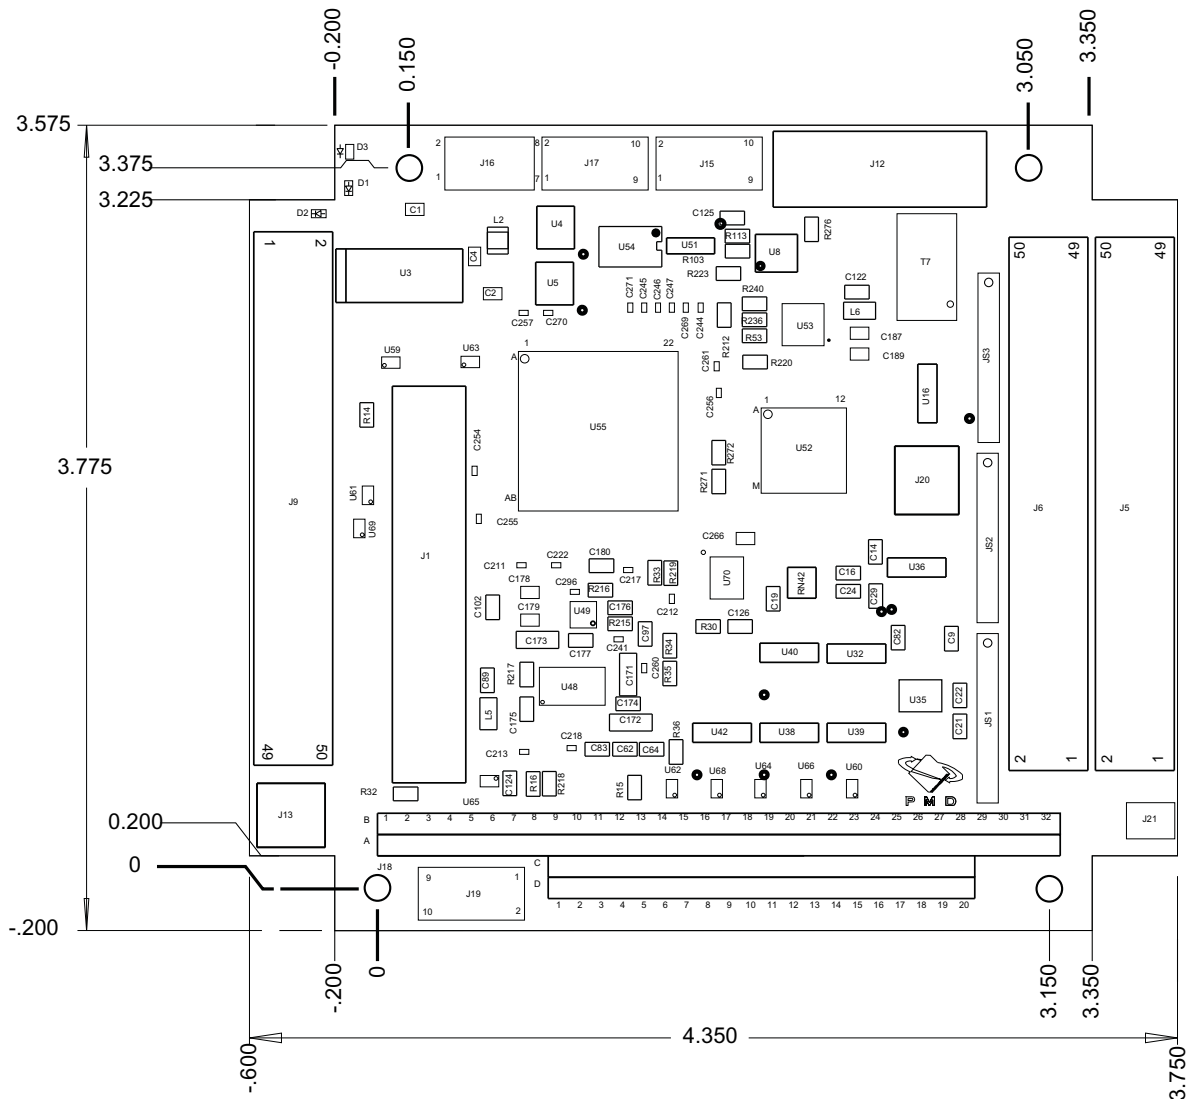

4.7 User I/O Memory Map

The Magellan Motion Processor reserves the sector from address 1000h to 10FFh in peripheral space for user-defined I/O devices. The Prodigy/CME PC/104 card uses this sector as shown in the following table:

Address	Device	Description
1000h	General Purpose I/O	Includes the 8 digital inputs and 8 digital outputs
1001h	Amplifier Enable register	Also includes the DAC output enable for information
1002h	Reset Monitor register	See Section 2.3.6, "Reset Monitor," on page 39.
1003h	Reserved	
1004h	Watchdog register	See Section 2.3.4, "Card Watchdog Timer," on page 39.
1005h	Reserved	
1006h - 100Fh	Reserved	
1010h - 101Fh	DC-1000	Includes the SSI clock, resolution, and absolute position registers

Address	Device	Description
1020h - 10CFh	None	Available for use with custom peripherals over Extension Connector
10D0h - 10DAh	Reserved	
10DBh	Build register	Build number of Prodigy FPGA
10DCh - 10DFh	Reserved	
10E0h - 10EFh	None	Available for use with custom peripherals over Extension Connector
10F0h - 10FDh	Reserved	
10FEh	Model type	For compatibility with older Magellan Motion Card family
10FFh	Card ID	See Section 2.3.7, "Card ID," on page 40.

See the *Magellan Motion Processor User's Guide* for more information on peripheral memory space.

This page intentionally left blank.

5. Interconnect Module


In This Chapter

- ▶ IM-1000 Interconnect Module
- ▶ IM-600 Interconnect Module
- ▶ DC-1000 SSI Option Card

5.1 IM-1000 Interconnect Module

The IM-1000 is an interconnect module which assists in the set up and configuration of Prodigy/CME PC/104 cards, and also provides complete options for external connections. All wiring to and from the Prodigy/CME PC/104 card, the amplifiers, power supplies, IOs and encoder feedback may easily be connected to this central point.

Figure 5-1:
IM-1000
location of
components

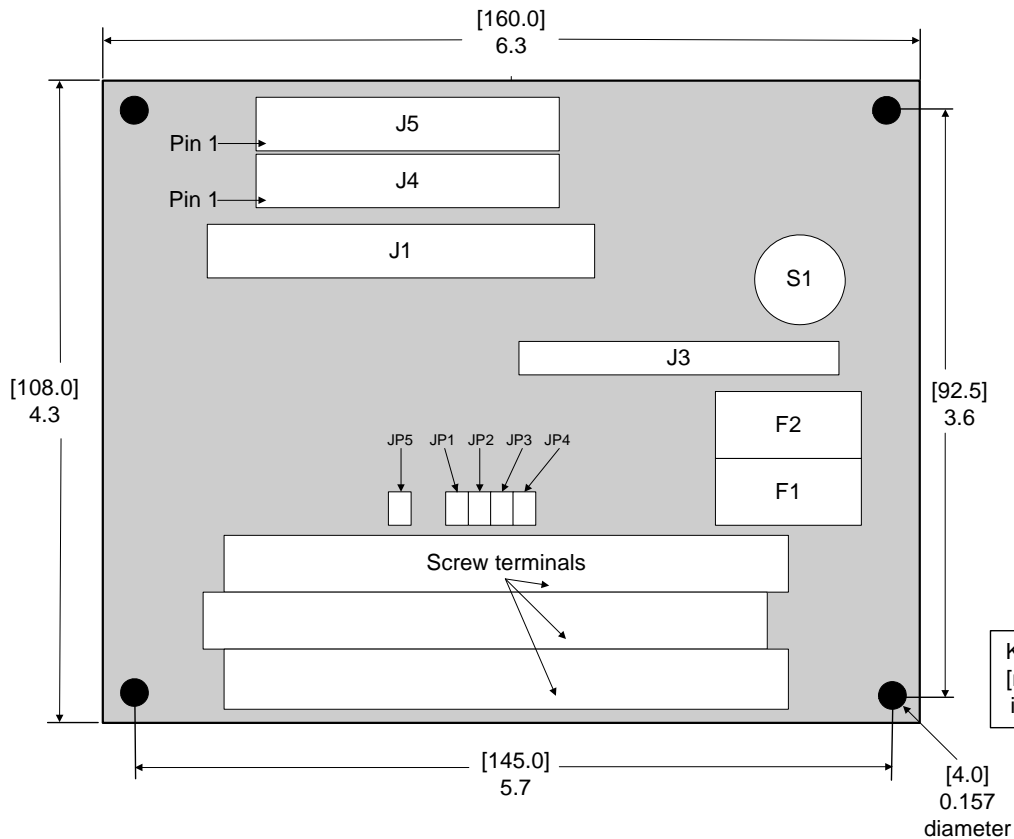

Connector	Description
F1	1 Amp fuse for power supply
F2	1 Amp fuse for power supply

Connector	Description
J1	100-position connector
J3	OPTO22 connector
J4	50-position connector
J5	50-position connector
S1	External hardware reset button
Screw terminals	(3) 100-terminal connection blocks for connecting to one 100-position, or two 50-position cables.

The enclosure of the card is a standard Phoenix DIN rail mounting system. Alternatively, the enclosure may be removed, and the card mounted to other systems via the 3.5 mm mounting holes located on the corners of the card.

The pinout descriptions that follow provide a detailed illustration of the IM-1000's connections. Please observe the differences between the DC brush and brushless DC and stepping motor versions. The screw terminal numbers correspond to the pinout description for Prodigy/CME PC/104 card in the following way:

Prodigy/CME PC/104	IM-1000	Screw Terminal
H1	J4	1-50
H2	J5	51-100

The following table lists the functions of the remaining screw terminals:

Screw Terminals	Function
101, 103	5V from J1 through 1 Amp fuse F2
102, 104, 105	GND
106	External power in
107	GND
108	Unused

The Prodigy/CME PC/104 supplies 5V DC to pins J5-7, J5-25, J6-7, and J6-25 through a 1 Amp fuse to power encoders. When the IM-1000's jumpers JP1, JP2, JP3 and JP4 are installed 1-2, this 5V is passed on to screw terminals 7, 25, 57, and 75, respectively. Alternatively, it is also possible to use an external power supply in the range of 5 - 12 VDC for the encoders. To do this, install jumpers JP1, JP2, JP3 and JP4 on pins 2-3 and connect the external power to screw terminal 106 and its ground to 107. This external power will be limited to 1 Amp by fuse F1.

Connections to J3 (the OPTO22 connector) are as follows:

Prodigy/CME PC/104	IM-1000	Description
J5/J6	J3	
	49	5V if JP5 jumper is installed
J5-36	47	DigitalIn0
J5-37	45	DigitalIn1
J5-38	43	DigitalIn2
J5-39	41	DigitalIn3
J5-36	39	DigitalIn4
J5-37	37	DigitalIn5
J5-38	35	DigitalIn6
J5-39	33	DigitalIn7
J5-41	31	DigitalOut0
J5-42	29	DigitalOut1
J5-43	27	DigitalOut2
J5-44	25	DigitalOut3
J6-41	23	DigitalOut4
J6-42	21	DigitalOut5
J6-43	19	DigitalOut6
J6-44	17	DigitalOut7
J6-40	15	AmpEnable1
J6-45	13	AmpEnable2
J6-40	11	AmpEnable3

Prodigy/CME PC/104 J5/J6	IM-1000 J3	Description
J6-45	09	AmpEnable4
J6-13	07	AxisOut1
J6-30	05	AxisOut2
J6-13	03	AxisOut3
J6-30	01	AxisOut4
	All even-numbered pins	GND

5.2 IM-600 Interconnect Module

The IM-600 is an interconnect module which assists in the set up and configuration of the Option Connector and the Pulse & Direction Connector for all versions of Prodigy cards by providing jack screw 'breakout' functionality, making it easy to hand-connect motion peripherals.

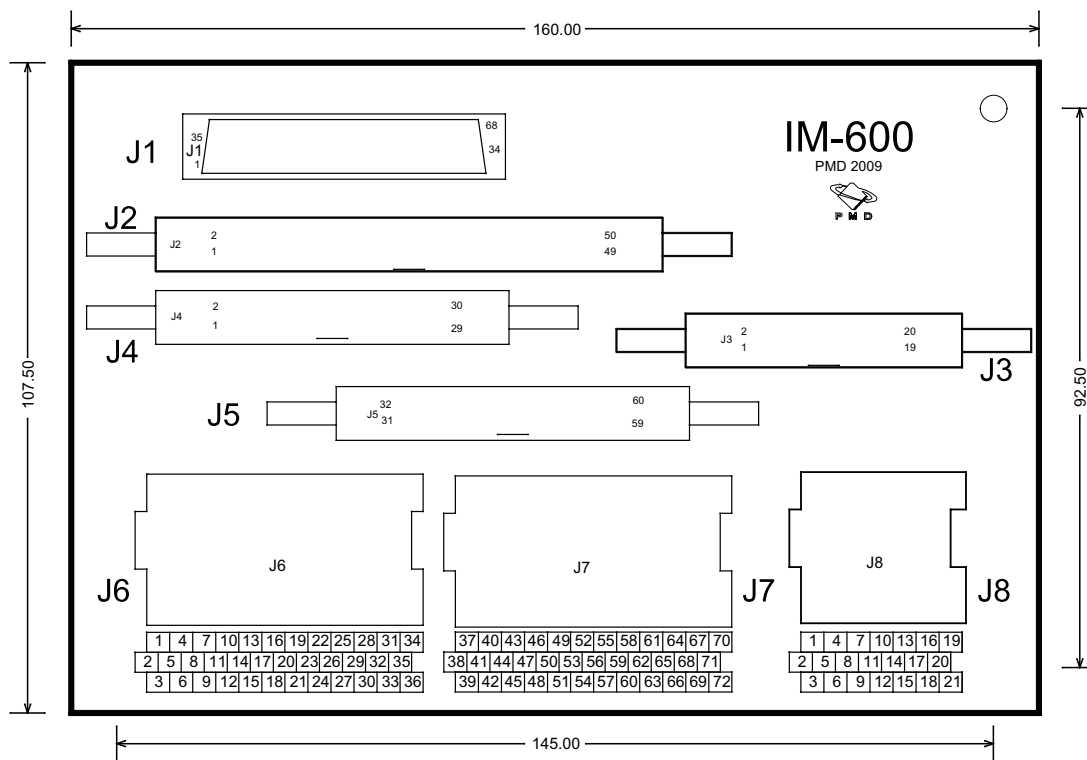


Figure 5-2:
IM-600
location of
components

The following table summarizes the functionality of the various components of the IM-600 module.

Connector	Description
J1	68-pin SCSI-style connector
J2	50-pin dual header connector
J3	20-pin dual header connector
J4 & J5	30-pin dual header connectors
J6/J7	72-pin jack screw array
J8	21-pin Jack screw array

The enclosure of the card is a standard Phoenix DIN rail mounting system. Alternatively, the enclosure may be removed, and the card mounted to other systems via the 3.5 mm mounting holes located on the corners of the card.

The table below illustrates the connections from the PC/104, PCI, and Stand-Alone versions of the Prodigy card's Option Connector and Pulse & Direction Connector, to the IM-600's connectors. In all cases the jack screw pins are

wired 'straight through' from the connector input, so that the documentation for the Prodigy card connectors or cable headers can be conveniently used to determine correct pin placement on the IM-600's jack screw pin connections:

Prodigy Card format	Card Connector & Type	Connect to IM-600 Connector	Screw terminal connections & wiring
PC/104*	J9 - Option Connector	J2	J6/J7 pins 1-50, straight through
	J12 - Pulse & Direction Connector	J3	J8 pins 1-20, straight through
PCI*	J5 - Option Connector	J1	J6/J7 pins 1-68, straight through
Stand-Alone	J5/H1** - Option Connector	J4	J6/J7 pins 1-30, straight through
	J5/H2** - Option Connector	J5	J6/J7 pins 31-60, straight through
	J7 - Pulse & Direction Connector	J3	J8 pins 1-20, straight through

* Both CME and non-CME version Prodigy cards

** J5 Option Connector on the Prodigy/CME Stand-Alone card bifurcates via PMD p/n Cable-7003-01.R into two 30-pin dual headers, labeled Header 1 (H1) and Header 2 (H2)

5.3 DC-1000 SSI Option Card

The DC-1000 is an optional expansion card for the Prodigy/CME PC/104 card. The DC-1000 is a Synchronous Serial Interface (SSI) for absolute encoders, and connects to the Prodigy/CME PC/104 card's Extension Connector J1 (see Figure 4-1 on page 69). The data of the absolute encoders is read through the DC-1000 interface, and is then transmitted to the Prodigy/CME Magellan Motion Processor. Two different encoder data formats are supported, binary and grey code. The following table shows which version of the DC-1000 SSI Option Card should be specified for these different encodings.

Format	Part #
binary	DC-1000B
Grey code	DC-1000G

The DC-1000 can accept connections up to four axes at a read rate of 20 kHz.

Some of the major features of the DC-1000 are as follows:

- Up to four axes can be read
- Resolution can be programmed for 10, 12, 13, or 25 bits
- Compatible with single- and multi-turn absolute encoders
- Programmable frequencies of 1.1 MHz, 550 kHz, 275 kHz, and 137.5 kHz
- Default jumper settings can be overwritten with software commands
- Update rates of 20 kHz for all four axes
- Automatic recognition and addition of position overflow
- Index search not required
- Absolute position is read at power-on
- Incremental and absolute encoders can be mixed in any combination
- Real-time switching between incremental and absolute modes

- Compatible with any absolute encoders which support the Synchronous Serial Interface (SSI), such as Haidenheim, Stegmann, Thalheim, and Renishaw encoders that meet the DC-1000's resolution and clock frequency requirements

Unlike incremental encoders, optical encoders always supply the exact absolute position. At power-on, the encoder will report its exact position. This precludes the need for the machine to locate a machine reference. Absolute encoders are grouped into two categories: single-turn and multi-turn. Encoders with a resolution of up to 360 degrees are single-turn encoders. Those which can resolve several turns (normally up to 4,096) are classified as multi-turn encoders.

The SSI interface requires four data lines, regardless of the encoder's resolution. This is accomplished by converting the parallel data into serial data. Each bit of the parallel data is sent on the data lines +/- synchronously to the +/- clock lines. The clock speed of the DC-1000 is programmable between 1.1 MHz and 137.5 kHz. The clock speed depends on the length of the data cables between encoder and controller.


The DC-1000 receives, converts, and stores the encoder data in registers. This data can then be read by the Prodigy/CME PC/104's Magellan Motion Processor. The DC-1000 can be programmed for encoder resolutions of 10, 12, 13 and 25 bits. The transmission speed may be programmed to accommodate cable lengths of greater than 300 meters, and both single-turn encoders and multi-turn encoders may be employed. The Prodigy/CME PC/104 card will capture the absolute position of single-turn encoders for a full 32 bits. When a roll-over occurs, it will be detected by the card and the correct position will be stored. The direction of motion will also be correctly detected.

5.3.1 DC-1000 Specifications

- Dimensions: 2.75 inches x 2.25 inches
- 40-position mating connector for the Prodigy/CME PC/104 card
- 2 stand-offs with screws for mounting to Prodigy/CME PC/104 card
- Encoder mating connector for 5V DC or 12V DC from PC power supply
- Jumper for selecting 5V or 12V supply voltage for the encoders
- 26-position IDC connector and mating stub IDC ribbon cable
- DIP-switches for setting encoder resolution for each axis
- Four position registers (one for each axis) maintain absolute positions
- All positions may be read by the Prodigy/CME PC/104 card at any time
- Four read and write registers (one for each axis) for programmatically setting resolution and clock speed
- Resolution and clock speed settings can be different for every axis

The following diagram illustrates the location of the DC-1000's main components and connectors. The component side of the card is shown.

Figure 5-3:
DC-1000
location of
components

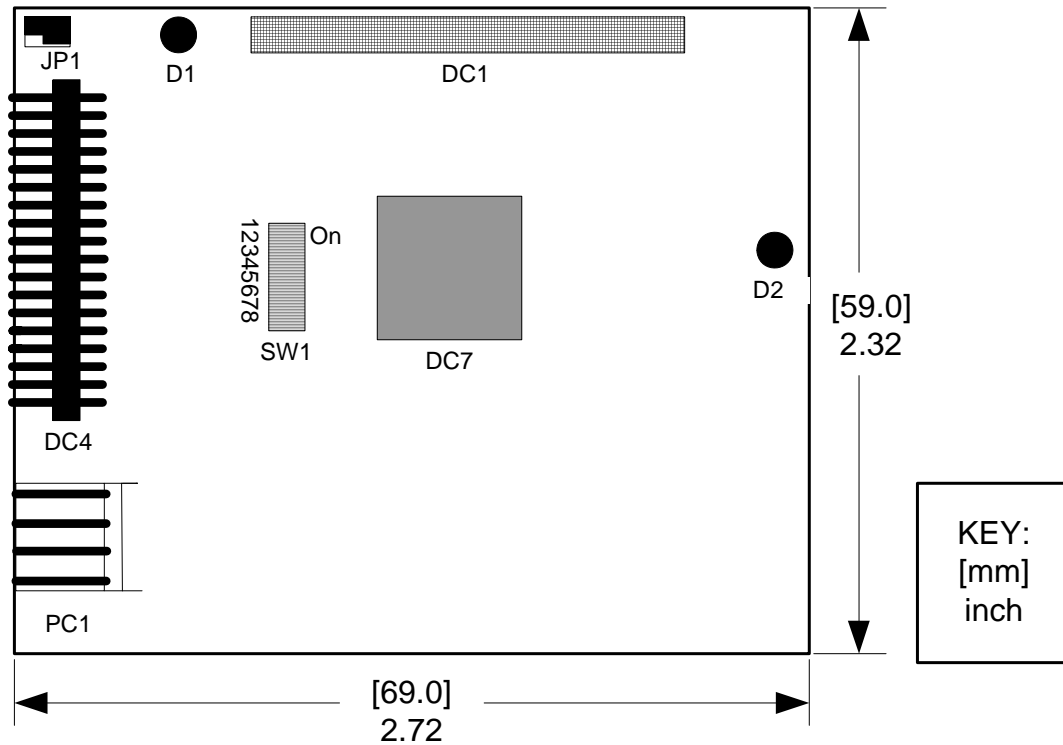

The names and descriptions of the main components of the DC-1000 are detailed in the following table:

Label	Name	Description
DC1	Parallel connector	This socket connects to the parallel input connector of the Prodigy/CME PC/104 card.
D1, D2	Mounting holes	These holes (2) are in direct alignment with the mounting holes on the Prodigy/CME PC/104 card, and are used for the mounting screws and stand-offs.
JP1	Jumper	This jumper selects either 5V or 12V supply voltage. 5V DC is the default setting.
DC4	Encoder connector	The encoders are connected to this pin block.
PC1	Power connector	Use this pin block to connect a small Molex connector for DC power.
SW1	DIP switches	This block of DIP switches is used to set encoder resolution for each axis.
DC7	PLD	This is the processor for the DC-1000.

5.3.2 DC-1000 Connections

The pinouts for connector DC4 are outlined in the following table:

IDC Pin No.	Description	Axis
1	+5 or +12 VDC to Encoder	1
2	Clock 1+	1
3	Clock 1-	1
4	GND	1
5	DIN 1+	1
6	DIN 1-	1
7	+5 or +12 VDC to Encoder	2
8	Clock 2+	2
9	Clock 2-	2
10	GND	2
11	DIN 2+	2
12	DIN 2-	2
13	No connection	
14	No connection	

IDC Pin No.	Description	Axis
15	+5 or +12 VDC to Encoder	3
16	Clock 3+	3
17	Clock 3-	3
18	GND	3
19	DIN 3+	3
20	DIN 3-	3
21	+5 or +12 VDC to Encoder	4
22	Clock 4+	4
23	Clock 4-	4
24	GND	4
25	DIN 4+	4
26	DIN 4-	4

The settings for the jumper (labeled JP1 in Figure 5-3 on page 94) are outlined in the following table:

Pins Jumpered	Setting
1 - 2	12V DC
2 - 3	5V DC (default)

5.3.3 DC-1000 Default Parameters

At power-on or after a reset, the system clock will be set to 1.1 MHz, and the default system resolution will be determined by the settings of the DIP switches. Additional parameters are defined in the following tables:

Switches (0...1)	Resolution
00	10 bits
01	13 bits
10	12 bits
11	25 bits

For the DIP switches, ON = 1; OFF = 0. Default settings are all DIP switches set to OFF (0). The DIP switches are labeled SW1 in Figure 5-3 on page 94.

DIP Switches	Axis
1 - 2	1
3 - 4	2
5 - 6	3
7 - 8	4

These values may be overwritten by software.



5.3.4 Installing the DC-1000

The DC-1000 attaches directly to the Prodigy/CME PC/104 card, with the component sides of both cards facing each other. The DC-1000's parallel input socket DC1 connects to the Prodigy-PC/104 card's Extension Connector J1 (see Figure 4-1 on page 69).

- 1 To mount the DC-1000 to the Prodigy/CME PC/104 card, orient the card as shown in Figure 5-4 on page 96.

- 2 Position the DC-1000's parallel connector socket (DC1) over the Prodigy/CME PC/104 card's Extension Connector. Ensure that the top edge of the mating connectors are aligned. The DC1 connector socket is shorter than the Prodigy/CME PC/104 card's Extension Connector, and when the top edges of both are properly aligned, three sets of pins on the Extension Connector will be visible at the bottom of the DC-1000's connector when viewed from above the cards. Before pressing the DC-1000 into place, view the cards from the front in the same orientation as Figure 5-4 on page 96. Verify that the two sets of mounting holes are in exact alignment.
- 3 When this alignment is correct, press firmly and evenly to seat the pins of the Prodigy/CME PC/104 card's Extension Connector into the sockets of the DC-1000's parallel connector.
- 4 Place the two standoffs between the cards so that they are aligned with the two mounting holes, and insert the mounting screws through the mounting holes and standoffs.
- 5 Once the cards are mated, attach the supplied IDC cable to the encoder connector on the DC-1000. Pin 1 of the connector is located nearest the JP1 jumper, and the cable's connector must be oriented so that the red-striped wire of the IDC cable attaches to pin 1. The red marking on the cable will then be located on the left side of the cards.
- 6 To connect DC power to the DC-1000, attach a small Molex plug from the computer's power supply to the 4-pin white connector on the DC-1000 (labeled PC1 in Figure 5-3 on page 94). These are the small power connectors, which are used to connect a floppy drive. Note that the DC-1000 does not utilize power from the Prodigy card and must be externally powered.

The DC-1000 mounted to the front of the Prodigy/CME PC/104 card is illustrated in the following figure:

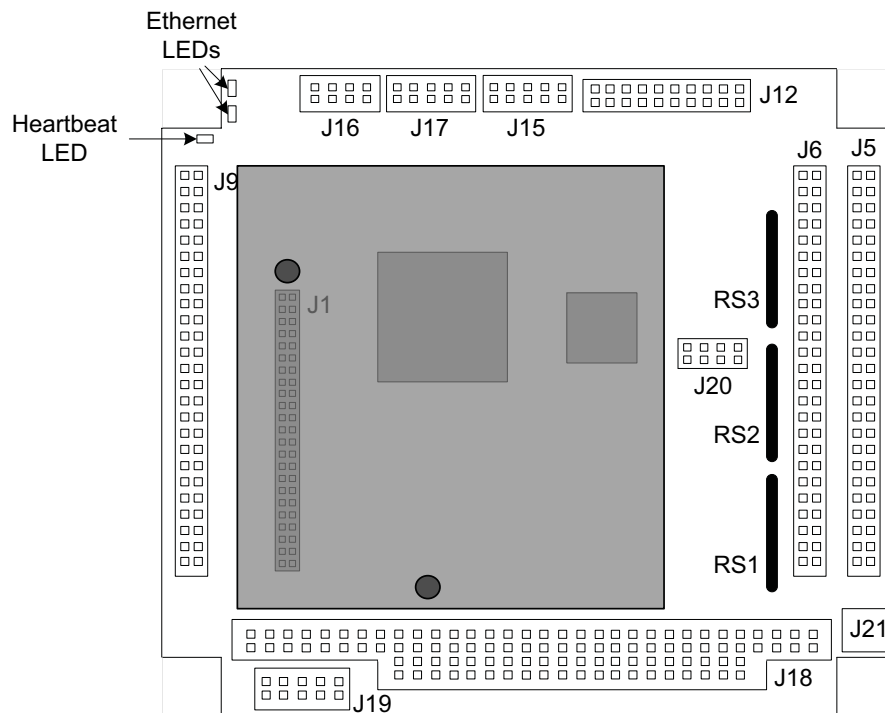


Figure 5-4:
DC-1000
mounted on
Prodigy/CME

5.3.5 DC-1000 Software Commands

The DC-1000 may be operated in mixed-mode. Any or all of the four axes may be configured in any combination of incremental or absolute modes. The following commands are required to configure the absolute encoder mode for the DC-1000.

```
SetEncoderSource Axis n, mode //Sets the mode to 0 = incremental or 1 = absolute for Axis n
```

Setting the mode to absolute (parallel) deactivates the incremental mode and setting to incremental deactivates the absolute (parallel) mode.

```
SetEncoderModulus Axis n, modulus //Sets the modulus (0 to 65535) for Axis n
```

Modulus settings are required for single-turn absolute encoders in order to capture the full position when the encoder exceeds a full turn. The Prodigy/CME PC/104 will accumulate the full 32 bits for the position. The modulus must always be one-half of the encoder's resolution. Assuming an encoder with 12 bits (4,096), the resulting modulus to be programmed would be 2,048.

An additional command may be useful to program the SSI clock and resolution on the DC-1000 in situations where the SSI clock is running at a value other than 1.1Mhz, and if a resolution other than the one set via the DIP switches is being used. The resolution can be set to one of four values; 10 bits, 12 bits, 13 bits or 25 bits, and the frequency can be set to 1.1 MHz (default), 550 kHz, 275 kHz or 137.5 kHz. Each axis can be programmed independently. Here is the command:

```
SetSSIRegister Axis n, resolution, frequency //This function sets the resolution and clock frequency for Axis n
```

See the *Magellan Motion Processor Programmer's Command Reference* for more information.

This page intentionally left blank.

Index

Numerics

100-terminal connection blocks 90
26-position IDC connector 93
40-position mating connector 93
50-position connector 90

A

absolute mode 97
accessing
 communication ports 59
 Magellan-attached devices 64
 on-card resources 63
accessory products 12
actions, PRP 59
Adapt-RJ45T-01.R 84
AmpEnable 20
amplifier
 connections 80
 enable output signals 37
 inputs 80
amplifiers 72
analog
 input 53
 input range 85
 output range 85
applying power 20
automatically assigned addresses 62
AxisIn sensor 52
AxisOut sensor 52

B

brushless DC motor connections 18, 80

C

Cable-2003-01.R 83
Cable-4301-01.R 83
Cable-4355-01.R 83
Cable-4371-01.R 85
Cable-4505-01.R 85
Cable-4701-01.R 84
Cable-RJ45-02-R 84
cables 82
CAN connector 92

CAN serial communication physical layer 77
CANbus packet processing 67
card
 function summary 32
 types 10
C-Motion 11, 14
 engine development environment 11
 engine development environment features 11
 features 11
communication ports, accessing 59
components table, front of board 15
connection summary 17, 80
connector 14, 72
 functions 72
 parts reference 79
 pins 80
controller area network transceivers 77
cycle period 77

D

DAC 80
 out 54
 output enable 38
data cables, length of 93
DC brush motor connections 17, 80
DC-1000
 connections 94
 default parameters 95
 expansion card 92
 installing 95
 specifications 93
differential
 connections 70
 encoder input 70
 encoding 53
 receive capability 77
 transmit capability 77
digital I/O, general purpose 36
digital outputs drive capacity 85
DIP-switches, DC-1000 93

E

- encoder 72
 - connections 70
 - feedback 89
 - inputs 70
 - mating connector 93
 - resolutions 93
 - settings 69
 - signals 70
- environmental and electrical ratings 85
- Ethernet connector 78
- Ethernet packet processing 67
- extension connector 78
- external
 - connections 89
 - hardware reset button 90

F

- first time system verification 21
- front diagram 14

G

- general-purpose
 - digital I/O 36
 - inputs 36
 - outputs 36
- GP connector 72

H

- Hall sensors 76
- Home sensor 52

I

- IM-1000 89
- incremental mode 97
- index capture 34
- Index signal 52
- inputs, general-purpose 36
- installation 14
 - sequence 13
- interconnect module 89
- ISO 11898 standard 77

L

- Limits sensor 52

M

- Magellan instruction set 34
- microstepping

- cards 74
 - motor connections 18, 81
- modulus settings 97
- motion processor reset 39
- motor
 - amplifier output methods 80
 - axis 80
 - output configuration 16
 - output method 80
- multi-phase
 - motor output 76
 - motors 80
- multi-turn encoders 93

N

- negative direction limit input 52
- noise immunity 78

O

- operating temperature 85
- optical encoders 93
- option connector 76
- OPTO22 connector 90
- output
 - phases 80
 - waveform 80
- outputs, general-purpose 36

P

- parallel input connector 78
- PC/104 bus communications 46
- peripheral connections 60
- peripherals 72
- Phoenix DIN rail mounting system 90, 91
- Phoenix EN rail mounting system 90, 91
- PMD Resource Access Protocol 57
- polarity 53
- positive direction limit input 52
- power
 - requirements 85
- power connectors 79
- power up 20
- Prodigy/CME PC/104 connectors 14
- profile generation 32
- Pro-Motion 11, 14
 - features 11
- PRP 57
 - actions 59
 - communication formats 66

- resources 59
- PRP messages
 - CANbus 67
 - Ethernet 67
 - over serial 66
- pulse & direction 53
 - cards 75
- pulse and direction differential output connector 78
- pulse and direction outputs 78
- PW-2001-KIT-01.R 82
- PWM
 - 50/50 80
 - out 54
 - sign-magnitude 80

Q

- QuadA signal 52
- QuadB signal 52

R

- ReadIO command 37
- required hardware 13
- reset
 - condition 20, 39
 - monitor word 40
- resistor pack 14
 - settings 16, 70
- resistor packs 69, 70
- resource
 - addressing 57
 - PRP 59
- Resource Access Protocol 57
- roll-over 93

S

- screw terminal 90
- serial
 - connector 76
- Serial 1 communications 46
- Serial 2 communications 46
- serial packet processing 66
- servo loop closure 32
- shunting 38
- signal conditioning 33
- single-ended
 - connections 53
 - encoder input 71
 - encoders 70
- single-turn encoders 93

- software
 - commands, DC-1000 97
 - libraries 54
 - packages 10
- SSI 78
- step (pulse & direction) motor connections 81
- storage temperature 85
- supply voltage limits 85
- sync I/O 77
 - cable 77
 - connectors 77
 - pinouts 77
- synchronizing multiple boards 77
- Synchronous Serial Interface 78, 92

T

- transmission speed 93
- TRM-RJ45-02-R 84

U

- under-voltage detection circuit 39
- undesired motion 20
- user I/O memory map 86
- user-settable components 69

V

- VB Motion features 12
- VB-Motion 14

W

- watchdog function 39
- WriteIO command 37




This page intentionally left blank.

For additional information, or for technical assistance,
please contact PMD at (978) 266-1210.

You may also e-mail your request to support@pmdcorp.com

Visit our website at <http://www.pmdcorp.com>

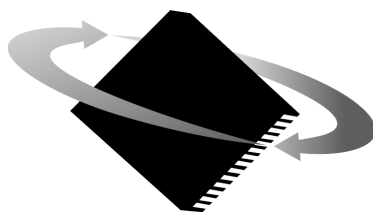

P M D

Performance Motion Devices
80 Central Street
Boxborough, MA 01719